LG
Life's Good

Internal Use Only

North/Latin America http://aic.lgservice.com
Europe/Africa http://eic.lgservice.com
Asia/Oceania http://biz.lgservice.com

LED TV
SERVICE MANUAL

CHASSIS : LD31B/LD36B

MODEL : 47LN54** 47LN54**-Z*

CAUTION
BEFORE SERVICING THE CHASSIS,
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

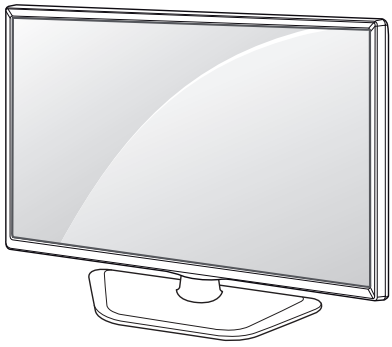

P/NO : MFL67729501 (1301-REV00)

Printed in Korea

CONTENTS

CONTENTS 2

SAFETY PRECAUTIONS 3

SERVICING PRECAUTIONS 4

SPECIFICATION 6

ADJUSTMENT INSTRUCTION 10

BLOCK DIAGRAM 16

EXPLODED VIEW 19

SCHEMATIC CIRCUIT DIAGRAM .....

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

SAFETY PRECAUTIONS

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by ⚠ in the Schematic Diagram and Exploded View.
It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent Shock, Fire, or other Hazards.
Do not modify the original design without permission of manufacturer.

General Guidance

An **isolation Transformer should always be used** during the servicing of a receiver whose chassis is not isolated from the AC power line. Use a transformer of adequate power rating as this protects the technician from accidents resulting in personal injury from electrical shocks.

It will also protect the receiver and it's components from being damaged by accidental shorts of the circuitry that may be inadvertently introduced during the service operation.

If any fuse (or Fusible Resistor) in this TV receiver is blown, replace it with the specified.

When replacing a high wattage resistor (Oxide Metal Film Resistor, over 1 W), keep the resistor 10 mm away from PCB.

Keep wires away from high voltage or high temperature parts.

Before returning the receiver to the customer,

Always perform an **AC leakage current check** on the exposed metallic parts of the cabinet, such as antennas, terminals, etc., to be sure the set is safe to operate without damage of electrical shock.

Leakage Current Cold Check(Antenna Cold Check)
With the instrument AC plug removed from AC source, connect an electrical jumper across the two AC plug prongs. Place the AC switch in the on position, connect one lead of ohm-meter to the AC plug prongs tied together and touch other ohm-meter lead in turn to each exposed metallic parts such as antenna terminals, phone jacks, etc.
If the exposed metallic part has a return path to the chassis, the measured resistance should be between 1 MΩ and 5.2 MΩ.
When the exposed metal has no return path to the chassis the reading must be infinite.
An other abnormality exists that must be corrected before the receiver is returned to the customer.

Leakage Current Hot Check (See below Figure)
Plug the AC cord directly into the AC outlet.

Do not use a line Isolation Transformer during this check.
Connect 1.5 K / 10 watt resistor in parallel with a 0.15 uF capacitor between a known good earth ground (Water Pipe, Conduit, etc.) and the exposed metallic parts.
Measure the AC voltage across the resistor using AC voltmeter with 1000 ohms/volt or more sensitivity.
Reverse plug the AC cord into the AC outlet and repeat AC voltage measurements for each exposed metallic part. Any voltage measured must not exceed 0.75 volt RMS which is corresponds to 0.5 mA.
In case any measurement is out of the limits specified, there is possibility of shock hazard and the set must be checked and repaired before it is returned to the customer.

Leakage Current Hot Check circuit

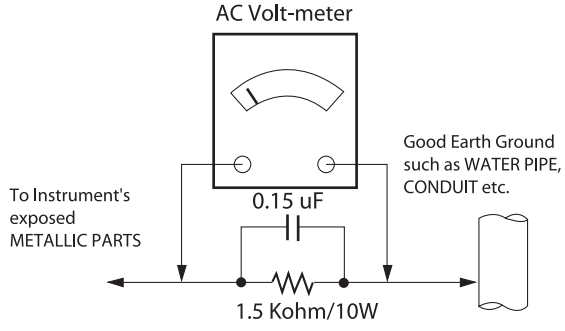

When 25A is impressed between Earth and 2nd Ground for 1 second, Resistance must be less than 0.1 Ω
*Base on Adjustment standard

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

SERVICING PRECAUTIONS

CAUTION: Before servicing receivers covered by this service manual and its supplements and addenda, read and follow the *SAFETY PRECAUTIONS* on page 3 of this publication.
NOTE: If unforeseen circumstances create conflict between the following servicing precautions and any of the safety precautions on page 3 of this publication, always follow the safety precautions. Remember: Safety First.

General Servicing Precautions

1. Always unplug the receiver AC power cord from the AC power source before;
   a. Removing or reinstalling any component, circuit board module or any other receiver assembly.
   b. Disconnecting or reconnecting any receiver electrical plug or other electrical connection.
   c. Connecting a test substitute in parallel with an electrolytic capacitor in the receiver.
   CAUTION: A wrong part substitution or incorrect polarity installation of electrolytic capacitors may result in an explosion hazard.
2. Test high voltage only by measuring it with an appropriate high voltage meter or other voltage measuring device (DVM, FETVOM, etc) equipped with a suitable high voltage probe. Do not test high voltage by "drawing an arc".
3. Do not spray chemicals on or near this receiver or any of its assemblies.
4. Unless specified otherwise in this service manual, clean electrical contacts only by applying the following mixture to the contacts with a pipe cleaner, cotton-tipped stick or comparable non-abrasive applicator; 10 % (by volume) Acetone and 90 % (by volume) isopropyl alcohol (90 % - 99 % strength)
   CAUTION: This is a flammable mixture.
   Unless specified otherwise in this service manual, lubrication of contacts in not required.
5. Do not defeat any plug/socket B+ voltage interlocks with which receivers covered by this service manual might be equipped.
6. Do not apply AC power to this instrument and/or any of its electrical assemblies unless all solid-state device heat sinks are correctly installed.
7. Always connect the test receiver ground lead to the receiver chassis ground before connecting the test receiver positive lead.
   Always remove the test receiver ground lead last.
8. Use with this receiver only the test fixtures specified in this service manual.
   CAUTION: Do not connect the test fixture ground strap to any heat sink in this receiver.

Electrostatically Sensitive (ES) Devices

Some semiconductor (solid-state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field-effect transistors and semiconductor “chip” components. The following techniques should be used to help reduce the incidence of component damage caused by static by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed to prevent potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge buildup or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static type solder removal device. Some solder removal devices not classified as “anti-static” can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charges sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material).
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.
   CAUTION: Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.
8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES device.)

General Soldering Guidelines

1. Use a grounded-tip, low-wattage soldering iron and appropriate tip size and shape that will maintain tip temperature within the range or 500 °F to 600 °F.
2. Use an appropriate gauge of RMA resin-core solder composed of 60 parts tin/40 parts lead.
3. Keep the soldering iron tip clean and well tinned.
4. Thoroughly clean the surfaces to be soldered. Use a mall wire-bristle (0.5 inch, or 1.25 cm) brush with a metal handle. Do not use freon-propelled spray-on cleaners.
5. Use the following unsoldering technique
   a. Allow the soldering iron tip to reach normal temperature. (500 °F to 600 °F)
   b. Heat the component lead until the solder melts.
   c. Quickly draw the melted solder with an anti-static, suction-type solder removal device or with solder braid.
   CAUTION: Work quickly to avoid overheating the circuit board printed foil.
6. Use the following soldering technique.
   a. Allow the soldering iron tip to reach a normal temperature (500 °F to 600 °F)
   b. First, hold the soldering iron tip and solder the strand against the component lead until the solder melts.
   c. Quickly move the soldering iron tip to the junction of the component lead and the printed circuit foil, and hold it there only until the solder flows onto and around both the component lead and the foil.
   CAUTION: Work quickly to avoid overheating the circuit board printed foil.
   d. Closely inspect the solder area and remove any excess or splashed solder with a small wire-bristle brush.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

IC Remove/Replacement
Some chassis circuit boards have slotted holes (oblong) through which the IC leads are inserted and then bent flat against the circuit foil. When holes are the slotted type, the following technique should be used to remove and replace the IC. When working with boards using the familiar round hole, use the standard technique as outlined in paragraphs 5 and 6 above.

Removal
1. Desolder and straighten each IC lead in one operation by gently prying up on the lead with the soldering iron tip as the solder melts.
2. Draw away the melted solder with an anti-static suction-type solder removal device (or with solder braid) before removing the IC.

Replacement
1. Carefully insert the replacement IC in the circuit board.
2. Carefully bend each IC lead against the circuit foil pad and solder it.
3. Clean the soldered areas with a small wire-bristle brush. (It is not necessary to reapply acrylic coating to the areas).

"Small-Signal" Discrete Transistor Removal/Replacement
1. Remove the defective transistor by clipping its leads as close as possible to the component body.
2. Bend into a "U" shape the end of each of three leads remaining on the circuit board.
3. Bend into a "U" shape the replacement transistor leads.
4. Connect the replacement transistor leads to the corresponding leads extending from the circuit board and crimp the "U" with long nose pliers to insure metal to metal contact then solder each connection.

Power Output, Transistor Device
Removal/Replacement
1. Heat and remove all solder from around the transistor leads.
2. Remove the heat sink mounting screw (if so equipped).
3. Carefully remove the transistor from the heat sink of the circuit board.
4. Insert new transistor in the circuit board.
5. Solder each transistor lead, and clip off excess lead.
6. Replace heat sink.

Diode Removal/Replacement
1. Remove defective diode by clipping its leads as close as possible to diode body.
2. Bend the two remaining leads perpendicular y to the circuit board.
3. Observing diode polarity, wrap each lead of the new diode around the corresponding lead on the circuit board.
4. Securely crimp each connection and solder it.
5. Inspect (on the circuit board copper side) the solder joints of the two "original" leads. If they are not shiny, reheat them and if necessary, apply additional solder.

Fuse and Conventional Resistor
Removal/Replacement
1. Clip each fuse or resistor lead at top of the circuit board hollow stake.
2. Securely crimp the leads of replacement component around notch at stake top.
3. Solder the connections.
   CAUTION: Maintain original spacing between the replaced component and adjacent components and the circuit board to prevent excessive component temperatures.

Circuit Board Foil Repair
Excessive heat applied to the copper foil of any printed circuit board will weaken the adhesive that bonds the foil to the circuit board causing the foil to separate from or "lift-off" the board. The following guidelines and procedures should be followed whenever this condition is encountered.

At IC Connections
To repair a defective copper pattern at IC connections use the following procedure to install a jumper wire on the copper pattern side of the circuit board. (Use this technique only on IC connections).

1. Carefully remove the damaged copper pattern with a sharp knife. (Remove only as much copper as absolutely necessary).
2. Carefully scratch away the solder resist and acrylic coating (if used) from the end of the remaining copper pattern.
3. Bend a small "U" in one end of a small gauge jumper wire and carefully crimp it around the IC pin. Solder the IC connection.
4. Route the jumper wire along the path of the out-away copper pattern and let it overlap the previously scraped end of the good copper pattern. Solder the overlapped area and clip off any excess jumper wire.

At Other Connections
Use the following technique to repair the defective copper pattern at connections other than IC Pins. This technique involves the installation of a jumper wire on the component side of the circuit board.

1. Remove the defective copper pattern with a sharp knife. Remove at least 1/4 inch of copper, to ensure that a hazardous condition will not exist if the jumper wire opens.
2. Trace along the copper pattern from both sides of the pattern break and locate the nearest component that is directly connected to the affected copper pattern.
3. Connect insulated 20-gauge jumper wire from the lead of the nearest component on one side of the pattern break to the lead of the nearest component on the other side. Carefully crimp and solder the connections.
   CAUTION: Be sure the insulated jumper wire is dressed so the it does not touch components or sharp edges.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

SPECIFICATION

NOTE : Specifications and others are subject to change without notice for improvement.

1. Application range

This specification is applied to the LED TV used LD31B/ LD36B chassis.

2. Requirement for Test

Each part is tested as below without special appointment.

1) Temperature: 25 °C ± 5 °C(77 °F ± 9 °F), CST: 40 °C ± 5 °C
2) Relative Humidity: 65 % ± 10 %
3) Power Voltage
   : Standard input voltage (AC 100-240 V~, 50/60 Hz)
   * Standard Voltage of each products is marked by models.
4) Specification and performance of each parts are followed each drawing and specification by part number in accordance with BOM.
5) The receiver must be operated for about 5 minutes prior to the adjustment.

3. Test method

1) Performance: LGE TV test method followed
2) Demanded other specification
   - Safety : CE, IEC specification
   - EMC : CE, IEC

4. Model General Specification

No.	Item	Specification	Remarks
1	Market	EU(PAL Market-37Countries)	**DTV & Analog (Total 37 countries)** **DTV (MPEG2/4, DVB-T)** :37 countries UK/Italy/Germany/France/Spain/Sweden/Finland/Netherlands/ Belgium/Luxemburg/ Greece/Denmark/Czech/ Austria /Hungary/Swiss/Croatia/TurkeyNorway/Slovenia/ Poland/Ukraine/Portugal/Ireland/Morocco/Latvia/Estonia/ Lithania/Rumania/Bulgaria/Russia/SlovakiaBosnia/Serbia/ Albania/Kazakhstan/Belarus **DTV (MPEG2/4, DVB-T2): 8 countries** UK/Denmark/Sweden/Finland/Norway/Ireland/Ukraine/ Kazakhstan **DTV (MPEG2/4, DVB-C): 37 countries** UK/Italy/Germany/France/Spain/Sweden/Finland/Netherlands/ Belgium/Luxemburg/ Greece/Denmark/Czech/Austria /Hungary/Swiss/Croatia/TurkeyNorway/Slovenia/Poland /Ukraine/Portugal/Ireland/Morocco/Latvia/Estonia/Lithania/ Rumania/Bulgaria/Russia/SlovakiaBosnia/Serbia/Albania/ Kazakhstan/Belarus **DTV (MPEG2/4,DVB-S): 29 countries** Italy/Germany/France/Spain/Netherlands/ Belgium/Luxemburg/Greece/Czech/Austria /Hungary/Swiss/Croatia/Turkey/ Slovenia/Poland/Portugal/ Morocco/Latvia/Estonia/Lithania/ Rumania/Bulgaria/Russia/Slovakia/Bosnia/Serbia/Albania/ Belarus **Supported satellite : 22 satellites** HISPASAT 1C/1D, ATLANTIC BIRD 2, NILESAT 101/102, ATLANTIC BIRD 3, AMOS 2/3, THOR 5/6, IRIUS 4, EUTELSAT-W3A, EUROBIRD 9A, EUTELSAT-W2A, HOTBIRD 6/8/9, EUTELSAT-SESAT, ASTRA 1L/H/M/ KR, ASTRA 3A/3B, BADR 4/6, ASTRA 2D, EUROBIRD 3, EUTELSAT-W7, HELLASSAT 2, EXPRESS AM1, TURKSAT 2A/3A, INTERSAT10

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

No.	Item	Specification	Remarks
2	Broadcasting system	Analogue TV 1) PAL-BG 2) PAL-DK 3) PAL-I/I' 4) SECAM-BG 5) SECAM-DK 6) SECAM L/L' Digital TV 1) DVB-T/C/T2 Satellite Digital TV 1) DVB-T/C/S/S2	Analogue TV : (RF) VHF: E2 to E12, UHF : E21 to E69 (CATV) S1 to S20, HYPER: S21 to S47 Digital TV : VHF, UHF Satellite TV : VHF, UHF, C-Band, Ku-Band * DVB-T2 (T2 model only support) * DVB-S/S2 (Satellite model only support)
3	Receiving system	Analog : Upper Heterodyne Digital : COFDM, QAM	► DVB-T - Guard Interval(Bitrate_Mbit/s) 1/4, 1/8, 1/16, 1/32 - Modulation : Code Rate QPSK : 1/2, 2/3, 3/4, 5/6, 7/8 16-QAM : 1/2, 2/3, 3/4, 5/6, 7/8 64-QAM : 1/2, 2/3, 3/4, 5/6, 7/8 ► DVB-T2 - Guard Interval(Bitrate_Mbit/s) 1/4, 1/8, 1/16, 1/32, 1/128, 19/128, 19/256, - Modulation : Code Rate QPSK : 1/2, 2/5, 2/3, 3/4, 5/6 16-QAM : 1/2, 2/5, 2/3, 3/4, 5/6 64-QAM : 1/2, 2/5, 2/3, 3/4, 5/6 256-QAM : 1/2, 2/5, 2/3, 3/4, 5/6 ► DVB-C - Symbolrate : 4.0Msymbols/s to 7.2Msymbols/s - Modulation : 16QAM, 64-QAM, 128-QAM and 256-QAM ► DVB-S/S2 - symbolrate DVB-S2 (8PSK / QPSK) : 2 ~ 45Msymbol/s DVB-S (QPSK) : 2 ~ 45Msymbol/s - viterbi DVB-S mode : 1/2, 2/3, 3/4, 5/6, 7/8 DVB-S2 mode : 1/2, 2/3, 3/4, 3/5, 4/5, 5/6, 8/9, 9/10
4	Scart Jack (1EA)	PAL, SECAM	Scart 1 Jack is Full scart and support RF-OUT(analog).
5	Video Input RCA(1EA)	PAL, SECAM, NTSC	4 System : PAL, SECAM, NTSC, PAL60 Common port
6	Component Input (1EA)	Y/Cb/Cr Y/Pb/Pr	Common port
7	HDMI Input (2EA)	HDMI1/2-DTV	Support HDCP
8	Audio Input (1EA)	Component & AV	Component & AV's audio input is used by common port.
9	SDPIF out (1EA)	SPDIF out	
10	Earphone out (1EA)	Antenna, AV1, AV2, Component, HDMI1, HDMI2	LA58 Only
11	USB (1EA)	EMF, DivX HD, For SVC (download)	JPEG, MP3, DivX HD
12	DVB	DVB-T	CI : UK, Finland, Denmark, Norway, Sweden, Russia, Spain, Ireland, Luxemburg, Belgium, Netherland CI+ : France(Canal+), Italy(DGTVi)
		DVB-C	CI : Switzerland, Austria, Slovenia, Hungary, Bulgaria CI+ : Switzerland(UPC,Cablecom), Netherland(Ziggo), Germany(KDG,CWB), Finland(labwise)
		DVB-S	CI + : Germany(Astra HD+)
13	Ethernet (1EA)	DLNA(Wired, DMP only)	LA58 : for DLNA T2 Model (LA58V, LA58U, LN54V, LN54U) : for MHEG

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

5. Video resolutions (2D)

5.1. Component Input (Y, C_B/P_B, C_R/P_R)

No.	Resolution	H-freq(kHz)	V-freq(Hz)	Pixel clock(MHz)	Proposed
1	720*576	15.625	50.00	13.5	SDTV ,DVD 576I
2	720*480	15.73	60.00	13.5135	SDTV ,DVD 480I
3	720*480	15.73	59.94	13.50	SDTV ,DVD 480I
4	720*576	31.25	50.00	27.00	SDTV 576P
5	720*480	31.50	60.00	27.027	SDTV 480P
6	720*480	31.47	59.94	27.00	SDTV 480P
7	1280*720	37.50	50.00	74.25	HDTV 720P
8	1280*720	45.00	60.00	74.25	HDTV 720P
9	1280*720	44.96	59.94	74.176	HDTV 720P
10	1920*1080	28.125	50.00	74.25	HDTV 1080I
11	1920*1080	33.75	60.00	74.25	HDTV 1080I
12	1920*1080	33.72	59.94	74.176	HDTV 1080I
13	1920*1080	56.25	50.00	148.50	HDTV 1080P
14	1920*1080	67.50	60.00	148.50	HDTV 1080P
15	1920*1080	67.432	59.94	148.352	HDTV 1080P
16	1920*1080	27.00	24.00	74.25	HDTV 1080P
17	1920*1080	26.97	23.94	74.176	HDTV 1080P
18	1920*1080	33.75	30.00	74.25	HDTV 1080P
19	1920*1080	33.71	29.97	74.176	HDTV 1080P

5.2. HDMI Input(PC/DTV)

No.	Resolution	H-freq(kHz)	V-freq.(Hz)	Pixel clock(MHz)	Proposed		Remark
PC(DVI)					DDC		
1	640*350	31.468	70.09	25.17	EGA	X	
2	720*400	31.469	70.08	28.32	DOS	O	
3	640*480	31.469	59.94	25.17	VESA(VGA)	O	
4	800*600	37.879	60.31	40.00	VESA(SVGA)	O	
5	1024*768	48.363	60.00	65.00	VESA(XGA)	O	
6	1152*864	54.348	60.053	80.00	VESA	O	
7	1360*768	47.712	60.015	85.50	VESA (WXGA)	O	
8	1280*1024	63.981	60.020	108.0	VESA (SXGA)	O	FHD only
9	1920*1080	67.50	60.00	148.5	HDTV 1080P	O	FHD only
DTV							
1	720*480	31.47	59.94	27.00	SDTV 480P		
2	720*480	31.50	60.00	27.027	SDTV 480P		
3	720*576	31.250	50.00	27.00	SDTV 576P		
4	1280*720	37.50	50.00	74.25	HDTV 720P		
5	1280*720	45.00	60.00	74.25	HDTV 720P		
6	1280*720	44.96	59.94	74.176	HDTV 720P		
7	1920*1080	28.125	50.00	74.25	HDTV 1080I		
8	1920*1080	33.75	60.00	74.25	HDTV 1080I		
9	1920*1080	33.72	59.94	74.176	HDTV 1080I		
10	1920*1080	56.250	50.00	148.50	HDTV 1080P		
11	1920*1080	67.50	60.00	148.50	HDTV 1080P		
12	1920*1080	67.432	59.94	148.352	HDTV 1080P		
13	1920*1080	27.00	24.00	74.25	HDTV 1080P		
14	1920*1080	26.97	23.976	74.176	HDTV 1080P		
15	1920*1080	33.75	30.00	74.25	HDTV 1080P		

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

6. Video resolutions (3D)

6.1. HDMI Input

No.	Resolution	H-freq(kHz)	V-freq(Hz)	Pixel clock(MHz)	Proposed	3D input proposed mode
1.	1920*1080	53.95 / 54	23.98 / 24	148.35/148.5	HDTV 1080P	Frame packing
2.	1280*720	89.9 / 90	59.94/60	148.35/148.5	HDTV 720P	Frame packing
3.	1280*720	75	50	148.5	HDTV 720P	Frame packing
4	1920*1080	67.5	60	148.5	HDTV 1080P	Side by Side(half), Top and bottom
5	1920*1080	56.3	50	148.5	HDTV 1080P	Side by Side(half), Top and bottom
6	1280*720	45	60	74.25	HDTV 720P	Side by Side(half), Top and Bottom
7	1280*720	37.5	50	74.25	HDTV 720P	Side by Side(half), Top and Bottom
8	1920*1080	33.7	60	74.25	HDTV 1080i	Side by Side(half), Top and Bottom
9	1920*1080	28.125	50	74.25	HDTV 1080i	Side by Side(half), Top and Bottom
10	1920*1080	27	24	74.25	HDTV 1080P	Side by Side(half), Top and Bottom
11	1920*1080	33.7	30	89.1	HDTV 1080P	Side by Side(half), Top and Bottom

6.2. RF 3D Input(DTV)

No.	Resolution	H-freq(kHz)	V-freq.(Hz)	Pixel clock(MHz)	Proposed	3D input proposed mode
1.	1280*720	37.500	50	74.25	HDTV 720P	Side by Side, Top & Bottom
2.	1920*1080	28.125	50	74.25	HDTV 1080I	Side by Side, Top & Bottom

6.3. USB Input

No.	Resolution	H-freq(kHz)	V-freq.(Hz)	Pixel clock(MHz)	Proposed	3D input proposed mode
1.	1920*1080	33.75	30.000	74.25	HDTV 1080P	Side by Side, Top & Bottom **support MPO(Photo)

6.4. DLNA Input

No.	Resolution	H-freq(kHz)	V-freq.(Hz)	Pixel clock(MHz)	Proposed	3D input proposed mode
1.	1920*1080	33.75	30	74.25	HDTV 1080p	Side by Side, Top & Bottom

6.5. 3D Input mode

No.	Side by Side	Top & Bottom	Single Frame Sequential	Frame Packing
1				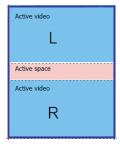

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

ADJUSTMENT INSTRUCTION

1. Application Range

This specification sheet is applied to all of the LED TV with LD31B/ LD36B chassis.

2. Designation

(1) The adjustment is according to the order which is designated and which must be followed, according to the plan which can be changed only on agreeing.
(2) Power adjustment : Free Voltage.
(3) Magnetic Field Condition: Nil.
(4) Input signal Unit: Product Specification Standard.
(5) Reserve after operation : Above 5 Minutes (Heat Run)
Temperature : at 25 °C ± 5 °C
Relative humidity : 65 ± 10 %
Input voltage : 220 V, 60 Hz
(6) Adjustment equipments: Color Analyzer(CA-210 or CA-110), DDC Adjustment Jig, Service remote control.
(7) Push the "IN STOP" key - For memory initialization.

Case1 : Software version up
1. After downloading S/W by USB , TV set will reboot automatically.
2. Push “In-stop” key.
3. Push “Power on” key.
4. Function inspection
5. After function inspection, Push “In-stop” key.

Case2 : Function check at the assembly line
1. When TV set is entering on the assembly line, Push “In-stop” key at first.
2. Push “Power on” key for turning it on.
→ If you push “Power on” key, TV set will recover channel information by itself.
3. After function inspection, Push “In-stop” key.

3. Main PCB check process

▪ APC - After Manual-Insert, executing APC

* Boot file Download

(1) Execute ISP program "Mstar ISP Utility" and then click "Config" tab.
(2) Set as below, and then click "Auto Detect" and check "OK" message.
If "Error" is displayed, check connection between computer, jig, and set.
(3) Click "Read" tab, and then load download file(XXXX.bin) by clicking "Read".

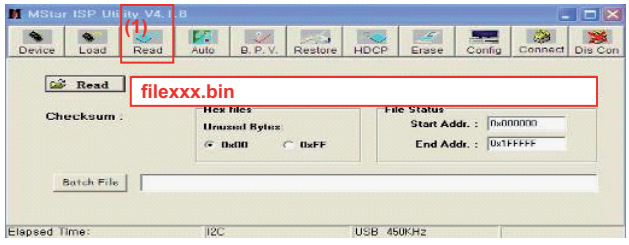

(4) Click "Connect" tab. If "Can't" is displayed, check connection between computer, jig, and set.

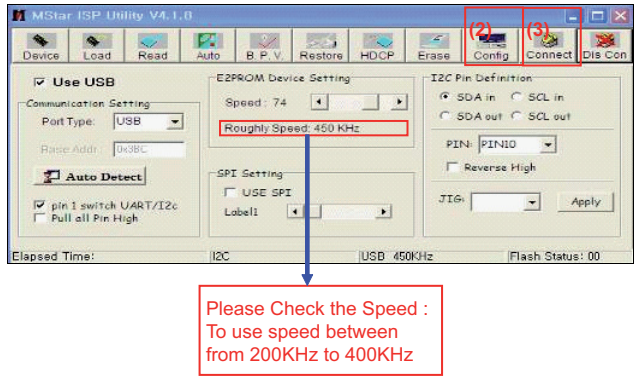

(5) Click "Auto" tab and set as below.
(6) Click "Run".
(7) After downloading, check "OK" message.

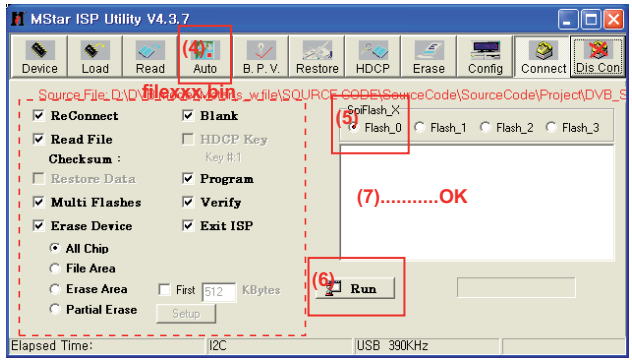

* USB DOWNLOAD

(1) Put the USB Stick to the USB socket.
(2) Automatically detecting update file in USB Stick.
- If your downloaded program version in USB Stick is Low, it didn't work. But your downloaded version is High, USB data is automatically detecting.
(3) Show the message "Copying files from memory".
(4) Updating is starting.

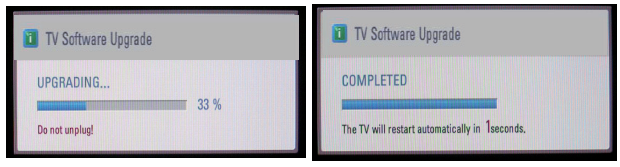

(5) Updating Completed, The TV will restart automatically in 5 seconds.
(6) If your TV is turned on, check your updated version and Tool option. (explain the Tool option, next stage)
* If downloading version is more high than your TV have, TV can lost all channel data. In this case, you have to channel recover. if all channel data is cleared, you didn’t have a DTV/ ATV test on production line.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

* After downloading, have to adjust Tool Option again.
(1) Push "IN-START" key in service remote control.
(2) Select "Tool Option 1" and push "OK" key.
(3) Punch in the number. (Each model has their number)
(4) Completed selecting Tool option.

3.1. ADC Process

* If ADC processes as OTP, There is no need to proceed internal ADC.

- Enter Service Mode by pushing "ADJ" key,
- Enter Internal ADC mode by pushing "►" key at "7. ADC Calibration".

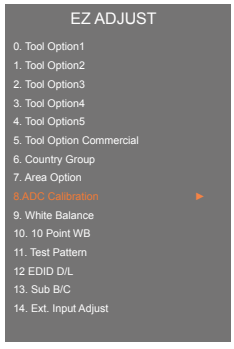

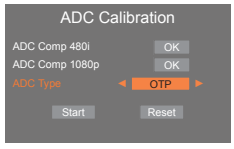

<Caution> Using "power on" key of the Adjustment remote control, power on TV.

* ADC Calibration Protocol (RS232)

NO	Item	CMD 1	CMD 2	Data 0		
Enter Adjust MODE	Adjust 'Mode In'	A	A	0	0	When transfer the 'Mode In', Carry the command.
ADC adjust	ADC Adjust	A	D	1	0	Automatically adjustment (The use of a internal pattern)

Adjust Sequence
- aa 00 00 [Enter Adjust Mode]
- xb 00 40 [Component Input480i)]
- ad 00 10 [Adjust 480i Comp1]
- aa 00 90 End Adjust mode

* Required equipment : Adjustment remote control.

3.2. EDID Download

- After enter Service Mode by pushing "ADJ" key.
- Enter EDID D/L menu.
- Enter "START" by pushing "OK" key.

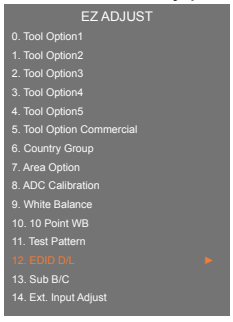

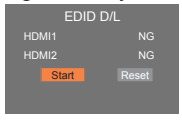

<Caution> Never connect HDMI && D-sub cable when EDID downloaded.

3.3. EDID data

(1) FHD HDMI EDID data(2D Model)

	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
00	00	FF	FF	FF	FF	FF	FF	00	1E	6D	a		b			
10	c		01	03	80	A0	5A	78	0A	EE	91	A3	54	4C	99	26
20	0F	50	54	A1	08	00	31	40	45	40	61	40	71	40	81	80
30	01	01	01	01	01	01	02	3A	80	18	71	38	2D	40	58	2C
40	45	00	A0	5A	00	00	00	1E	66	21	50	B0	51	00	1B	30
50	40	70	36	00	A0	5A	00	00	00	1E	00	00	00	FD	00	3A
60	3E	1E	53	10	00	0A	20	20	20	20	20	20	d			
70	d														01	e
80	02	03	22	F1	4E	10	9F	04	13	05	14	03	02	12	20	21
90	22	15	01	26	15	07	50	09	57	07	f					
A0	f		01	1D	80	18	71	1C	16	20	58	2C	25	00	20	C2
B0	31	00	00	9E	01	1D	00	72	51	D0	1E	20	6E	28	55	00
C0	20	C2	31	00	00	1E	02	3A	80	18	71	38	2D	40	58	2C
D0	45	00	A0	5A	00	00	00	1E	01	1D	00	BC	52	D0	1E	20
E0	B8	28	55	40	C4	8E	21	00	00	1E	00	00	00	00	00	00
F0	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	e

(2) Detail EDID Options are below

a. Product ID

MODEL NAME	HEX	EDID Table	DDC Function
HD/FHD Model	0001	01 00	Analog/Digital

b. Serial No: Controlled on production line.

c. Month, Year: Controlled on production line:
ex) Week : '01' -> '01'
Year : '2013' -> '17' fix

d. Model Name(Hex):
cf) TV set's model name in EDID data is below.

Model name	MODEL NAME(HEX)
LG TV	00 00 00 FC 00 4C 47 20 54 56 0A 20 20 20 20 20 20 20 (LG TV)

e. Checksum: Changeable by total EDID data.

EDID C/S data		FHD(8 Bit)
		HDMI
Check sum (Hex)	Block 0	42
	Block 1	25 (HDMI1)
		15 (HDMI2)

f. Vendor Specific(HDMI)

Input	Model name(HEX)
HDMI1	67030C001000801E
HDMI2	67030C002000801E

3.4 Function Check

- Check display and sound

■ Check Input and Signal items.
1) TV
2) AV (SCART / CVBS)
3) COMPONENT (480i)
4) HDMI
* Display and Sound check is executed by Remote control.

<Caution>
Not to push the INSTOP key after completion if the function inspection.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

4. Total Assembly line process

4.1. White Balance adjustment

- W/B Equipment condition
  CA210 : LED -> CH14, Test signal: Inner pattern(80IRE)
- Above 5 minutes H/run in the inner pattern. (“power on” key of adjust remote control)
- If it is executed W/B adjustment in 2~3 minutes H/run, it is adjusted by Target data.
  (For OS LED / Direct LED module)

Mode	Temp	Coordinate spec	Target
Cool	13,000 K	X=0.269 (±0.002) Y=0.273 (±0.002)	X=0.271 Y=0.276
Medium	9,300 K	X=0.285 (±0.002) Y=0.293 (±0.002)	X=0.287 Y=0.296
Warm	6,500 K	X=0.313 (±0.002) Y=0.329 (±0.002)	X=0.315 Y=0.332

- Normal line

NetCase4	Aging time (Min)	Cool		Medium		Warm	
		X	y	x	y	x	y
		269	273	285	293	313	329
1	0-2	280	287	296	307	320	337
2	3-5	279	285	295	305	319	335
3	6-9	277	284	293	304	317	334
4	10-19	276	283	292	303	316	333
5	20-35	274	280	290	300	314	330
6	36-49	272	277	288	297	312	327
7	50-79	271	275	287	295	311	325
8	80-119	270	274	286	294	310	324
9	Over 120	269	273	285	293	309	323

* Aging chamber

NetCase4	Aging time (Min)	Cool		Medium		Warm	
		X	y	x	y	x	y
		269	273	285	293	313	329
1	0-2	276	282	292	302	316	332
2	3-5	274	280	290	300	314	330
3	6-9	273	278	289	298	313	328
4	10-19	272	276	288	296	312	326
5	20-35	271	274	287	294	311	324
6	36-49	270	272	286	292	310	322
7	50-79	266	269	282	289	306	319
8	80-119	264	267	280	287	304	317
9	Over 120	263	266	279	286	303	316

* Connecting picture of the measuring instrument
  (On Automatic control)
  Inside PATTERN is used when W/B is controlled. Connect to auto controller or push Adjustment R/C POWER ON → Enter the mode of White-Balance, the pattern will come out.

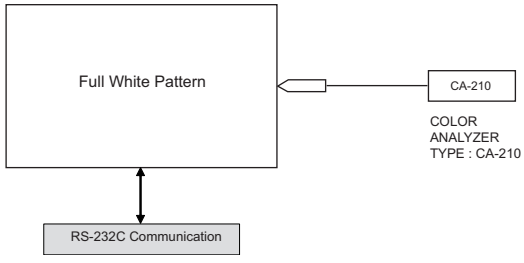

*** Auto-control interface and directions**

(1) Adjust in the place where the influx of light like floodlight around is blocked. (illumination is less than 10 lux).
(2) Adhere closely the Color analyzer(CA210) to the module less than 10 cm distance, keep it with the surface of the Module and Color analyzer's prove vertically.(80° ~ 100°).
(3) Aging time
- After aging start, keep the power on (no suspension of power supply) and heat-run over 5 minutes.
- Using 'no signal' or 'POWER ONLY' or the others, check the back light on.

- Auto adjustment Map(using RS-232C to USB cable)
  RS-232C COMMAND
  [CMD ID DATA]
  Wb 00 00 White Balance Start
  Wb 00 ff White Balance End

	RS-232C COMMAND [CMD ID DATA]			MIN	CENTER (DEFAULT)			MAX
	Cool	Mid	Warm		Cool	Mid	Warm	
R Gain	jg	Ja	jd	00	172	192	192	192
G Gain	jh	Jb	je	00	172	192	192	192
B Gain	ji	Jc	jf	00	192	192	172	192
R Cut					64	64	64	128
G Cut					64	64	64	128
B Cut					64	64	64	128

<Caution>
Color Temperature : COOL, Medium, Warm.
One of R Gain/G Gain/ B Gain should be kept on 0xC0, and adjust other two lower than C0.(When R/G/B Gain are all C0, it is the FULL Dynamic Range of Module)

*** Manual W/B process using adjust Remote control.**

- After enter Service Mode by pushing "ADJ" key,
- Enter White Balance by pushing "▶" key at "8. White Balance".

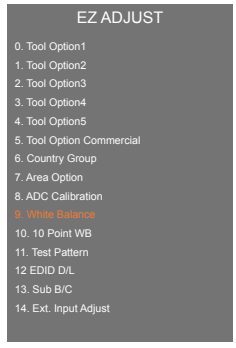

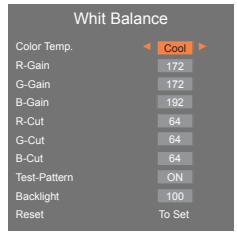

* CASE Cool Mode
  First adjust the coordinate far away from the target value(x, y).B.
  1) x, y > target
  2) x, y < target
  3) x >target, y < target
  4) x < target, y > target
  - Every 4 case have to fit y value by adjusting B Gain and then fit x value by adjusting R-Gain.
  - In this case, increasing/decreasing of B Gain and R Gain can be adjusted.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

How to adjust
1) In case G gain more than 172
Adjust R Gain and B Gain less than 192
2) if the G gain value be adjusted down to 172
G gain increase to 172 and R gain / B gain increase same as G gain increases.
3) if R Gain / B Gain is more than 255 , the G gain adjust to less than 172.

* CASE Medium / Warm
First adjust the coordinate far away from the target value(x, y).
1) x, y > target
i) Decrease the R, G.
2) x, y < target
i) First decrease the B gain,
ii) Decrease the one of the others.
3) x > target, y < target
i) First decrease B, so make y a little more than the target.
ii) Adjust x value by decreasing the R
4) x < target, y > target
i) First decrease B, so make x a little more than the target.
ii) Adjust x value by decreasing the G

* After you finished all adjustments, Press "In-start" key and compare Tool option and Area option value with its BOM, if it is correctly same then unplug the AC cable. If it is not same, then correct it same with BOM and unplug AC cable. For correct it to the model's module from factory Jig model.
* Push the "IN STOP" key after completing the function inspection. And Mechanical Power Switch must be set “ON”.

4.2. 3D function test

(Pattern Generator MSHG-600, MSPG-6100[Support HDMI1.4])
* HDMI mode NO. 872 , pattern No.83
(1) Please input 3D test pattern like below.

(2) When 3D OSD appear automatically , then select OK key.

(3) Don't wear a 3D Glasses, Check the picture like below.

4.3. IR emitter inspection

(1) Start 3D pattern inspection.
(2) If IR emitter signal is correctly received to IR receiver, the lamp of IR tester turns on.

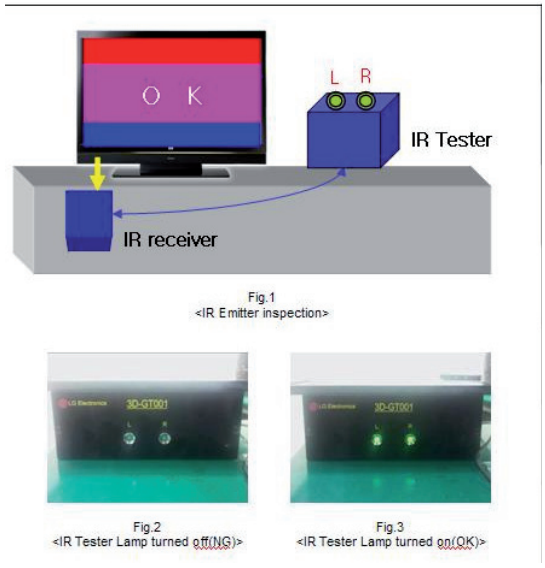

Fig.1
<IR Emitter inspection>

Fig.2
<IR Tester Lamp turned off(NG)>

Fig.3
<IR Tester Lamp turned on(OK)>

4.4. MHL Test

(1) Turn on TV
(2) Select HDMI2 mode using input Menu.
(3) Set MHL Zig(M1S0D3617) using MHL input, output and power cord.
(4) Connect HDMI cable between MHL Zig and HDMI4 port.

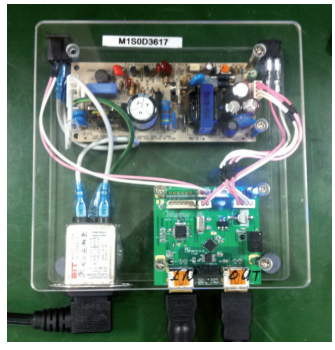

Result) If, The LED light is green and the Module shows normal stream → OK, Else → NG

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

4.5. Outgoing condition Configuration

■ When pressing IN-STOP key by SVC remocon, Red LED are blinked alternatively. And then automatically turn off. (Must not AC power OFF during blinking)

5. HI-POT Test

5.1. HI-POT auto-check preparation

- Check the POWER cable and SIGNAL cable insertion condition

5.2. HI-POT auto-check

(1) Pallet moves in the station. (POWER CORD / AV CORD is tightly inserted)
(2) Connect the AV JACK Tester.
(3) Controller (GWS103-4) on.
(4) HI-POT test (Auto)
- If Test is failed, Buzzer operates.
- If Test is passed, GOOD Lamp on and move to next process automatically.

5.3. Checkpoint

(1) Test voltage
- Touchable Metal : 3 KV / min at 100 mA
- SIGNAL : 3KV / min at 100 mA

(2) TEST time: 1 second. (case : mass production)
(3) TEST POINT
- Touchable Metal => LIVE & NEUTRAL : Touchable Metal.
- SIGNAL => LIVE & NEUTRAL : SIGNAL.

6. Model name & Serial number D/L

▪ Press "Power on" key of service remote control. (Baud rate : 115200 bps)
▪ Connect RS232 Signal Cable to RS-232 Jack.
▪ Write Serial number
▪ Must check the serial number at the Diagnostics of SET UP menu. (Refer to below).

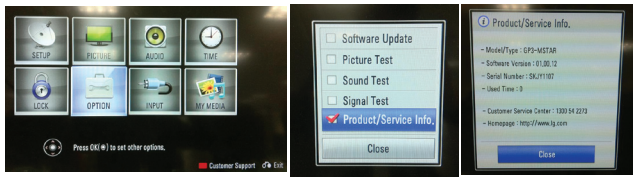

6.1. Signal Table

CMD	LENGTH	ADH	ADL	DATA_1	. . .	Data_n	CS	DELAY

CMD : A0h
LENGTH : 85~94h (1~16 bytes)
ADH : EEPROM Sub Address high (00~1F)
ADL : EEPROM Sub Address low (00~FF)
Data : Write data
CS : CMD + LENGTH + ADH + ADL + Data_1 +...+ Data_n
Delay : 20ms

6.2. Command Set

Adjust mode	CMD(hex)	LENGTH(hex)	Description
EEPROM WRITE	A0h	84h+n	n-bytes Write (n = 1~16)

* Description
FOS Default write : <7mode data> write
Vtotal, V_Frequency, Sync_Polarity, Htotal, Hstart, Vstart, 0, Phase
Data write : Model Name and Serial Number write in EEPROM,.

6.3. Method & notice

(1) Serial number D/L is using of scan equipment.
(2) Setting of scan equipment operated by Manufacturing Technology Group.
(3) Serial number D/L must be conformed when it is produced in production line, because serial number D/L is mandatory by D-book 4.0.

* Manual Download(Model Name and Serial Number)
If the TV set is downloaded by OTA or Service man, sometimes model name or serial number is initialized.(Not always)
There is impossible to download by bar code scan, so It need Manual download.
1) Press the "Instart" key of Adjustment remote control.
2) Go to the menu "6.Model Number D/L" like below photo.
3) Input the Factory model name or Serial number like photo.

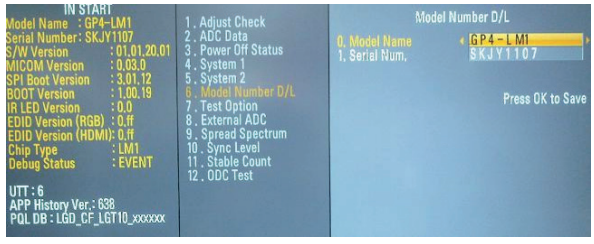

4) Check the model name Instart menu. → Factory name displayed. ex 32LV3400-ZG)
5) Check the Diagnostics.(DTV country only) → Buyer model displayed.(ex 32LV3400-ZG)

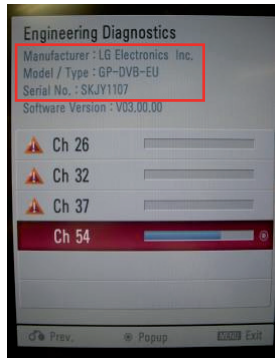

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

7. MAC Address & CI+ key download

7.1 MAC Address

7.1.1 Equipment & Condition

- Play file : Serial.exe
- MAC Address edit
- Input Start / End MAC address

7.1.2 Download method

(1) Communication Prot connection

Connection : PCBA (USB Port) → USB to Serial Adapter (UC-232A) → RS-232C cable → PC(RS-232C port)

* Caution : LJ21* chassis support only UC-232A driver. (only use this one.)

(2) MAC Address & CI+ Key Download

- Set CI+ Key path Directory at Start Mac & CI+ Download Programme
- Com 1,2,3,4 and 115200(Baudrate)

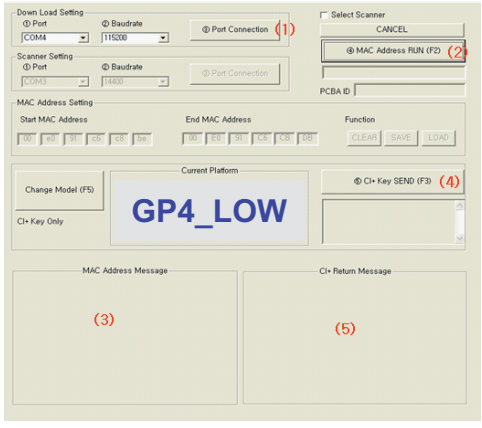

- Port connection button click(1)
- Push the (2) MAC Address write.
- At success Download, check the OK (3)
- Start CI+ Key Download, Push the (4)
- Check the OK or NG

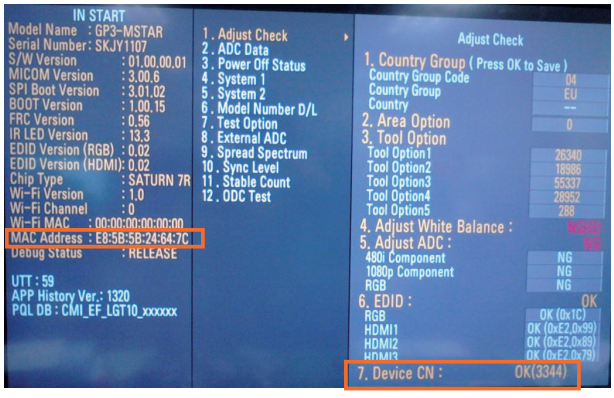

7.2 LAN Inspection

7.2.1. Equipment & Condition

- Each other connection to LAN Port of IP Hub and Jig

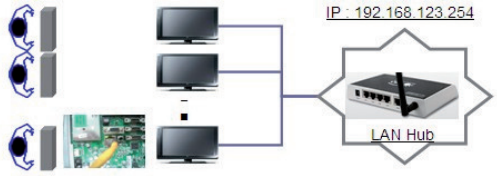

7.2.2. LAN inspection solution

- LAN Port connection with PCB
- Network setting at MENU Mode of TV
- Setting automatic IP
- Setting state confirmation

  -> If automatic setting is finished, you confirm IP and MAC Address.

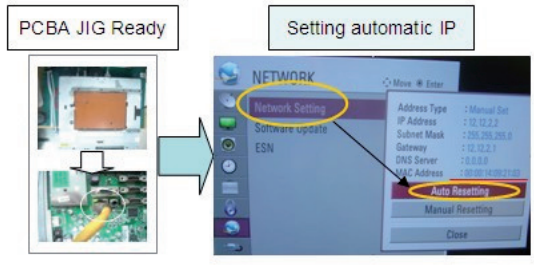

7.3. LAN PORT INSPECTION(PING TEST)

Connect SET -> LAN port == PC -> LAN Port

7.3.1. Equipment setting

(1) Play the LAN Port Test PROGRAM.

(2) Input IP set up for an inspection to Test Program.

*IP Number : 12.12.2.2

7.3.2. LAN PORT inspection (PING TEST)

(1) Play the LAN Port Test Program.

(2) Connect each other LAN Port Jack.

(3) Play Test (F9) button and confirm OK Message.

(4) Remove LAN cable.

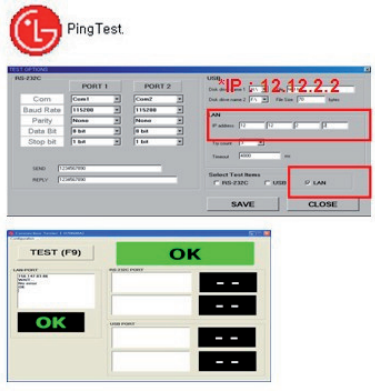

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

BLOCK DIAGRAM

1. [LD31B] DVB-T/C/S2(2D/3D)

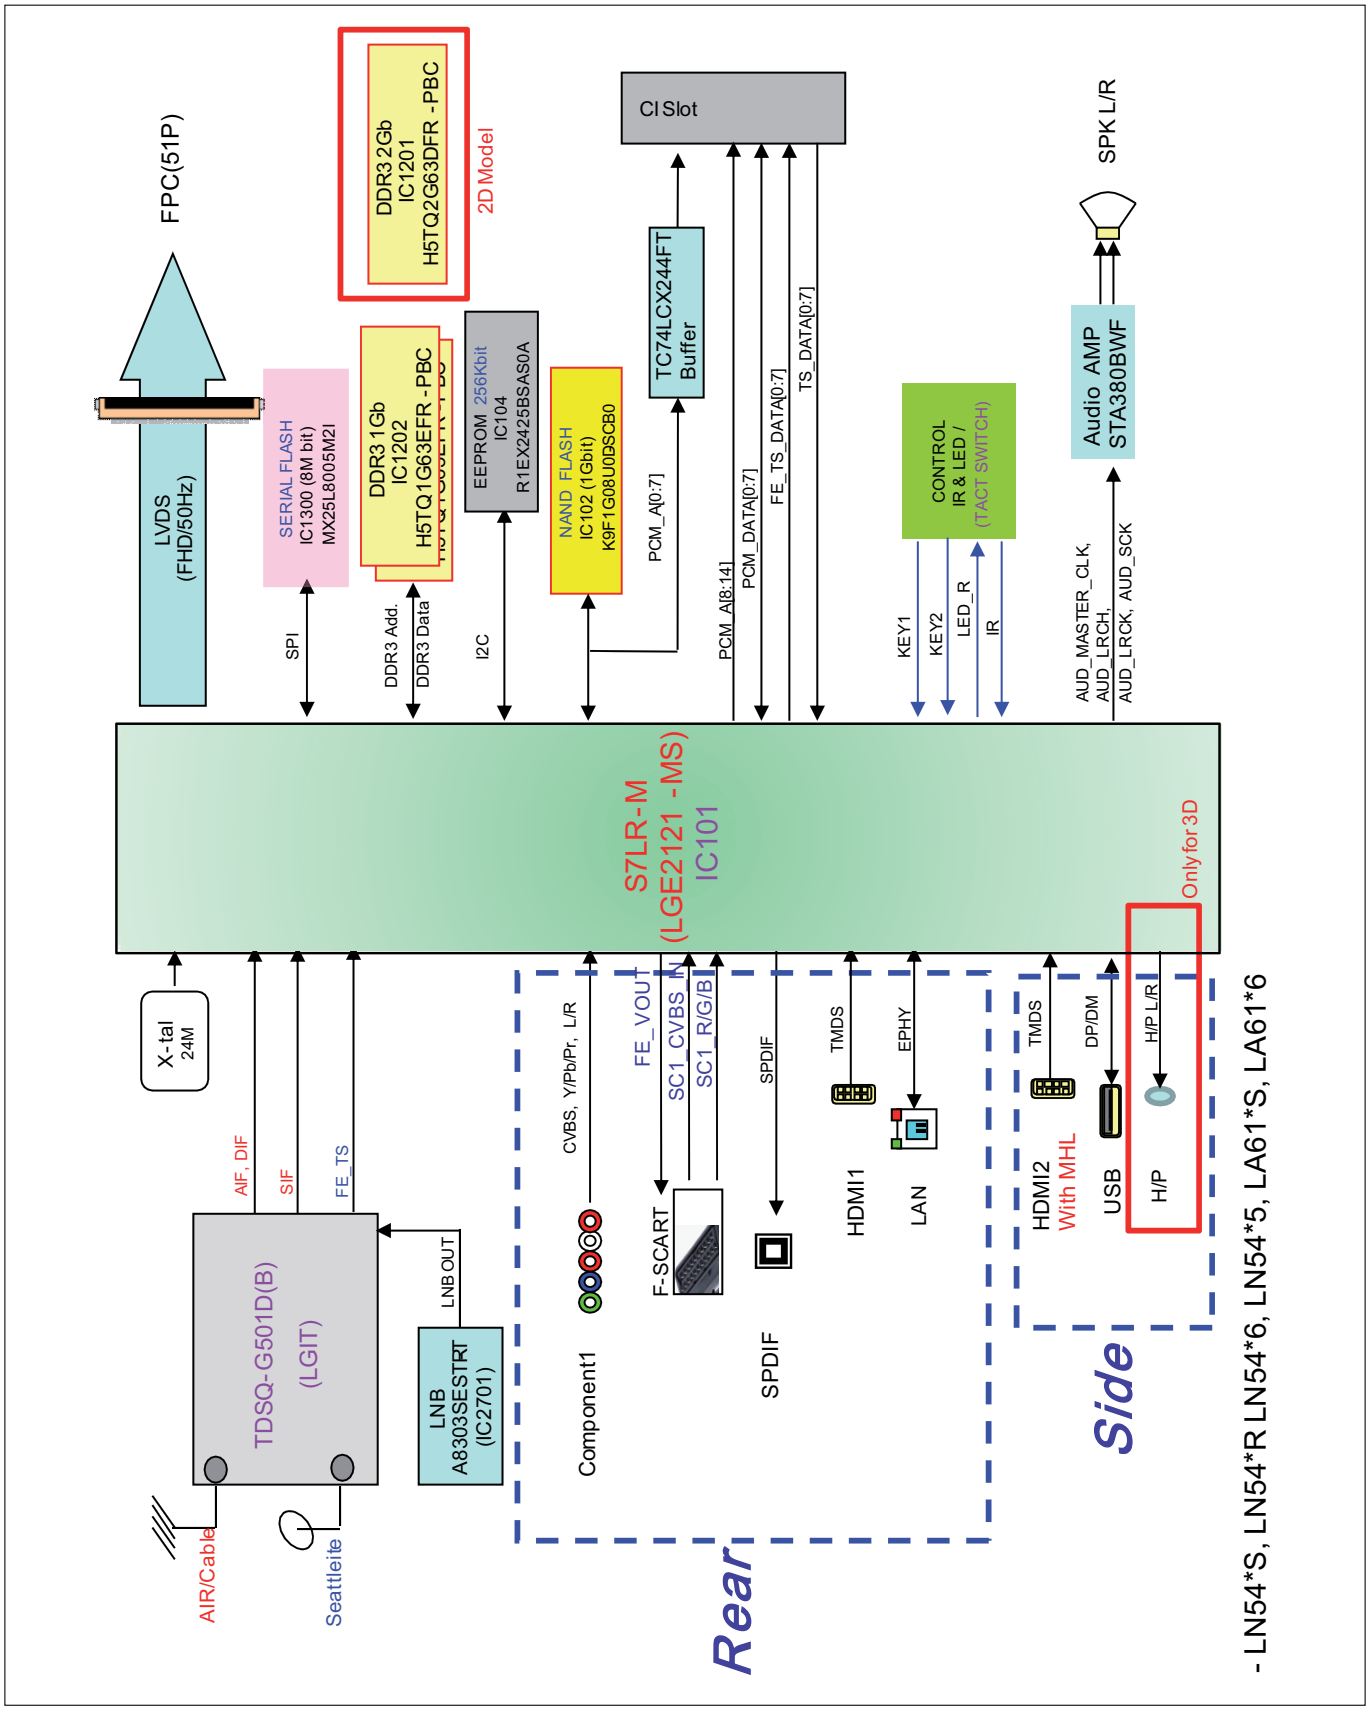

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

2. [LD31B] DVB-T2/C/S2(2D_3D)

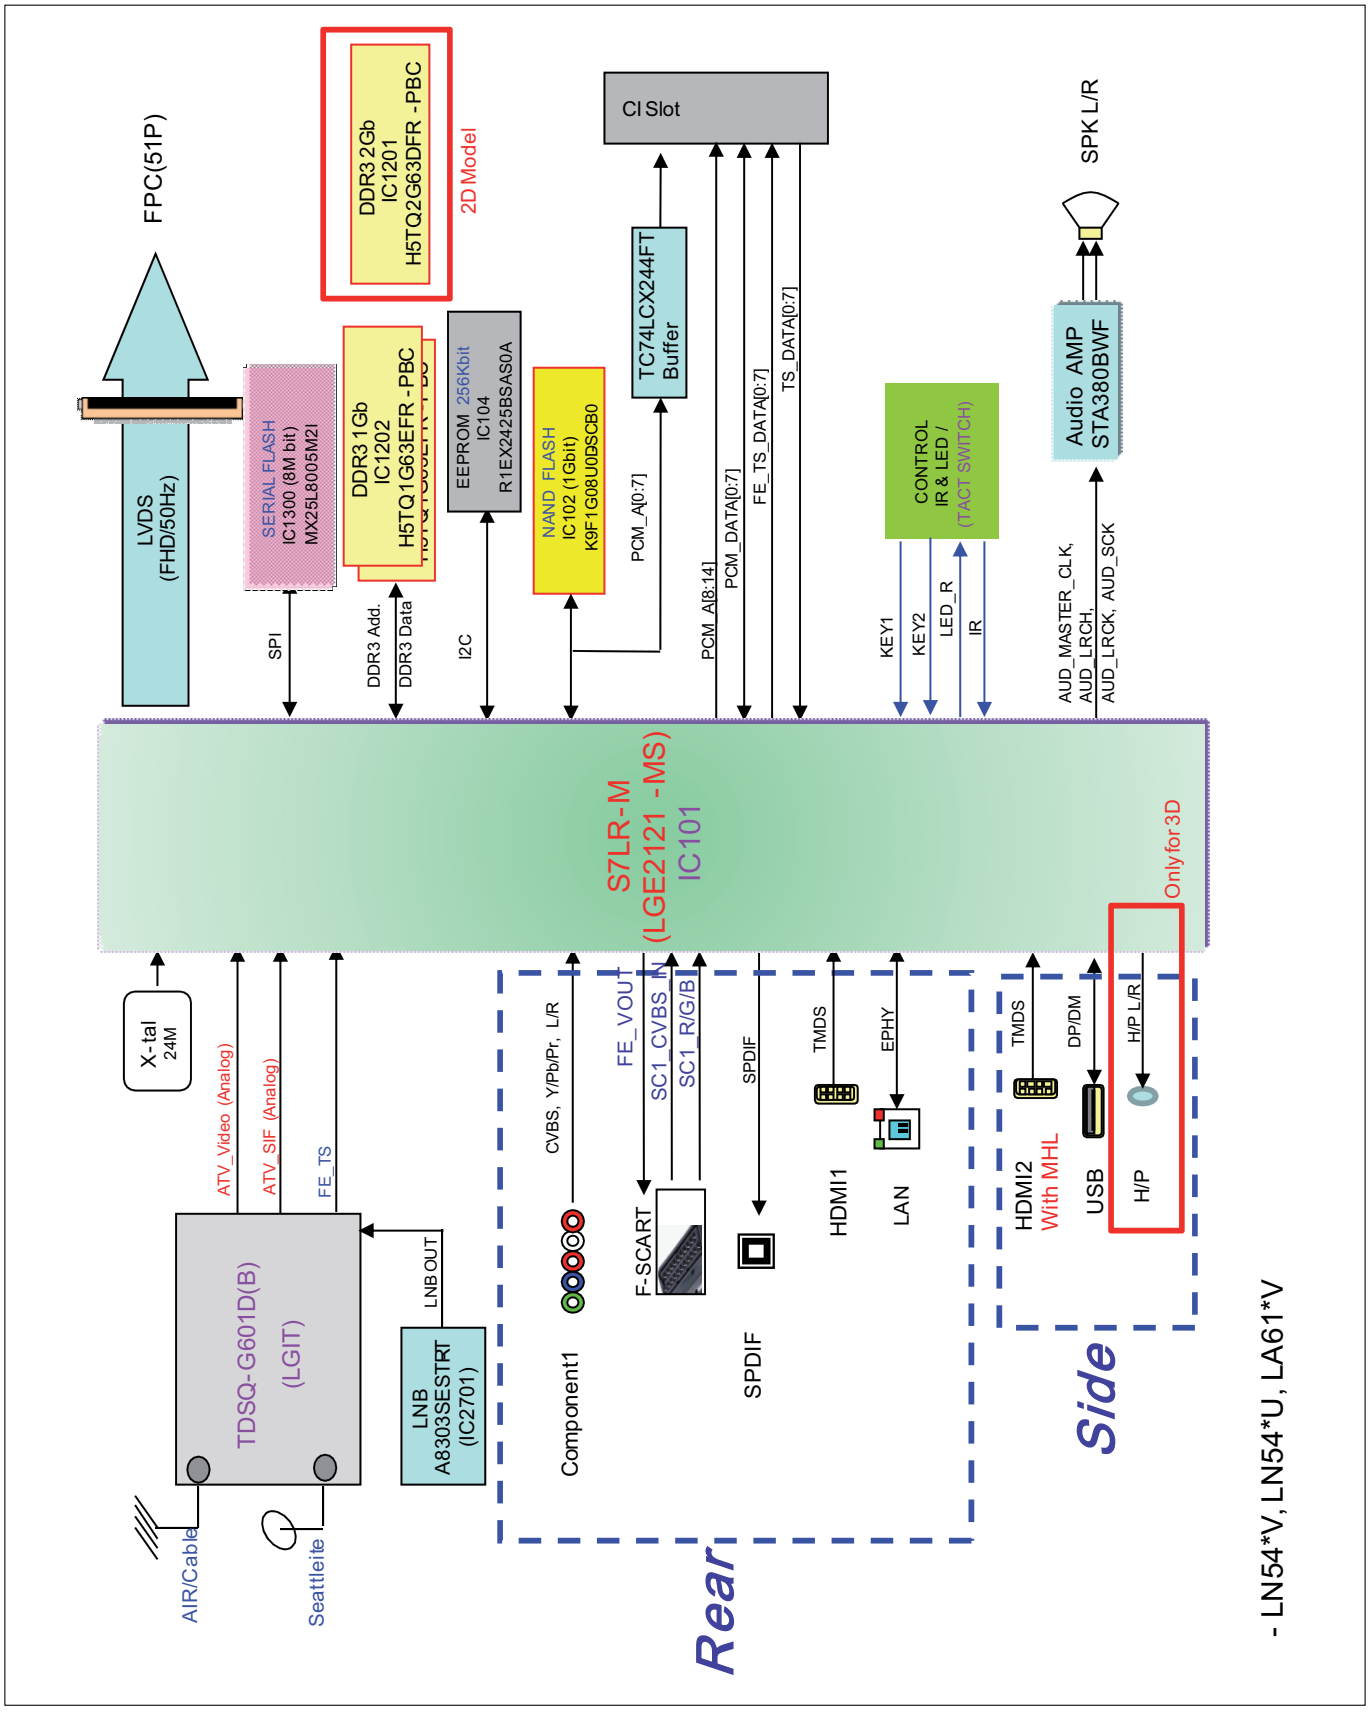

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

3. [LD36B] DVB-T/C(2D)

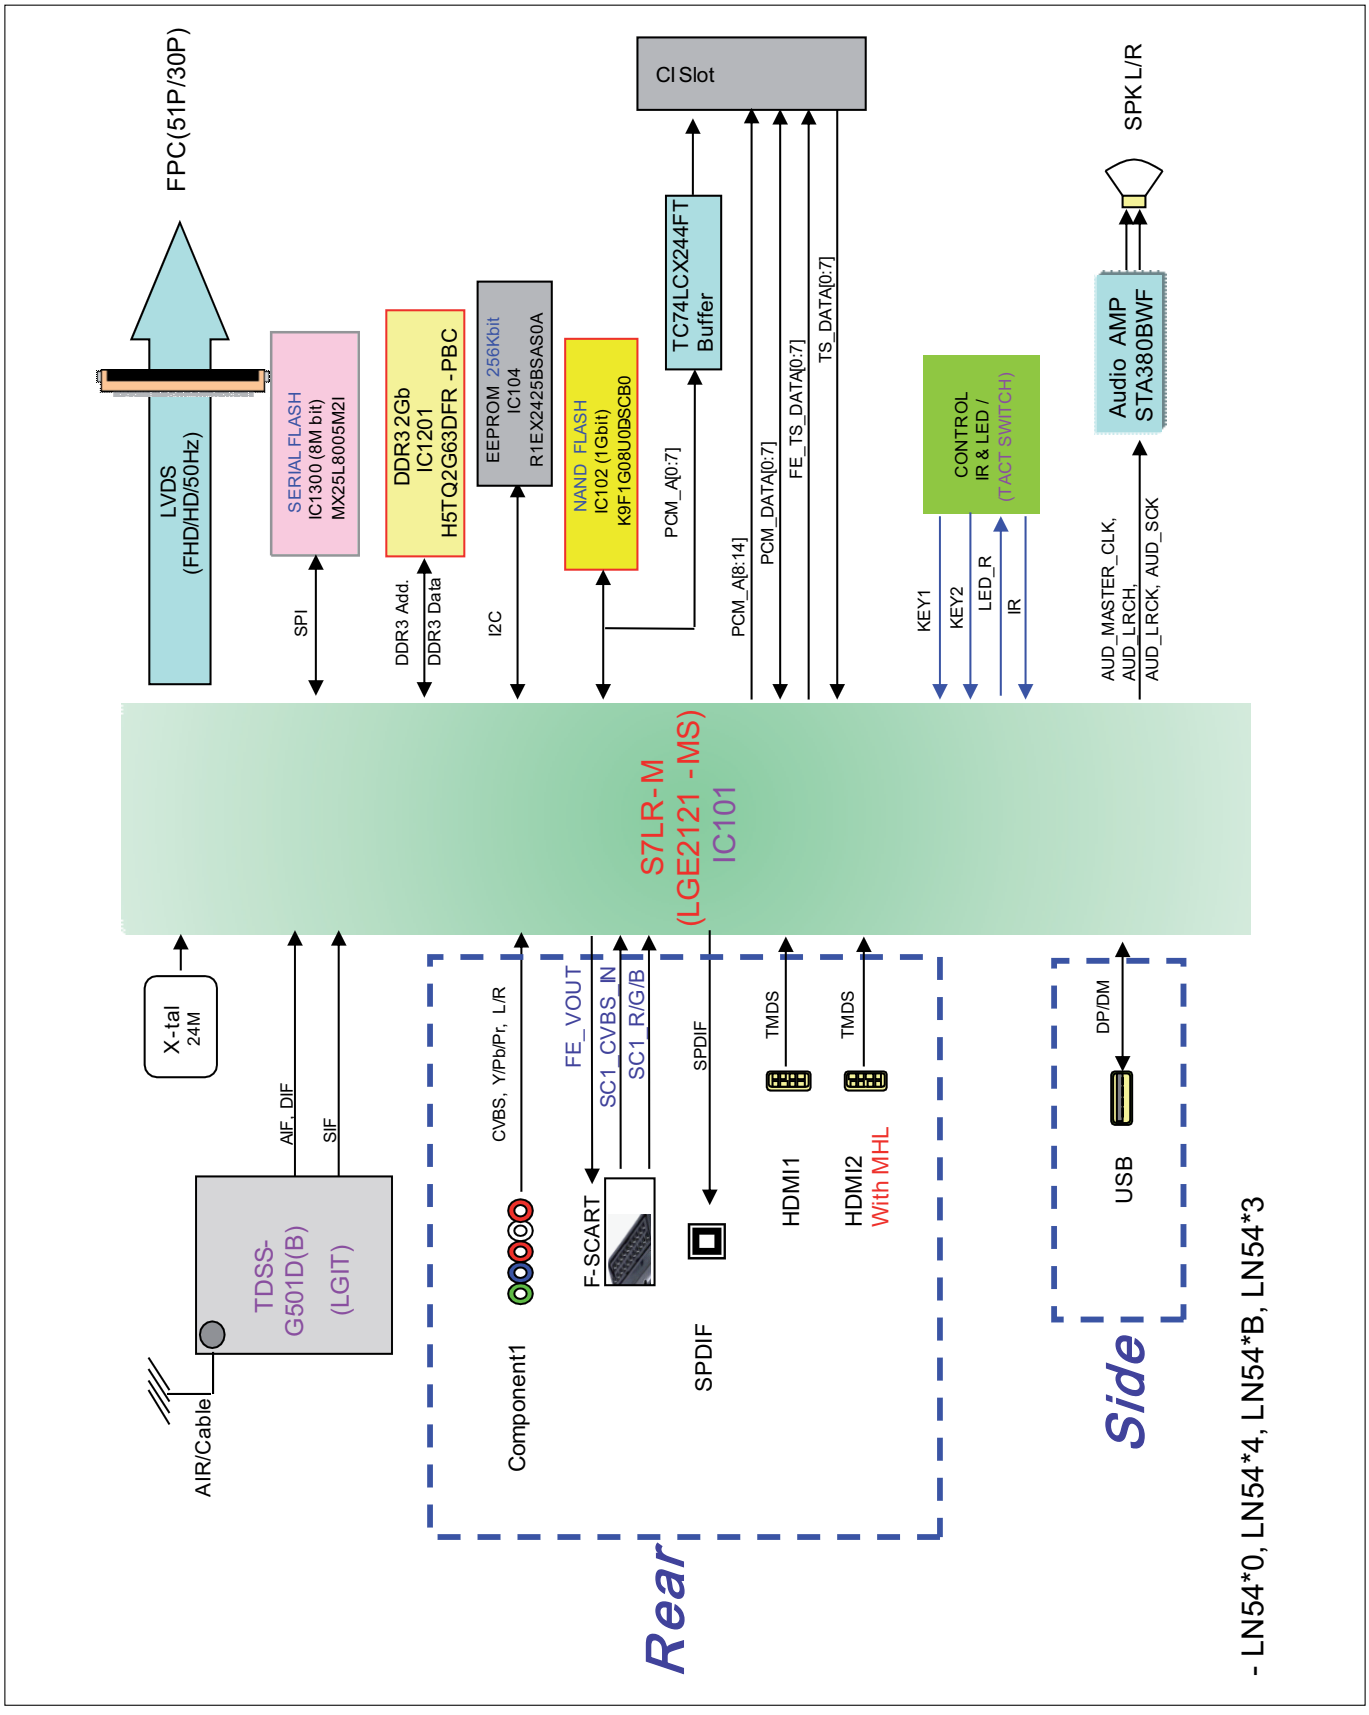

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

EXPLODED VIEW

IMPORTANT SAFETY NOTICE

Many electrical and mechanical parts in this chassis have special safety-related characteristics. These parts are identified by ⚠ in the Schematic Diagram and EXPLODED VIEW.
It is essential that these special safety parts should be replaced with the same components as recommended in this manual to prevent X-RADIATION, Shock, Fire, or other Hazards.
Do not modify the original design without permission of manufacturer.

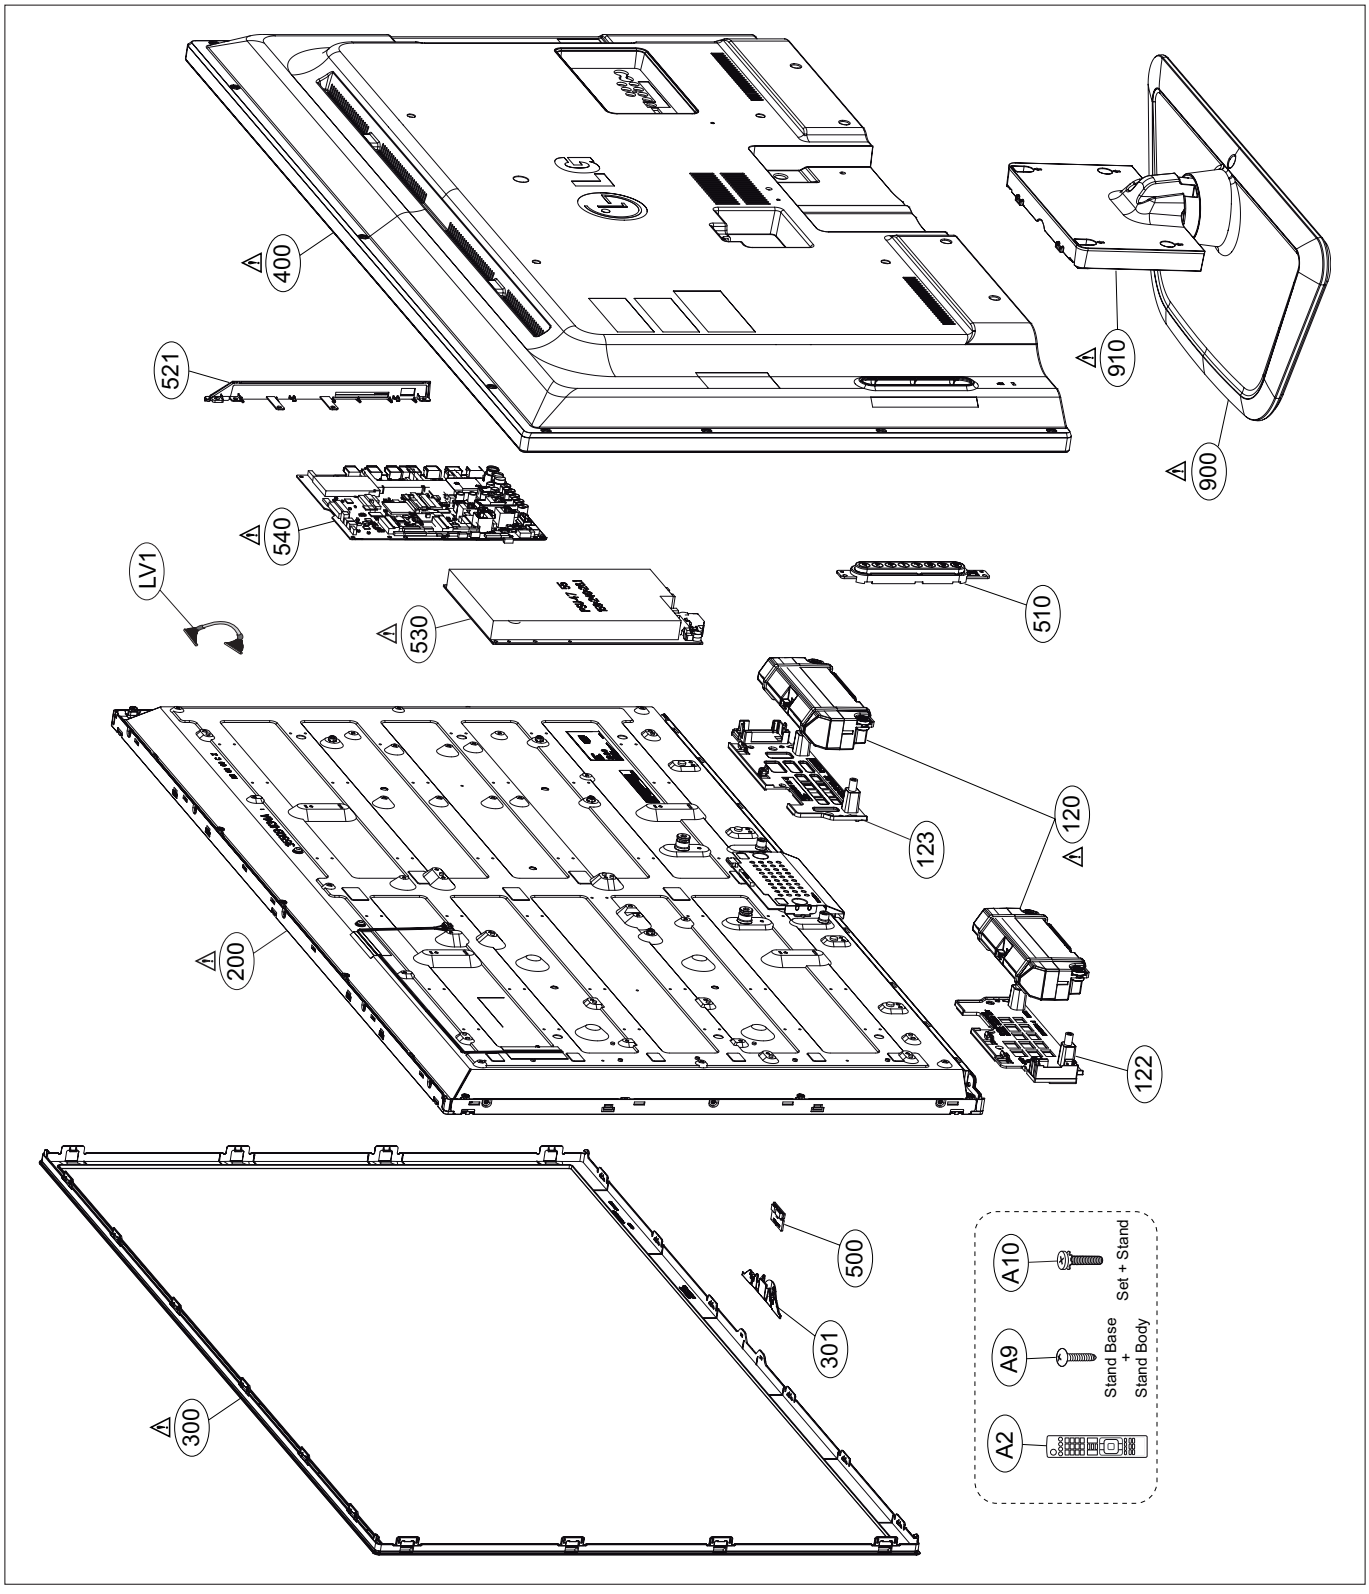

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

NAND FLASH MEMORY

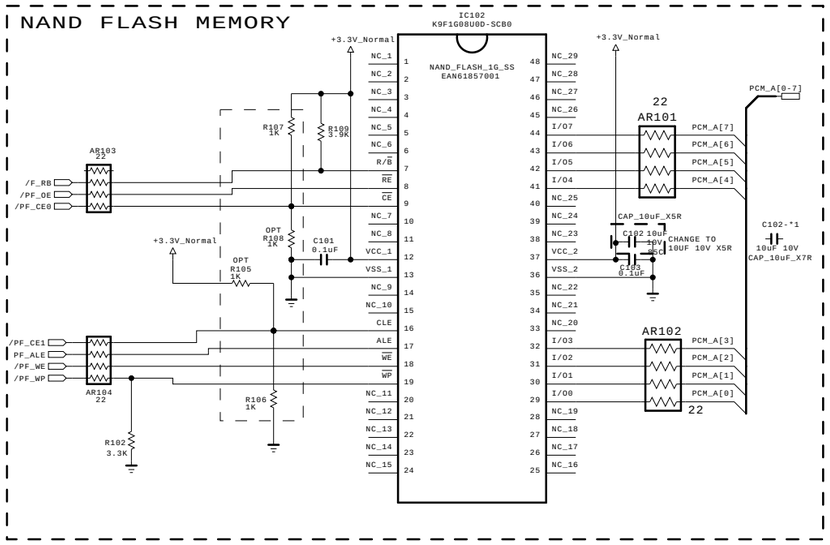

<CHIP Config(LED_R/BUZZ)>

Boot from SPI CS1N(EXT_FLASH) 1'b0
Boot from SPI_CS0N(INT_FLASH) 1'b1

<CHIP Config>
(I2S_OUT_BCK,I2S_OUT_MCK,PAD_PWM1PAD_PWM0)

B51_no_EJ	: 4'b0000	Boot from 8051 with SPI flash
SB51_WOS	: 4'b0001	Secure B51 without scramble
SB51_WS	: 4'b0010	Secure B51 with scramble
MIPS_SPE_NO_EJ	: 4'b0100	Boot from MIPS with SPI flash
MIPS_SPI_EJ_1	: 4'b0101	Boot from MIPS with SPI flash
MIPS_SPI_EJ_2	: 4'b0110	Boot from MIPS with SPI flash
MIPS_WOS	: 4'b1001	Secure MIPS without scramble
MIPS_WS	: 4'b1010	Scerur MIPS with SCRAMBLE

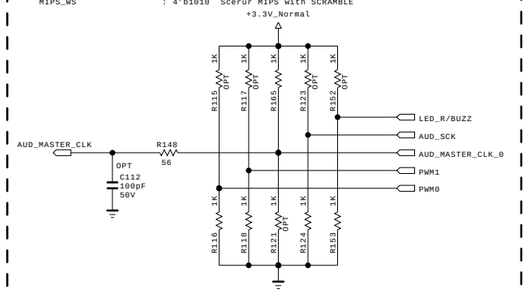

S7LR-M_NON_MS10
IC101
MSD804KKX

SYM.D

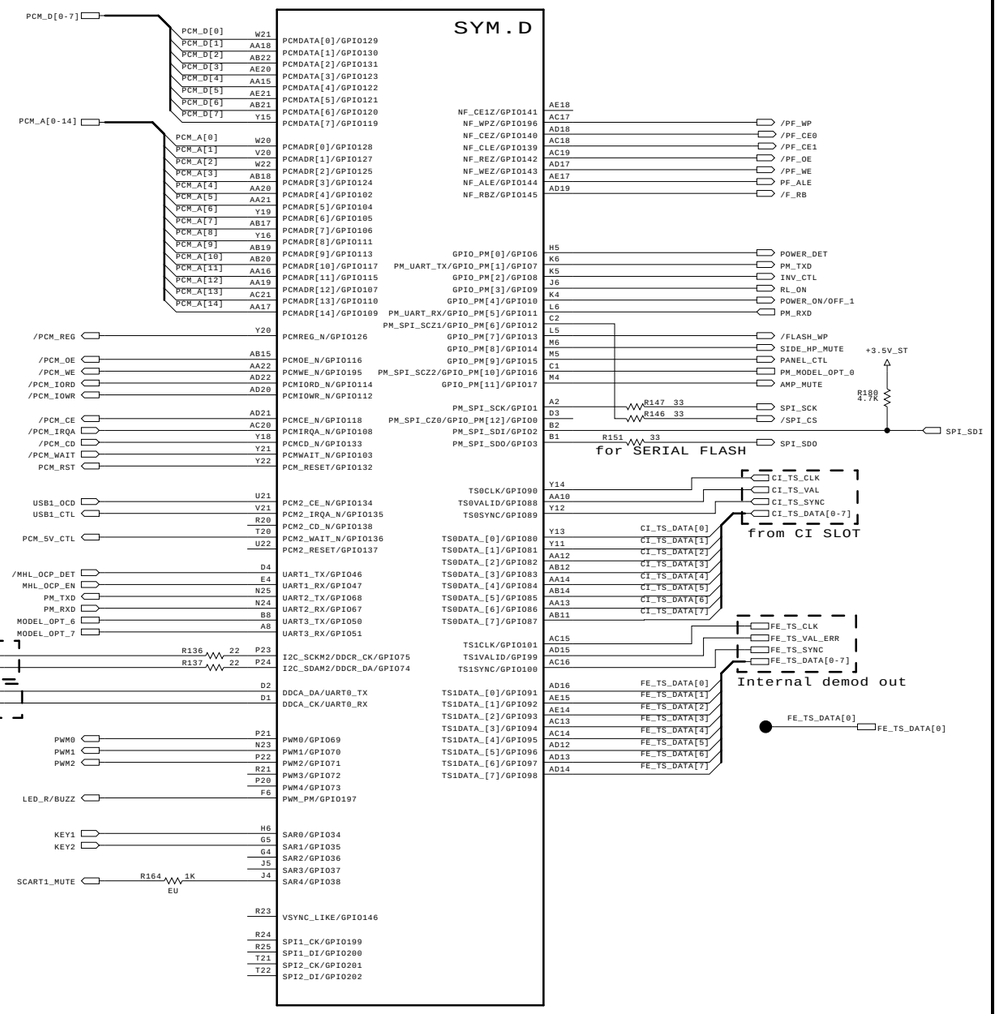

for SYSTEM EEPROM (IC104)



IC101-*1
LGE2121-MS (M1_L13_MS10)

S7LR-M_MS10

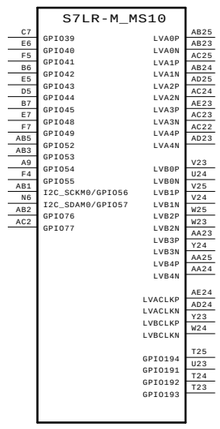

DIMMING

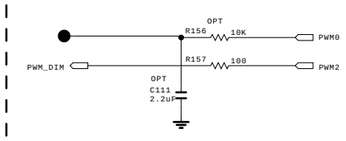

I2C

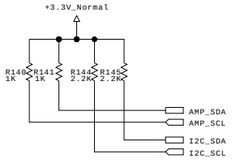

EEPROM

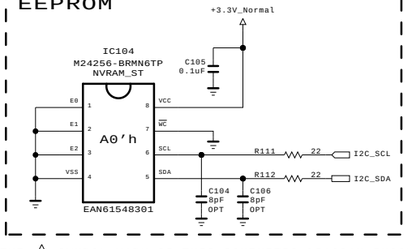

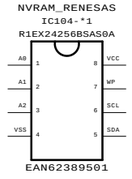

PM MODEL OPTION

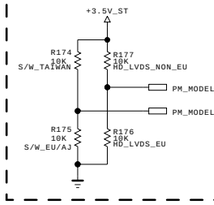

PM_MODEL_OPT_0
HIGH : HD_NON_EU
LOW : HD_EU
HD_LVDS_pattern is different.
Between EU and NON_EU

PM_MODEL_OPT_1
HIGH : TAIWAN
LOW : EU, AJ
NC : Other
for 1 Binary

S7LR-M_NON_MS10
IC101
MSD804KKX

SYM.A

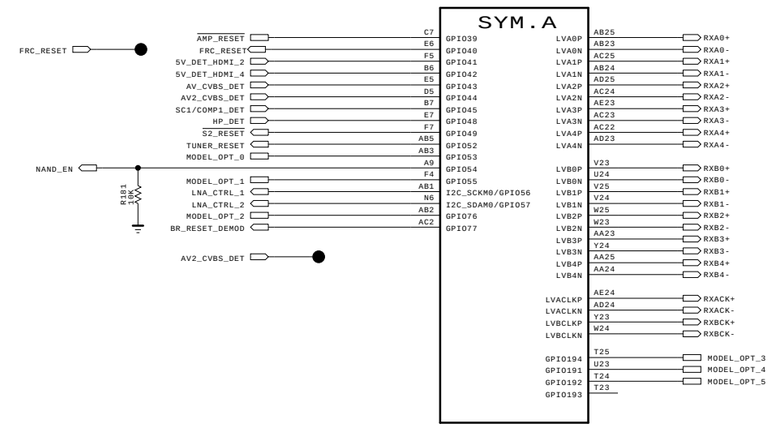

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/07/05
BLOCK	MAIN1_EU_OS	SHEET	1

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

MODEL OPTION

PIN NAME	PIN NO	LOW	HIGH
MODEL_OPT_0	AB3	FHD	HD
MODEL_OPT_1	F4	PHM_OFF	PHM_ON
MODEL_OPT_2	AB2	NON_DVB_T2	DVB_T2
MODEL_OPT_3	T25	NON_M120	M120
MODEL_OPT_4	U23	MIU0-128M	MIU0-256M
MODEL_OPT_5	T24	NON_DVB_S	DVB_S
MODEL_OPT_6	B8	MIU1-NO_DDR	MIU1-128M
MODEL_OPT_7	A8	NON_DUAL_STREAM	DUAL_STREAM

* Dual Stream is only Korea 3D spec

Memory OPTION

Memory	MODEL_OPT_4 PIN NO.U23	MODEL_OPT_6 PIN NO. B8	Note
128M	0	0	
128M+128M	0	1	
256M	1	0	
256M+128M	1	1	Ginga

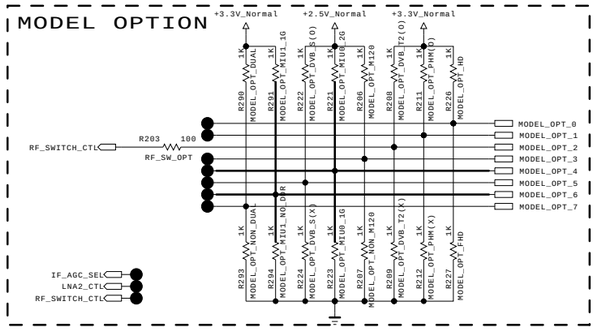

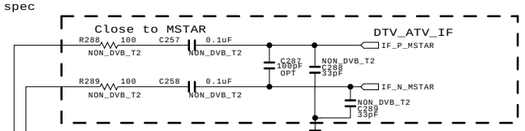

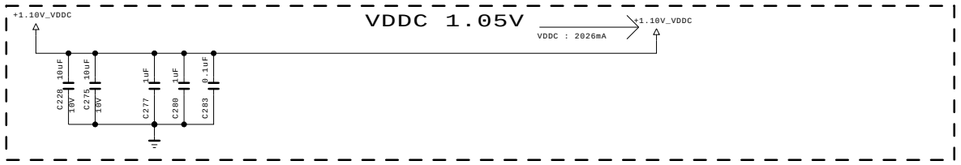

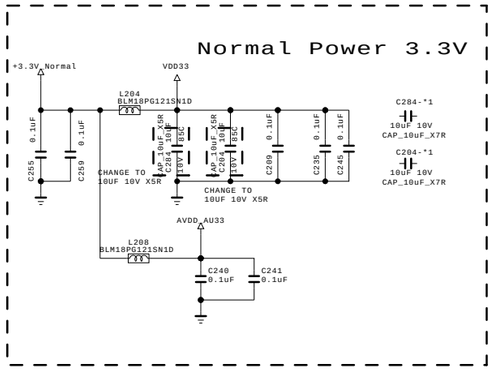

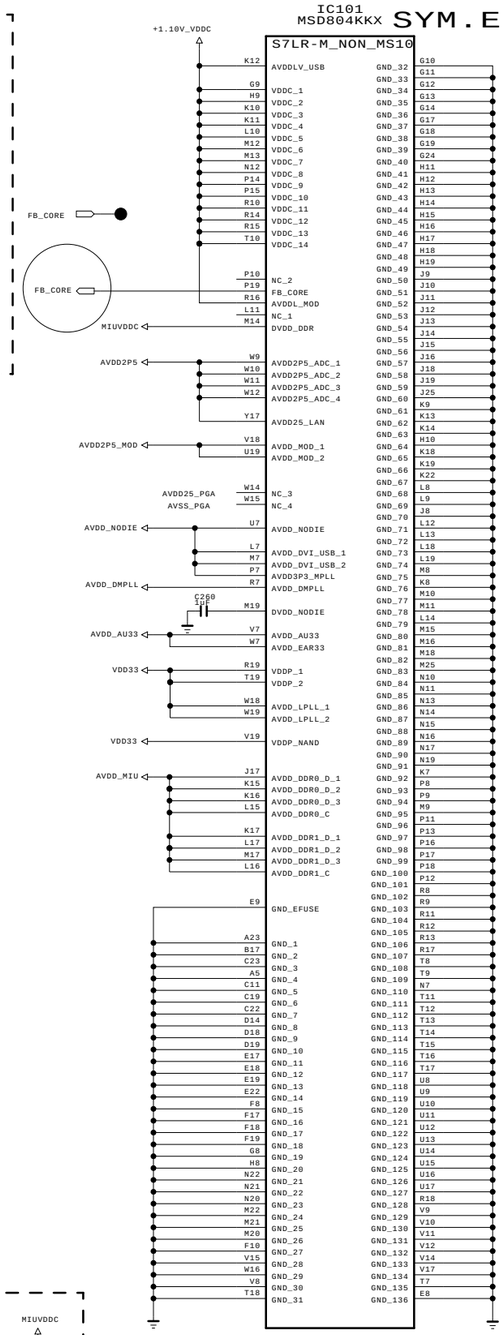

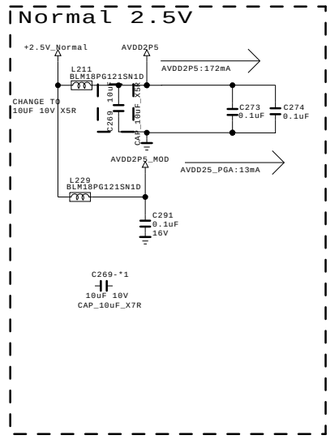

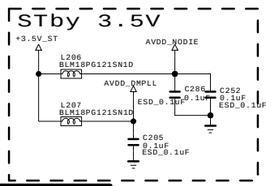

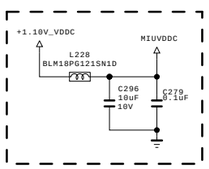

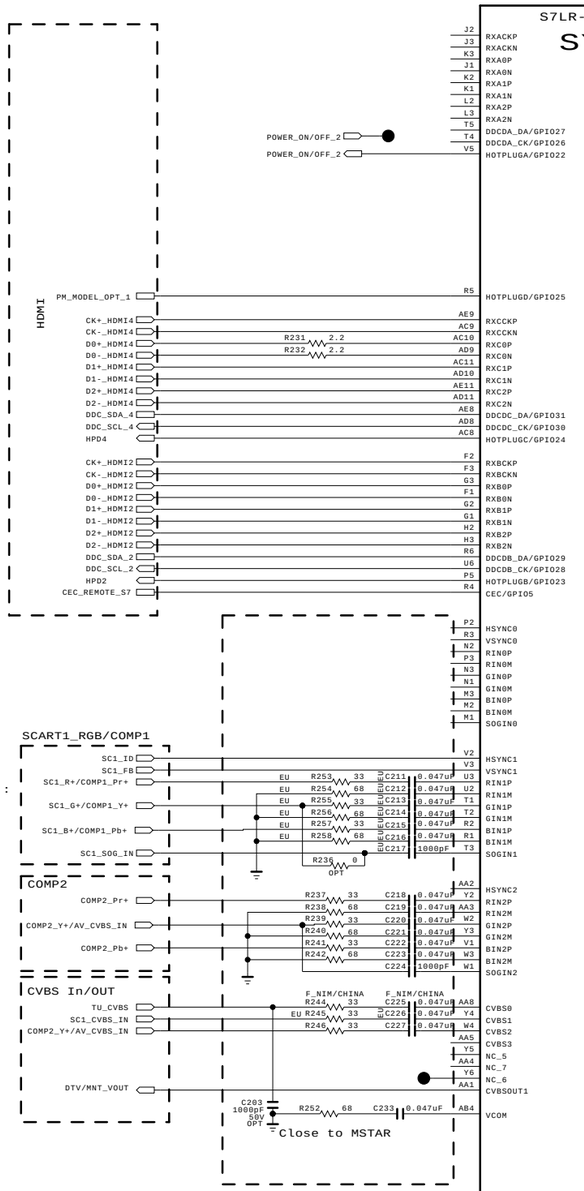

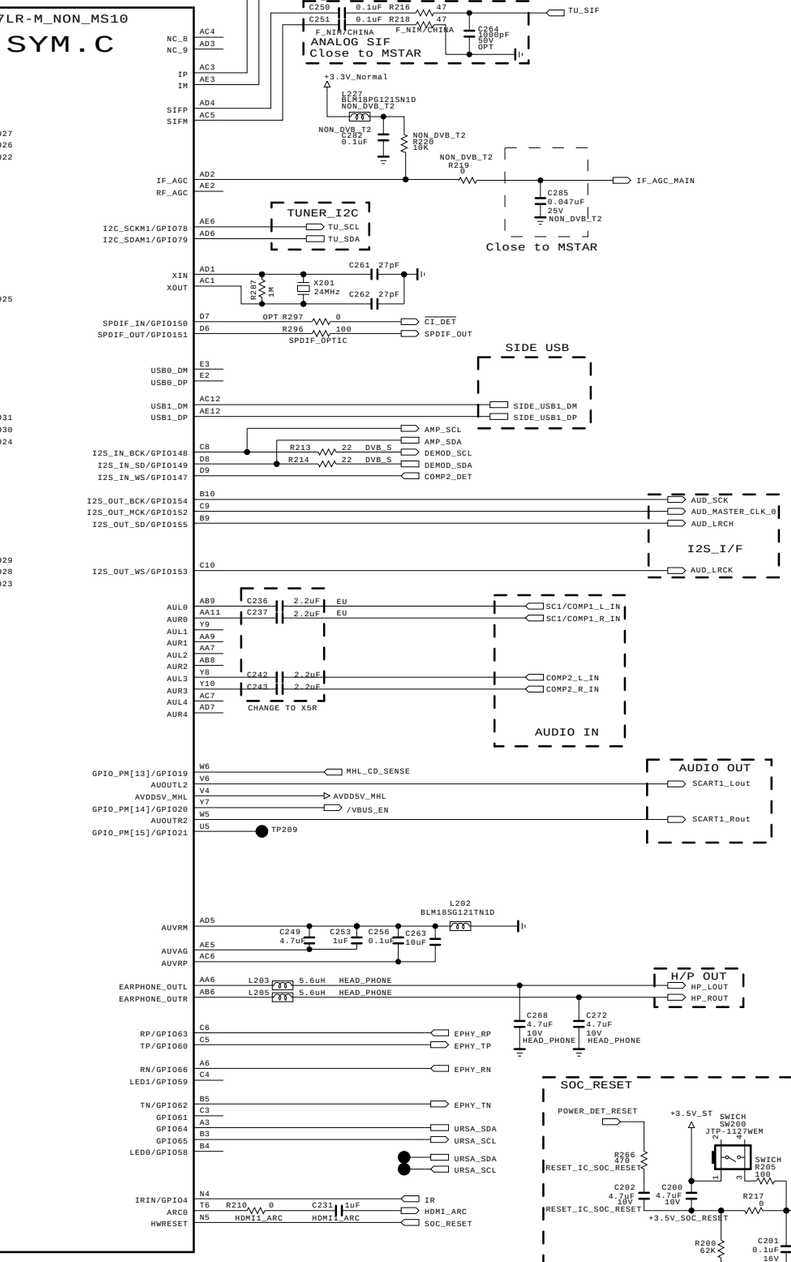

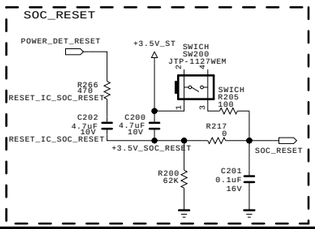

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/07/05
BLOCK	MAIN2_EU_OS	SHEET	2

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

L13 POWER BLOCK (POWER DETECT 2)

FROM LIPS & POWER B/D

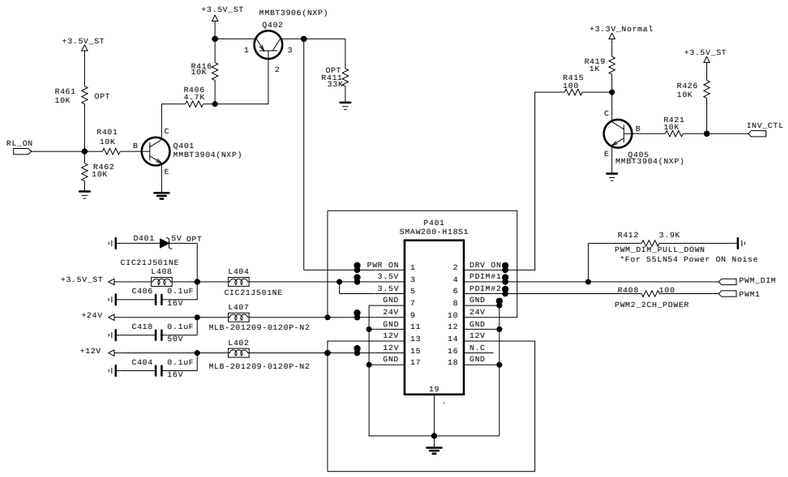

PANEL_POWER

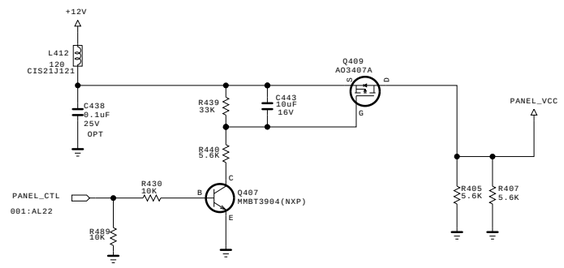

+1.5V_DDR

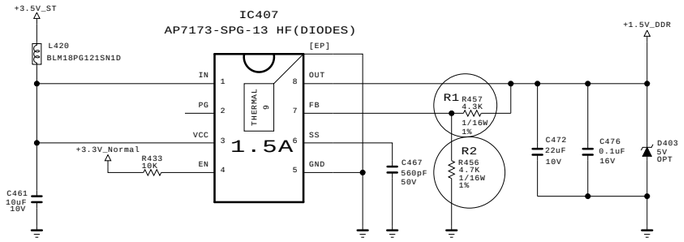

Vout=0.8*(1+R1/R2)=1.5319

+2.5V_Normal

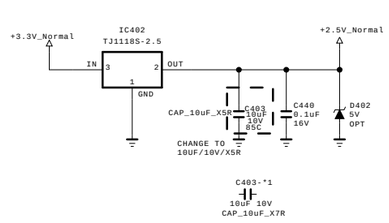

Power_DET

+3.5V_ST --> 3.375V --> 3.46V
+24V --> 3.78V --> 3.92V (3.79V)
+12V --> 3.58V --> 3.82V (3.68V)

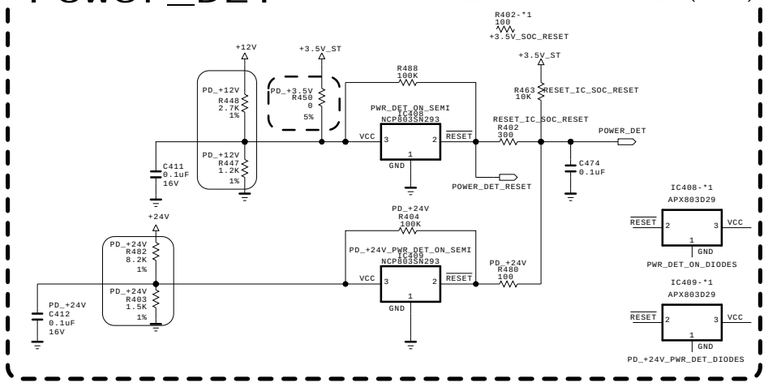

+3.3V_Normal

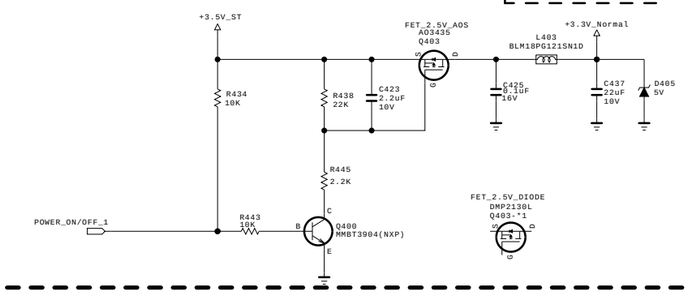

+5V_Normal & +5V_USB

Vout=0.8*(1+R1/R2)

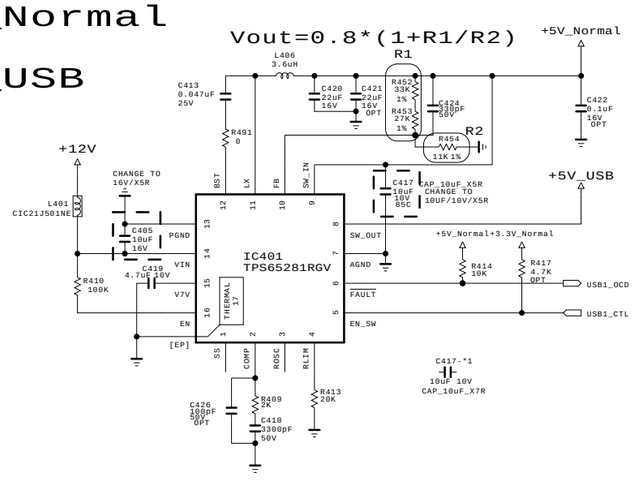

S7LR core 1.15V volt

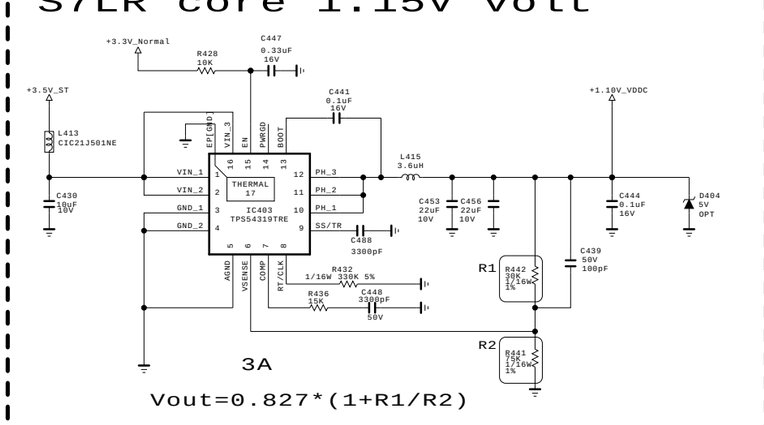

Vout=0.827*(1+R1/R2)

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/09/19
BLOCK	Power_PD2	SHEET	4

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

IR/LED and Control

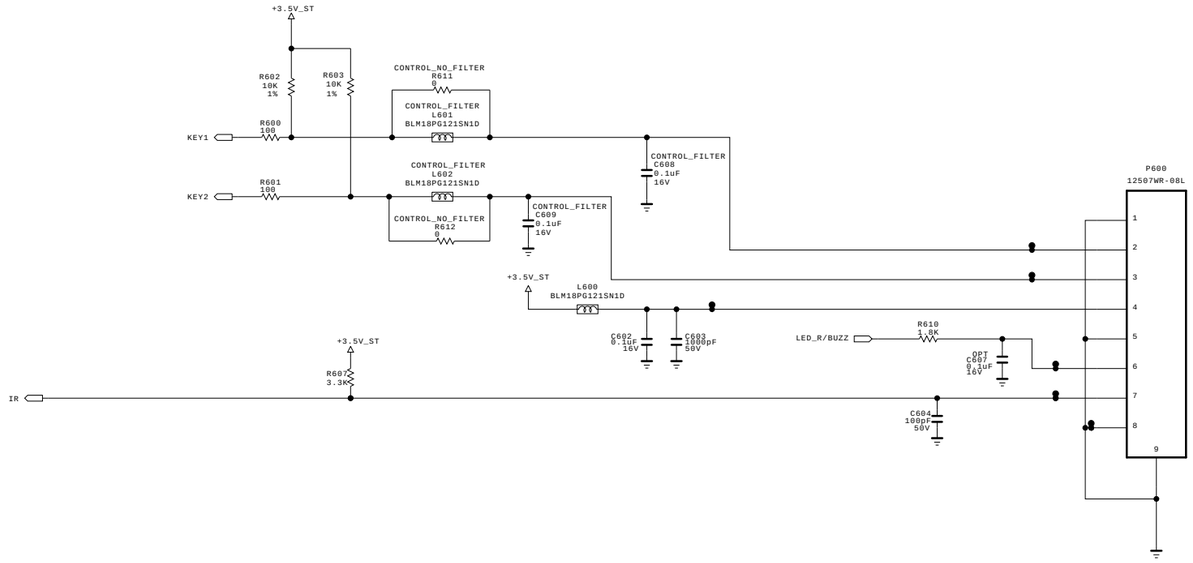

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/07/18
BLOCK	IR/CONTROL	SHEET	6

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

USB (SIDE)

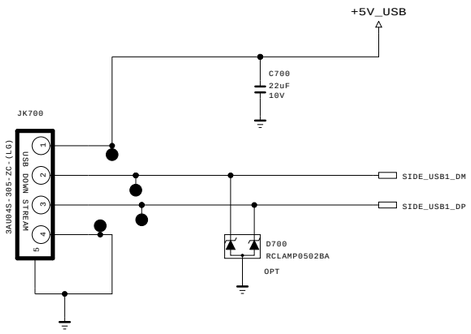

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	12/06/20
BLOCK	USB	SHEET	7

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

HDMI (REAR 1 / SIDE 1 MHL)

HDMI_1

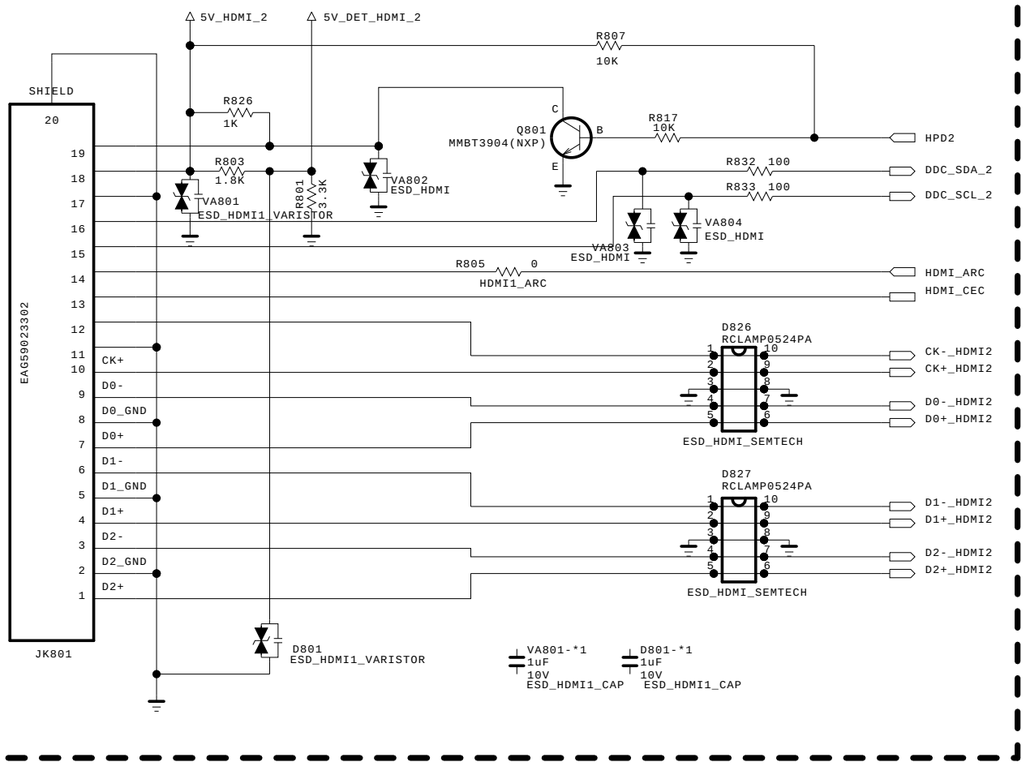

SIDE_HDMI (MHL)

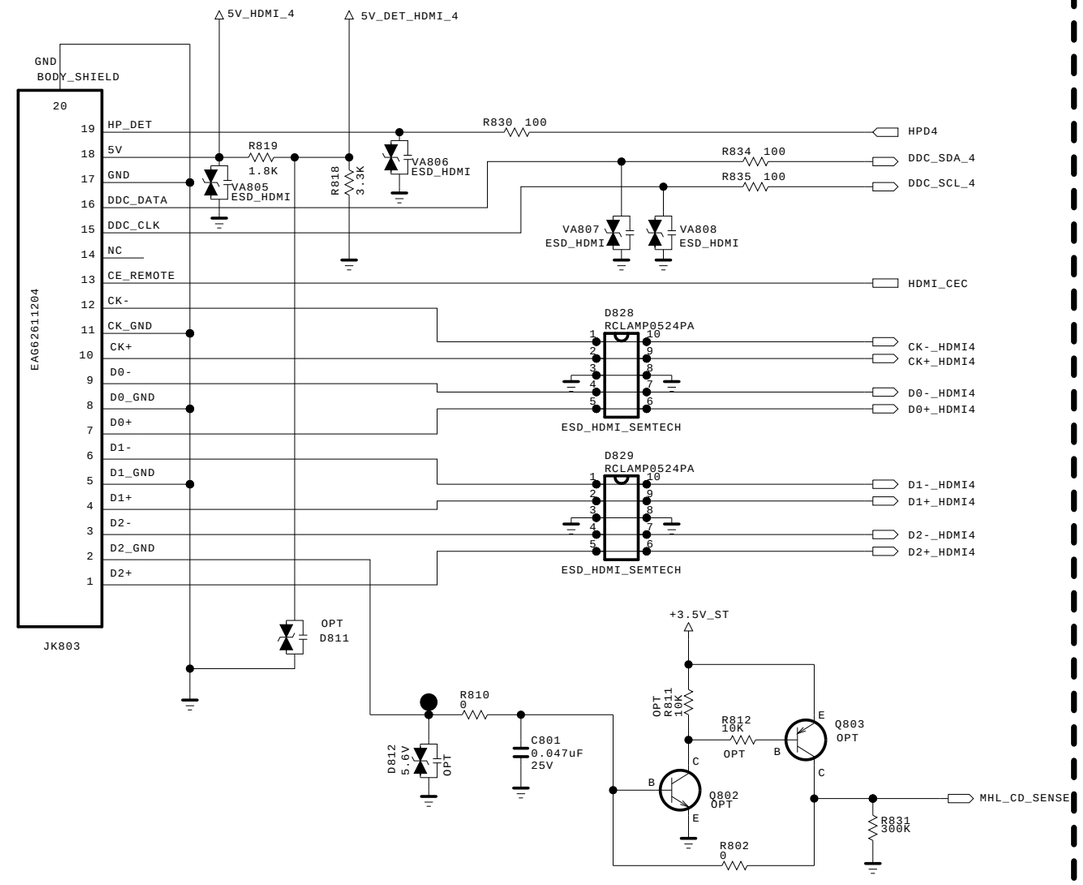

CEC

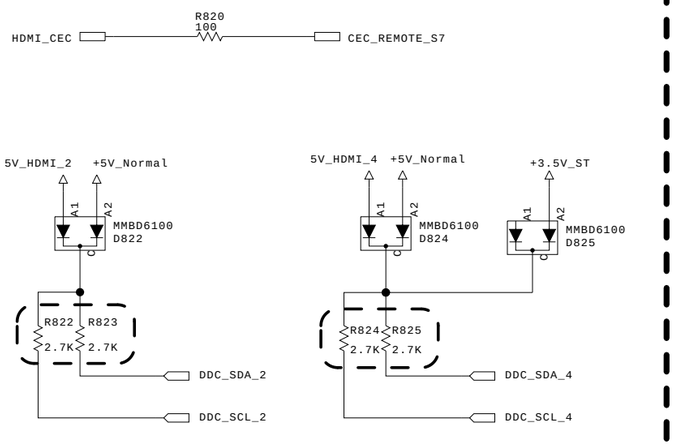

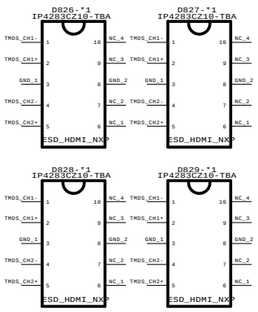

MHL OCP

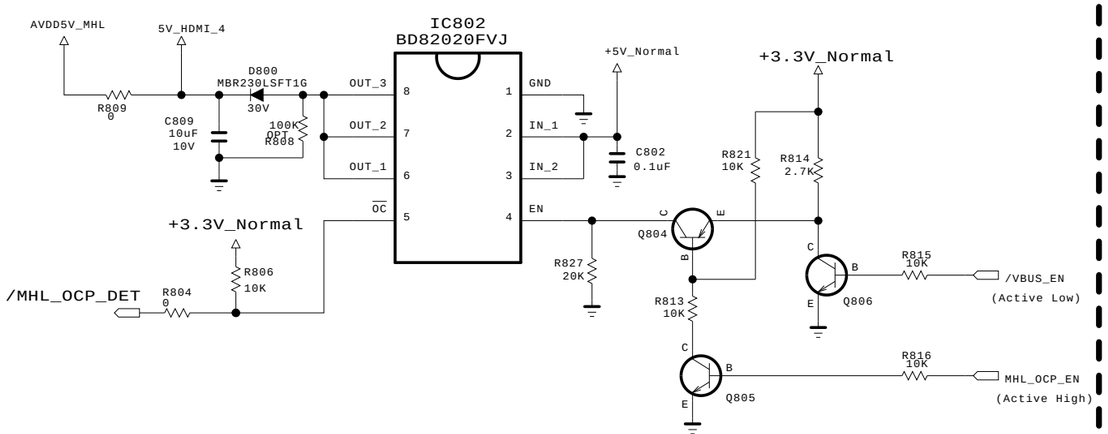

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET

LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/07/12
BLOCK	HDMI_R1_S1	SHEET	8 /

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

SPDIF

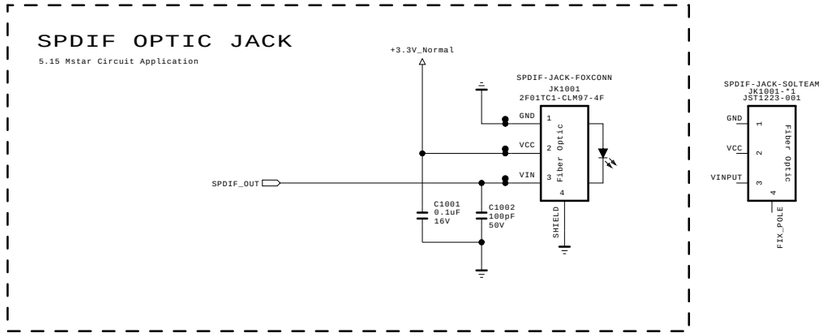

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES
SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION.
FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS
ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR
THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	12/06/12
BLOCK	SPDIF	SHEET	10

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

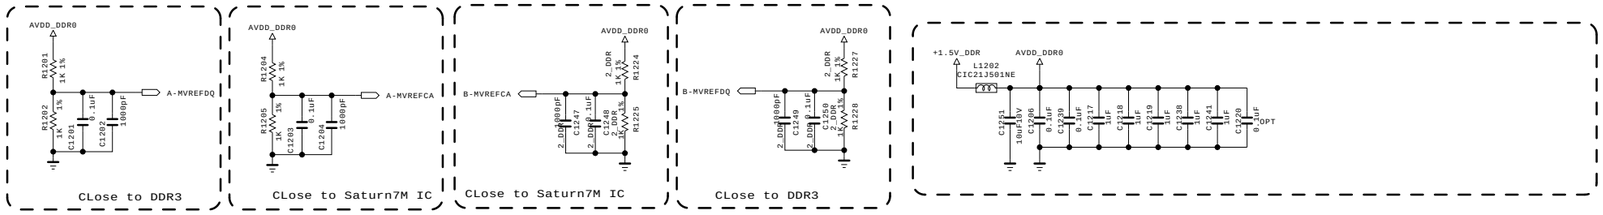

DDR_1600_1G_SS
IC1201
K4B1G1646G-BCK0
EAN61836301

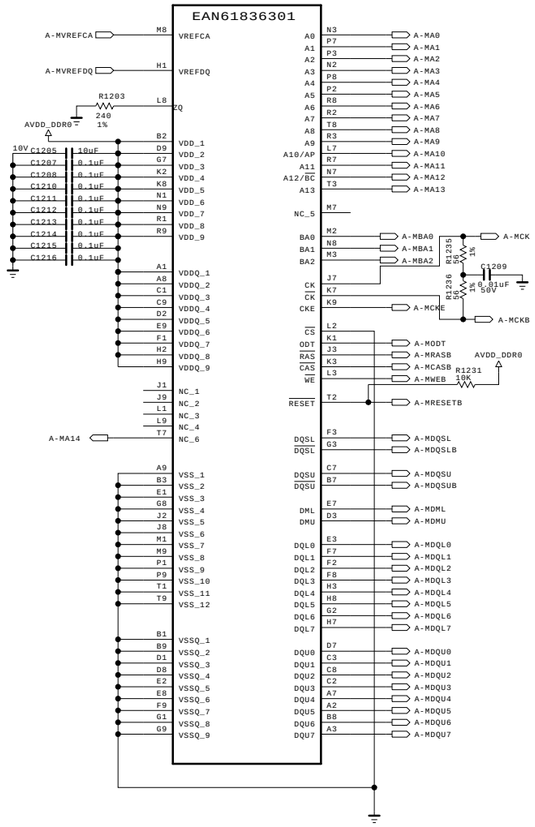

S7LR-M_NON_MS10
IC101
MSD804KKX

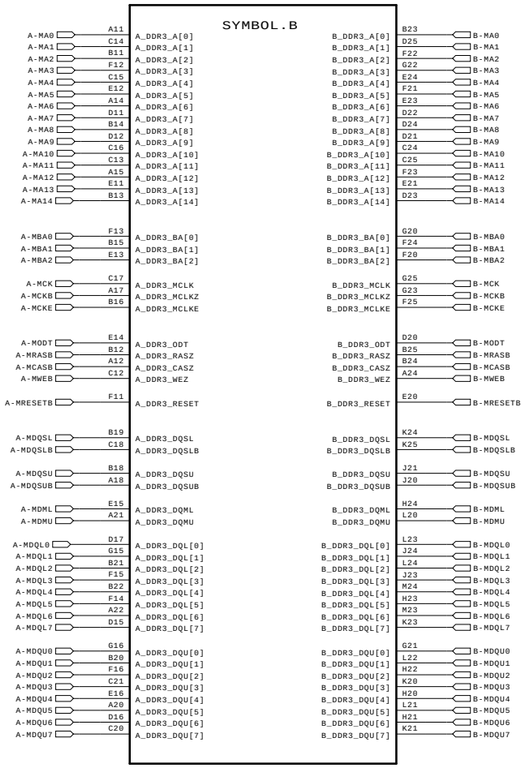

DDR_1600_1G_SS
IC1202
K4B1G1646G-BCK0
EAN61836301

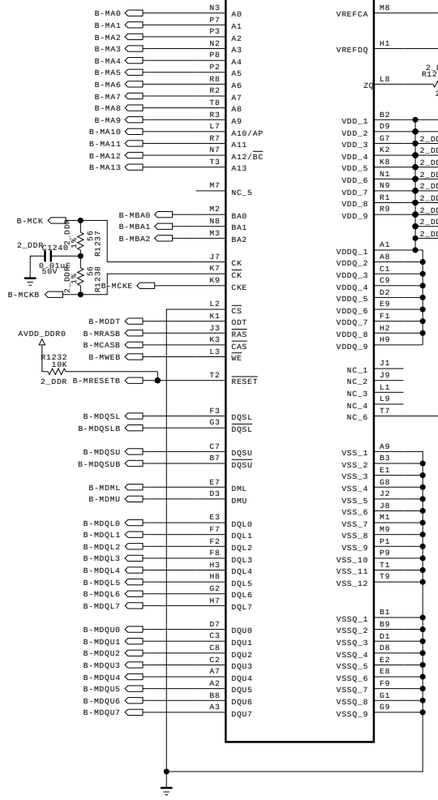

DDR_1600_1G_HYNIX
IC1201-*1
H5TQ1G63EFR-PBC

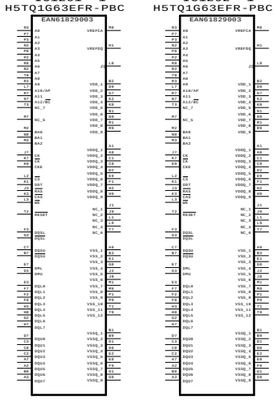

DDR_1600_1G_HYNIX
IC1202-*1
H5TQ1G63EFR-PBC

DDR_1600_1G_NANYA
IC1201-*2
NT5CB64M16DP-DH

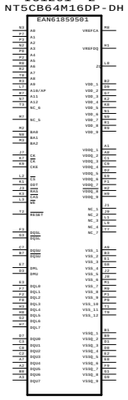

DDR_1600_1G_NANYA
IC1202-*2
NT5CB64M16DP-DH

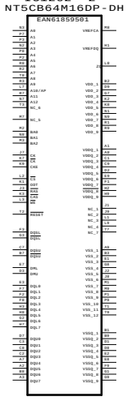

DDR_1600_2G_SS
IC1201-*3
K4B2G1646E-BCK0

DDR_1600_2G_SS
IC1202-*3
K4B2G1646E-BCK0

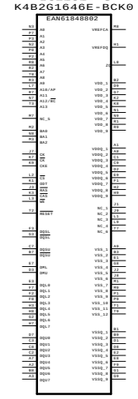

DDR_1600_2G_HYNIX
IC1201-*4
H5TQ2G63DFR-PBC

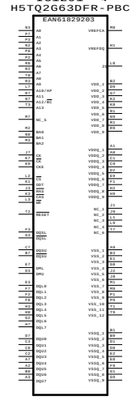

DDR_1600_2G_HYNIX
IC1202-*4
H5TQ2G63DFR-PBC

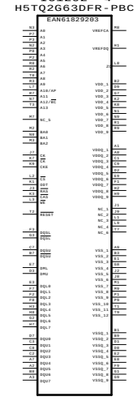

DDR_1600_2G_NANYA
IC1201-*5
NT5CB128M16FP-DI

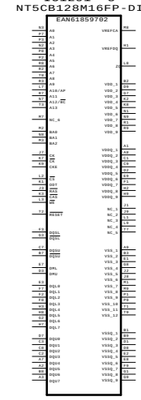

DDR_1600_2G_NANYA
IC1202-*5
NT5CB128M16FP-DI

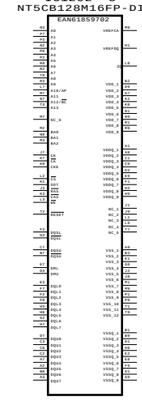

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/07/16
BLOCK	M1_DDR (2DDR)	SHEET	12

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

Serial Flash for SPI boot(OS)

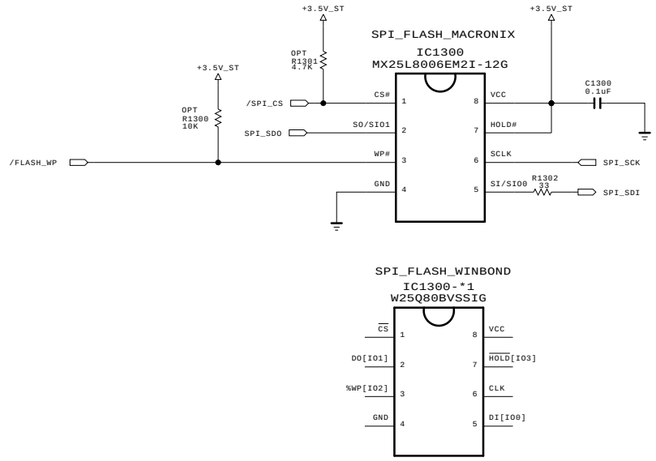

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/20
BLOCK	S_FLASH_OS	SHEET	13

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

Headphone
*Option : HEAD_PHONE

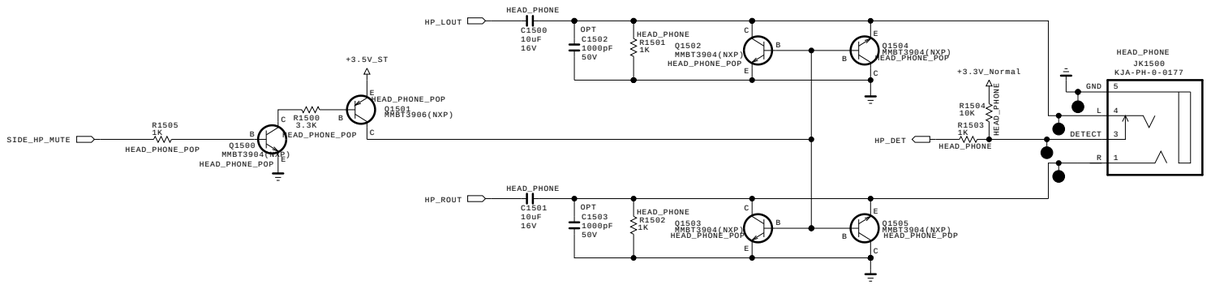

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/20
BLOCK	HEADPHONE	SHEET	15

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

CI Region

* Option name of this page : CI_SLOT (because of Hong Kong)

CI SLOT

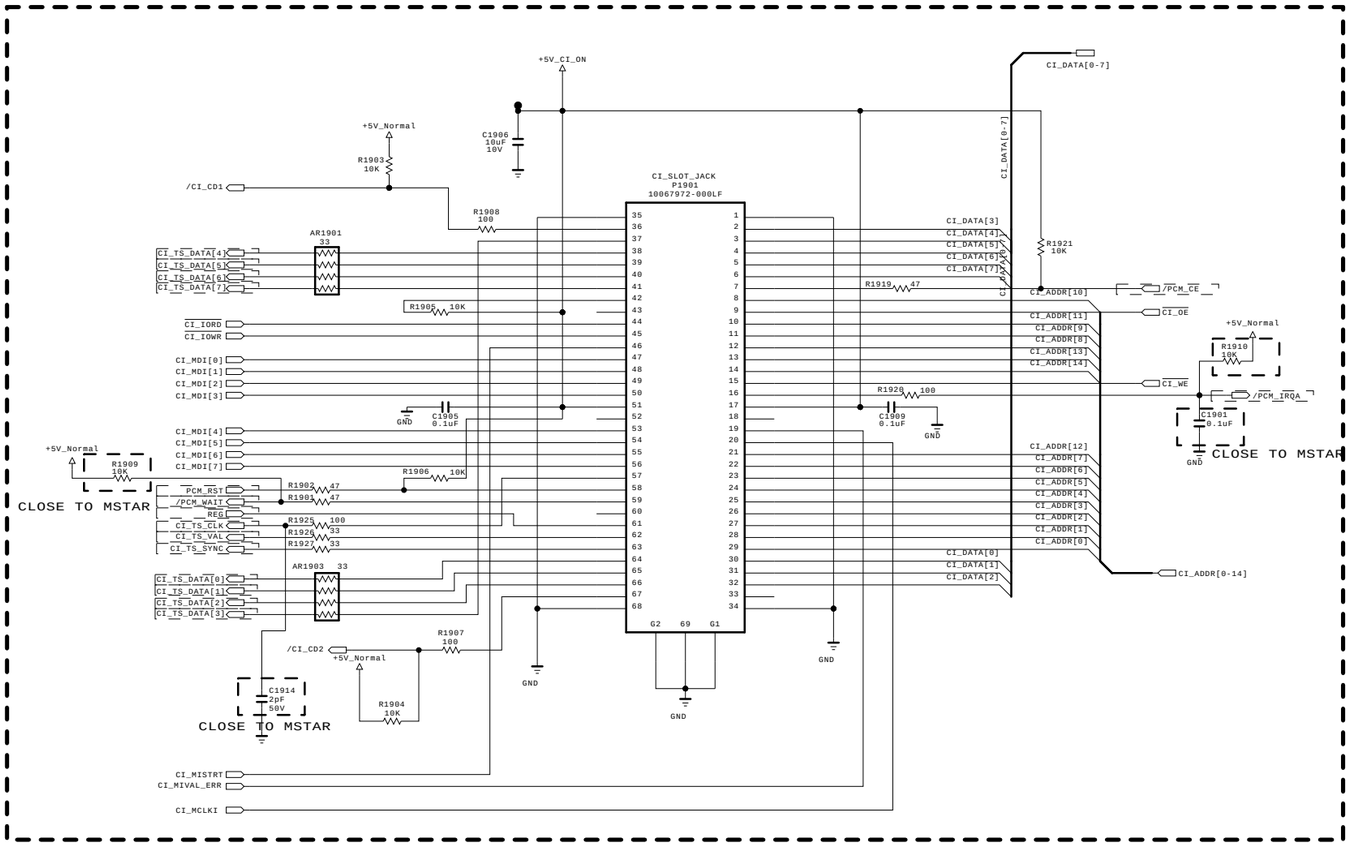

CI TS INPUT

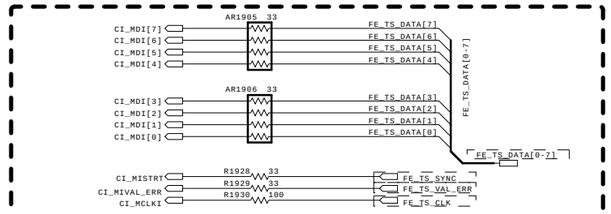

CI HOST I/F

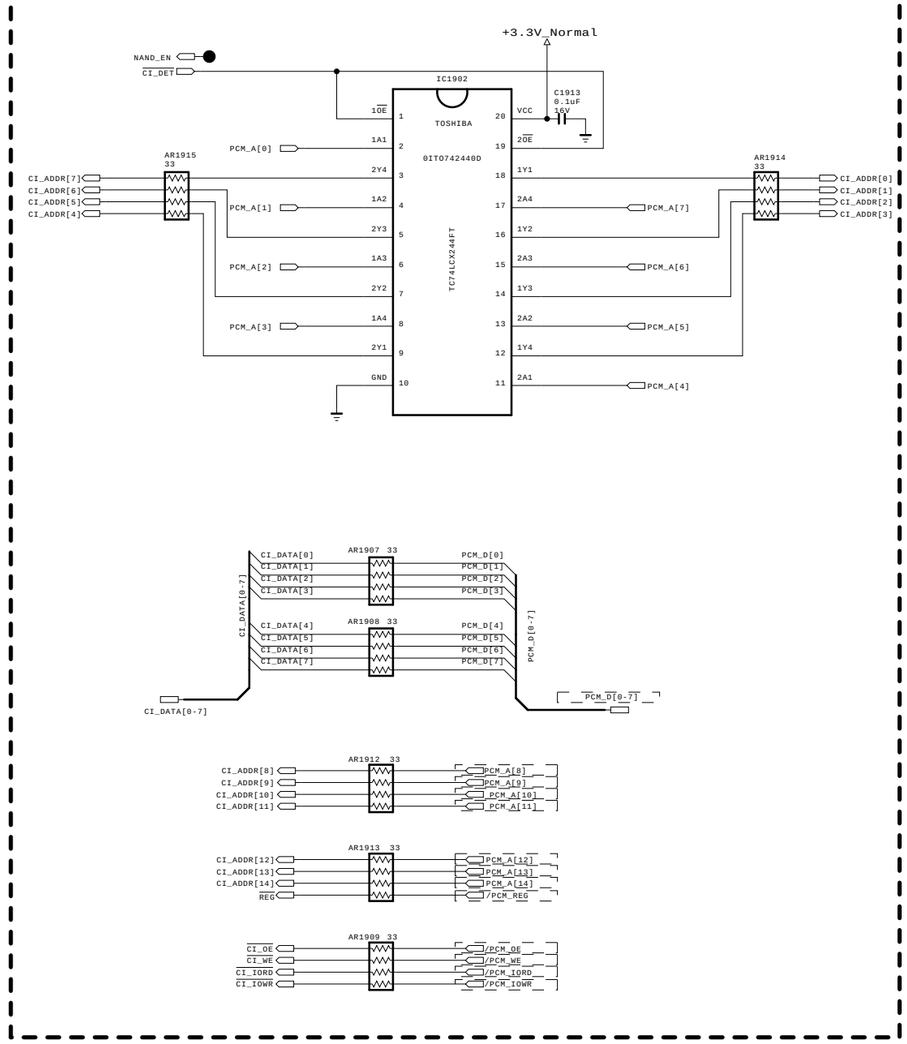

CI DETECT

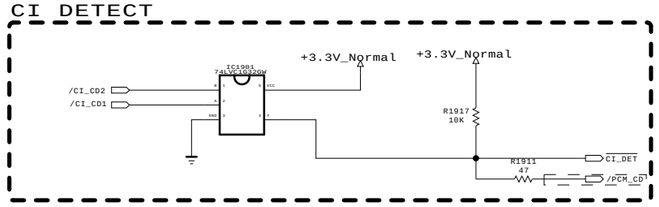

CI POWER ENABLE CONTROL

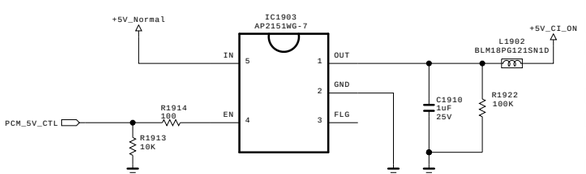

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/19
BLOCK	PCMCI	SHEET	19 /

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

ETHERNET

* H/W option : ETHERNET

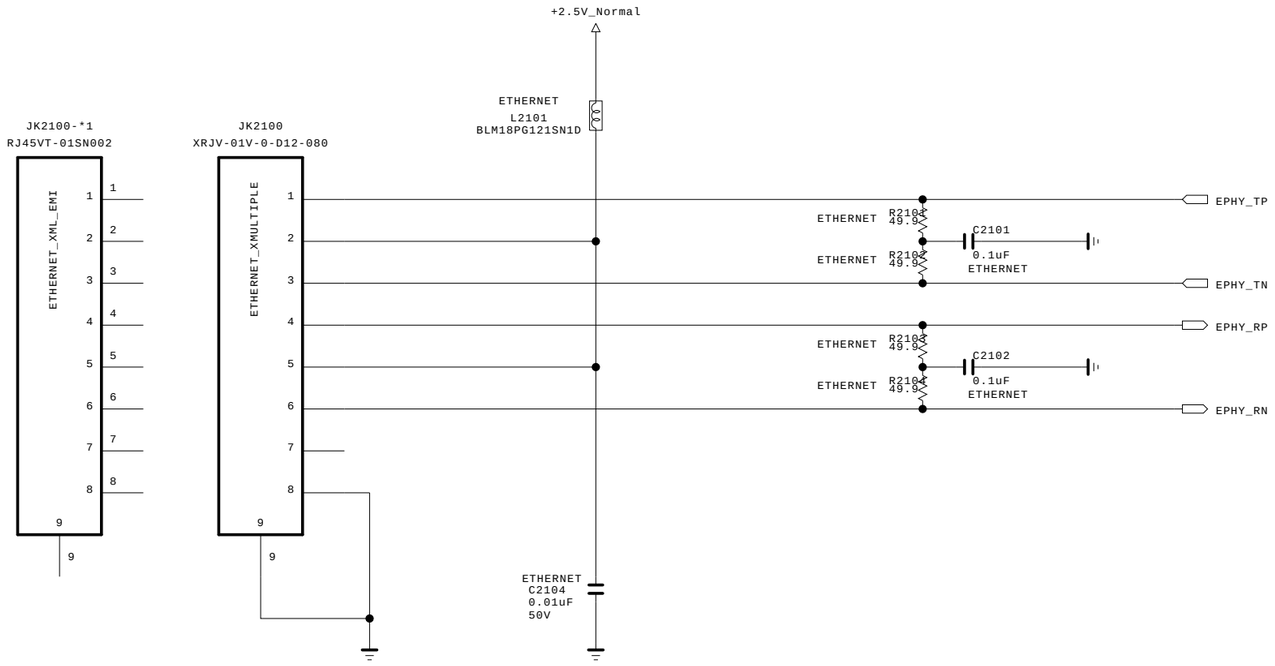

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET

LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/21
BLOCK	LAN	SHEET	21 /

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

NETCAST4.0 EU&CHUNA_TUNER_BLOCK

TU2603
TDSS-G501D

TU2604
TDSM-C601D

TU2602
TDSQ-G601D

TU2601
TDSQ-G501D

Close to TUNER

Close to the tuner

GND seperation for CHINA tuner

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/19
BLOCK	TUNER_EU	SHEET	26

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

DVB-S2 LNB Part Allegro

(Option:LNB)

Input trace widths should be sized to conduct at least 3A
Ouput trace widths should be sized to conduct at least 2A

3A

2A

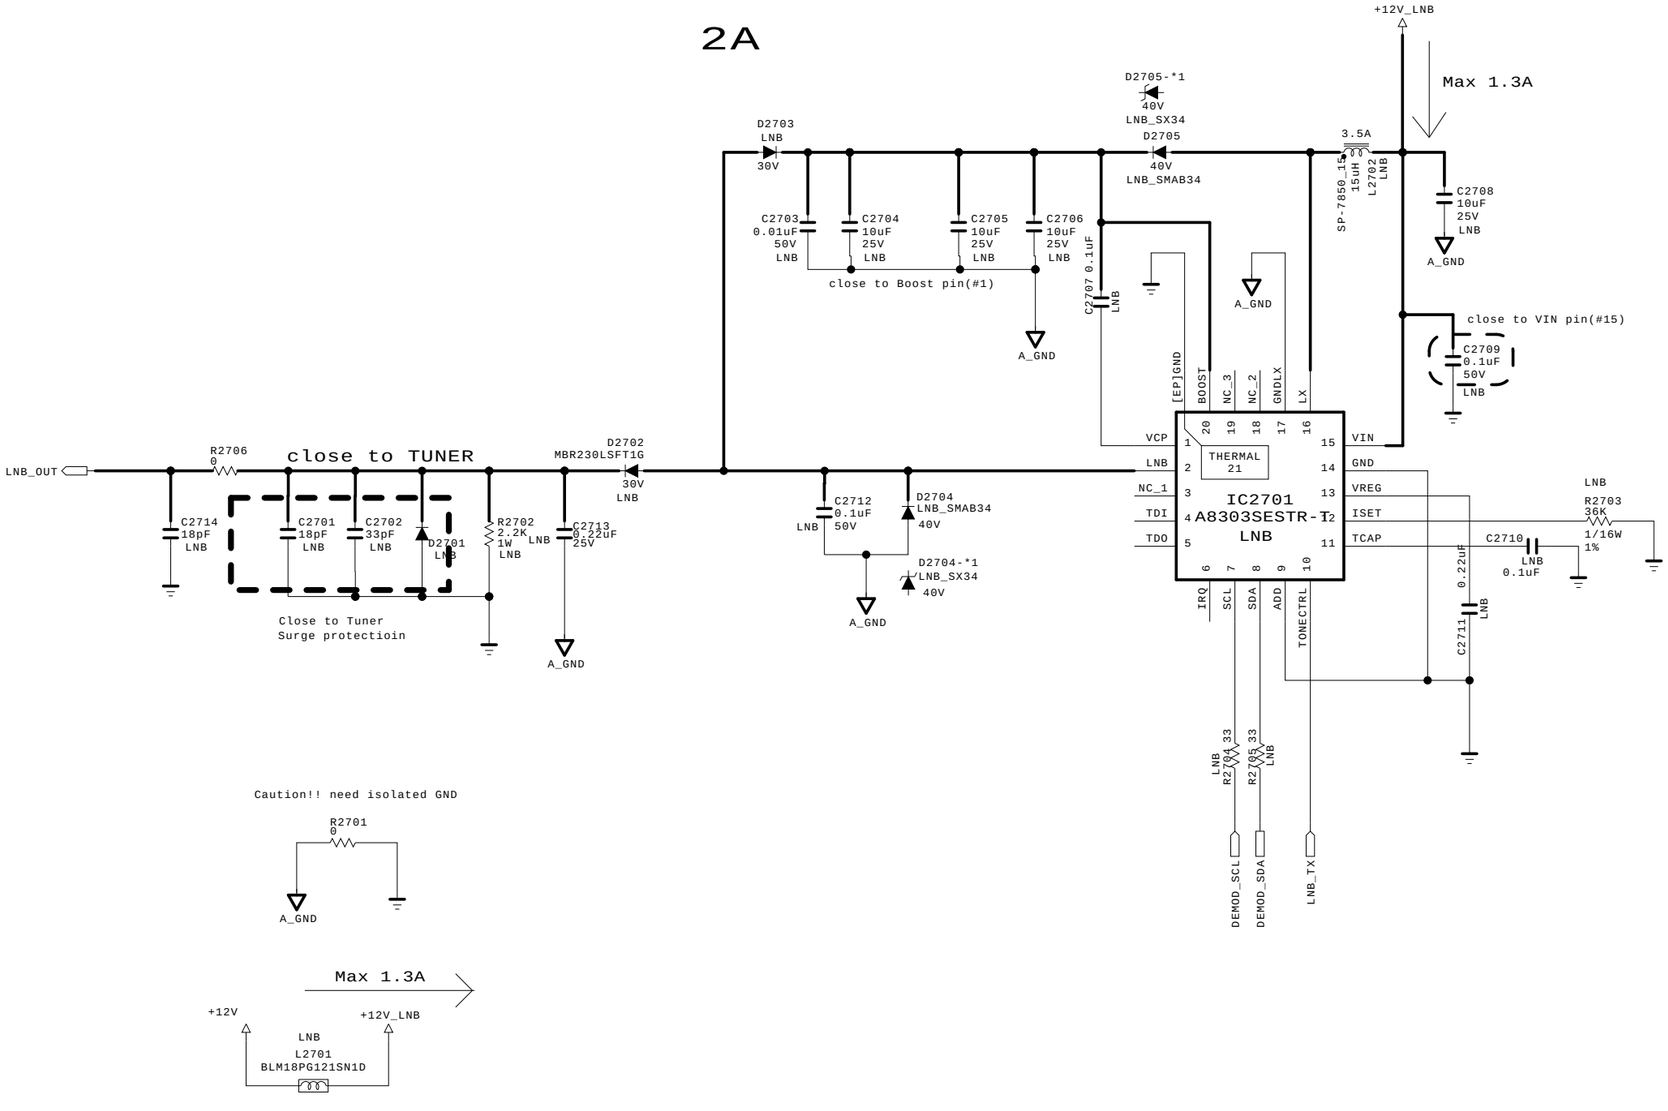

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET

LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/19
BLOCK	LNB	SHEET	27

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

AUDIO AMP(STA380BWEF)

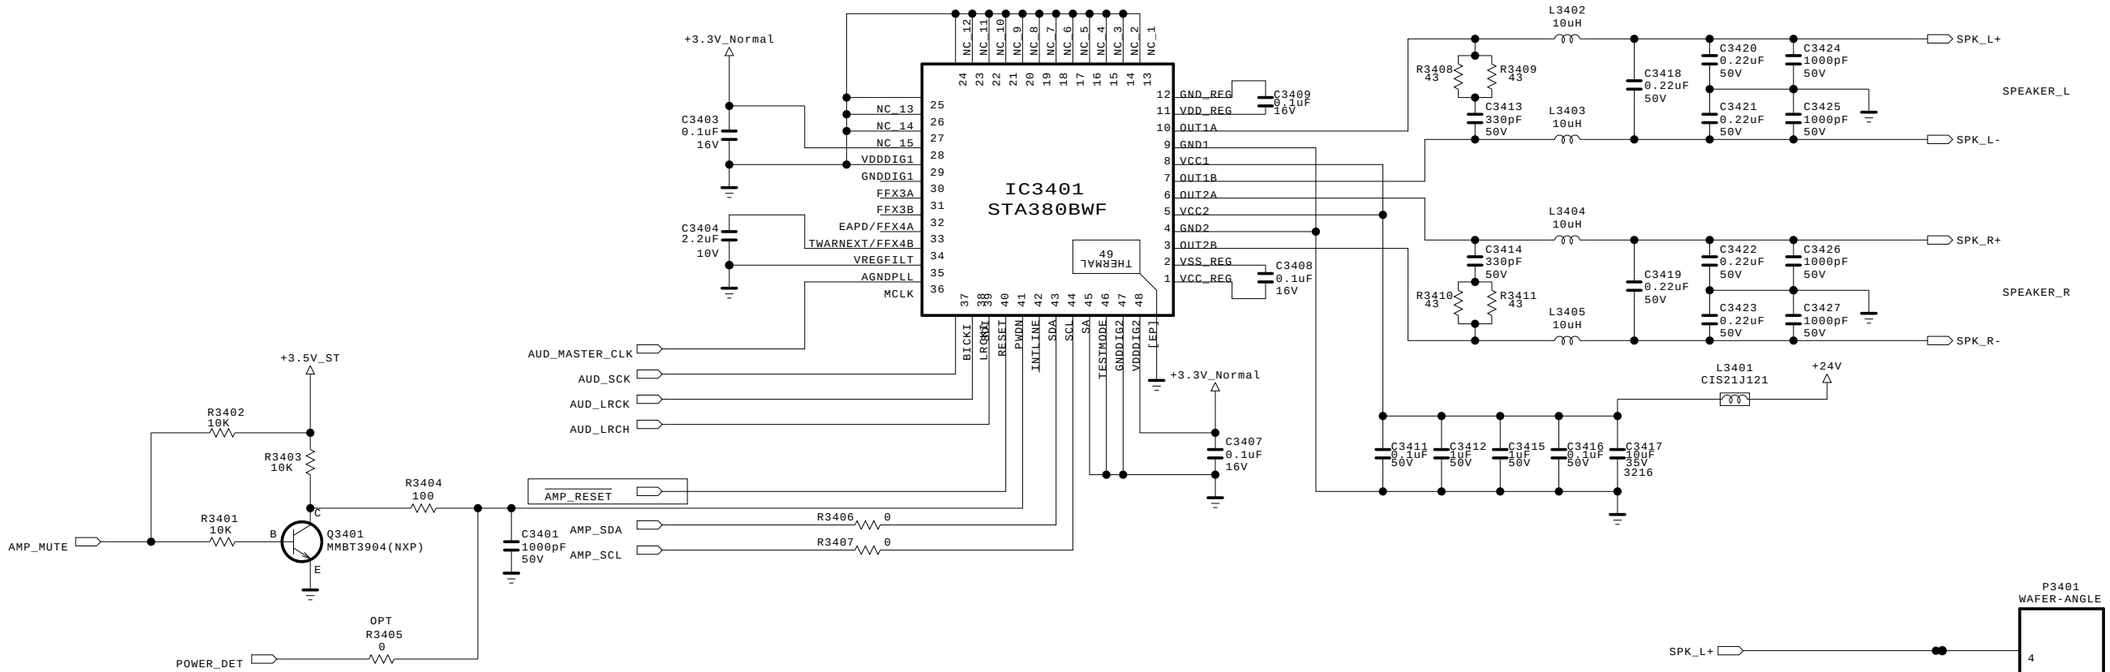

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET

LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/08/29
BLOCK	AMP_STA380BWEF	SHEET	34

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

MSTART DEBUG_4PIN

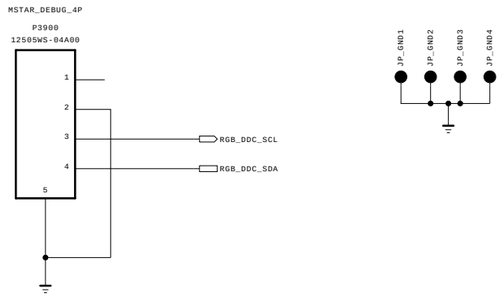

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES
SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION.
FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS
ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR
THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/20
BLOCK	MSTAR DEBUG_4PIN	SHEET	39

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

RS-232C

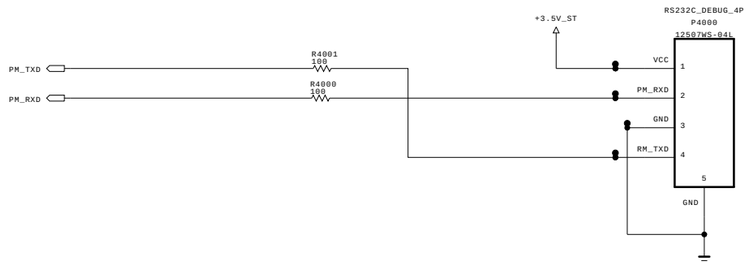

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/20
BLOCK	RS232C_4P_OS	SHEET	40 /

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

LVDS (EU)

[51Pin LVDS Connector] (For FHD 60Hz)

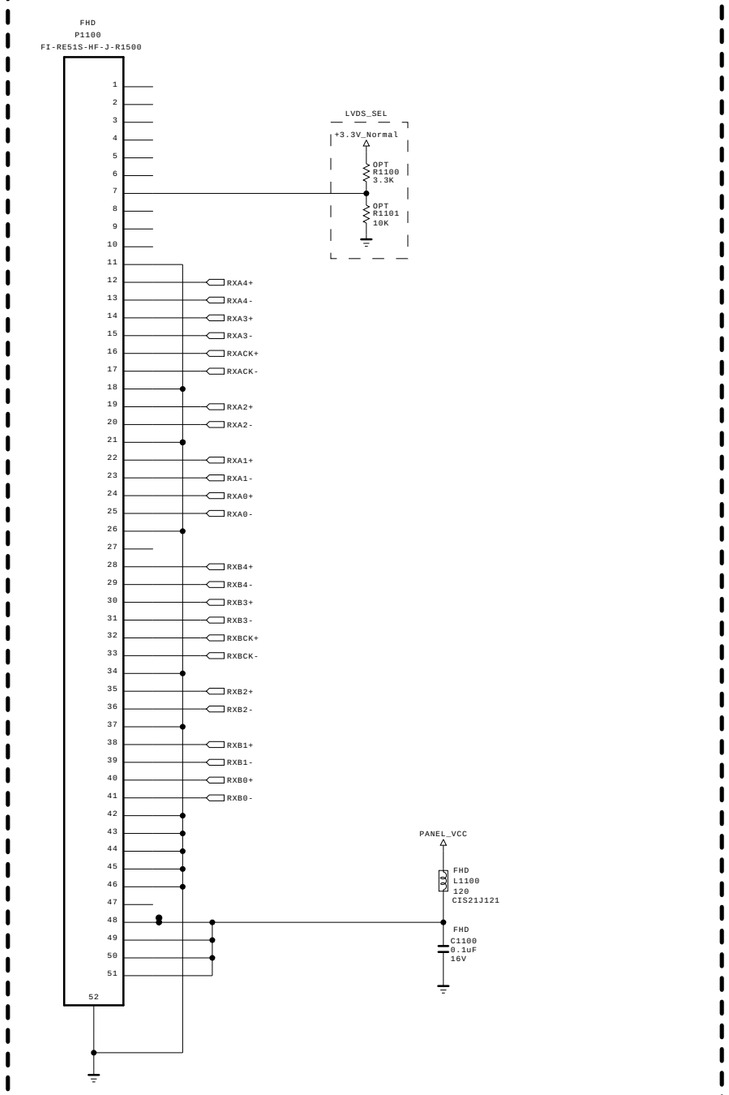

FOR FHD REVERSE(10bit) Change in S7LR

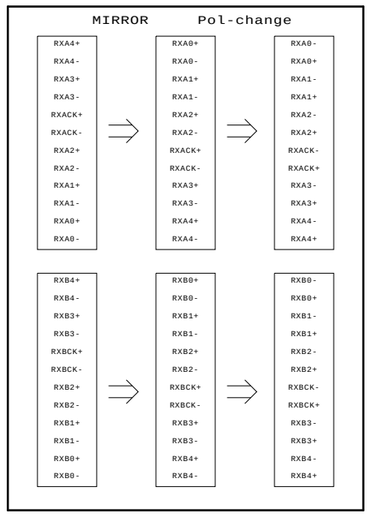
MIRROR
Pol-change
RXA4+ RXA4- RXA3+ RXA3- RXACK+ RXACK- RXA2+ RXA2- RXA1+ RXA1- RXA0+ RXA0-
RXA0+ RXA0- RXA1+ RXA1- RXA2+ RXA2- RXACK+ RXACK- RXA3+ RXA3- RXA4+ RXA4-
RXA0- RXA0+ RXA1- RXA1+ RXA2- RXA2+ RXACK- RXACK+ RXA3- RXA3+ RXA4- RXA4+
RXB4+ RXB4- RXB3+ RXB3- RXBCK+ RXBCK- RXB2+ RXB2- RXB1+ RXB1- RXB0+ RXB0-
RXB0+ RXB0- RXB1+ RXB1- RXB2+ RXB2- RXBCK+ RXBCK- RXB3+ RXB3- RXB4+ RXB4-
RXB0- RXB0+ RXB1- RXB1+ RXB2- RXB2+ RXBCK- RXBCK+ RXB3- RXB3+ RXB4- RXB4+

FOR FHD REVERSE(8bit) Change in S7LR

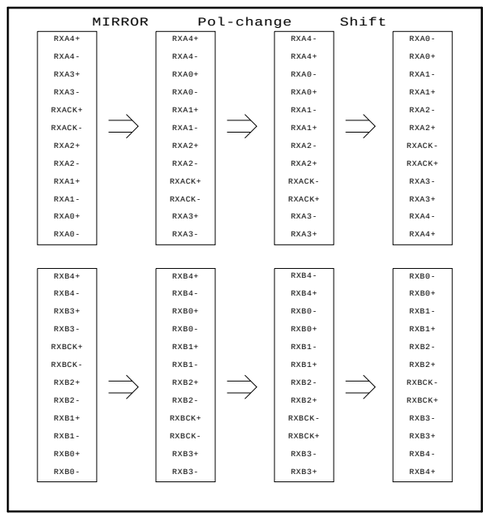
MIRROR
Pol-change
Shift
RXA4+ RXA4- RXA3+ RXA3- RXACK+ RXACK- RXA2+ RXA2- RXA1+ RXA1- RXA0+ RXA0-
RXA4+ RXA4- RXA0+ RXA0- RXA1+ RXA1- RXA2+ RXA2- RXACK+ RXACK- RXA3+ RXA3-
RXA4- RXA4+ RXA0- RXA0+ RXA1- RXA1+ RXA2- RXA2+ RXACK- RXACK+ RXA3- RXA3+
RXA0- RXA0+ RXA1- RXA1+ RXA2- RXA2+ RXACK- RXACK+ RXA3- RXA3+ RXA4- RXA4+
RXB4+ RXB4- RXB3+ RXB3- RXBCK+ RXBCK- RXB2+ RXB2- RXB1+ RXB1- RXB0+ RXB0-
RXB4+ RXB4- RXB0+ RXB0- RXB1+ RXB1- RXB2+ RXB2- RXBCK+ RXBCK- RXB3+ RXB3-
RXB4- RXB4+ RXB0- RXB0+ RXB1- RXB1+ RXB2- RXB2+ RXBCK- RXBCK+ RXB3- RXB3+
RXB0- RXB0+ RXB1- RXB1+ RXB2- RXB2+ RXBCK- RXBCK+ RXB3- RXB3+ RXB4- RXB4+

[30Pin LVDS Connector] (For HD 60Hz_Normal)

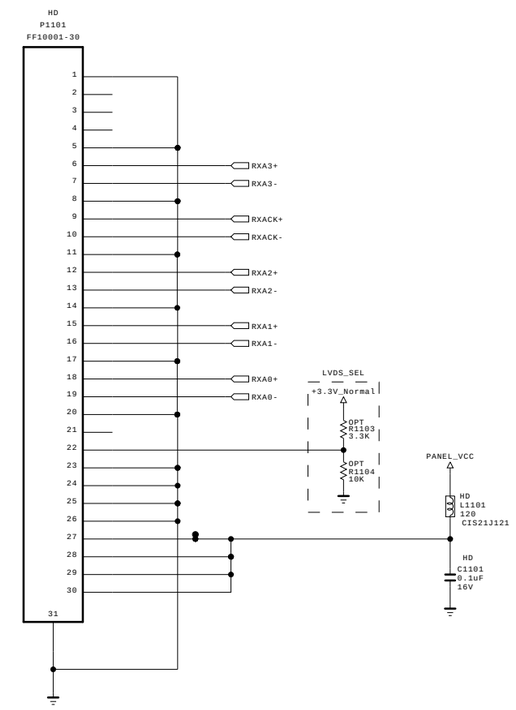

EU pin assign is different from NON EU.
Because of position of HD wafer.

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/22
BLOCK	LVDS_EU	SHEET	11

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

SCART / COMPONENT&COMPSIT

COMPONENT

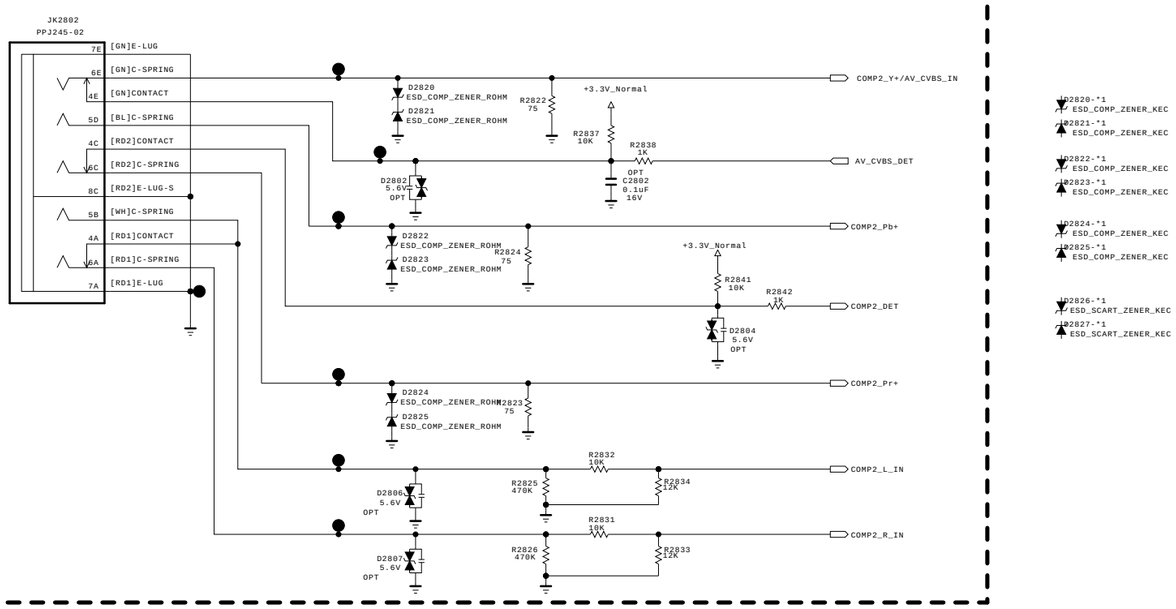

D2820-*1 ESD_COMP_ZENER_KEC
D2821-*1 ESD_COMP_ZENER_KEC
D2822-*1 ESD_COMP_ZENER_KEC
D2823-*1 ESD_COMP_ZENER_KEC
D2824-*1 ESD_COMP_ZENER_KEC
D2825-*1 ESD_COMP_ZENER_KEC
D2826-*1 ESD_SCART_ZENER_KEC
D2827-*1 ESD_SCART_ZENER_KEC

SCART AMP

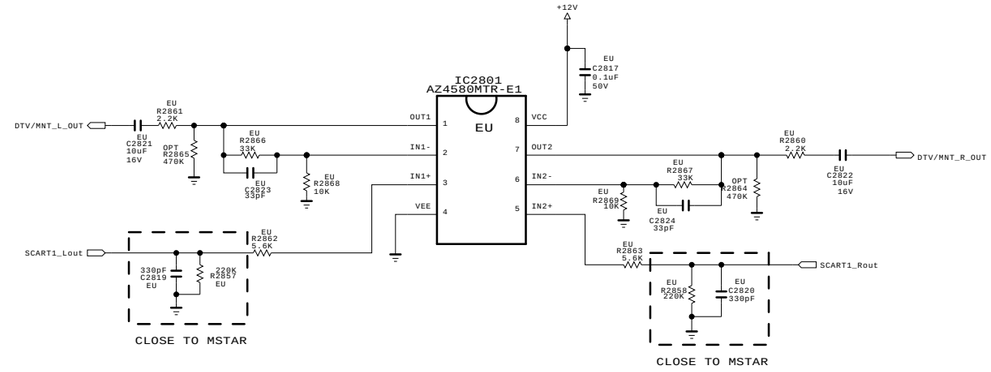

FULL SCART

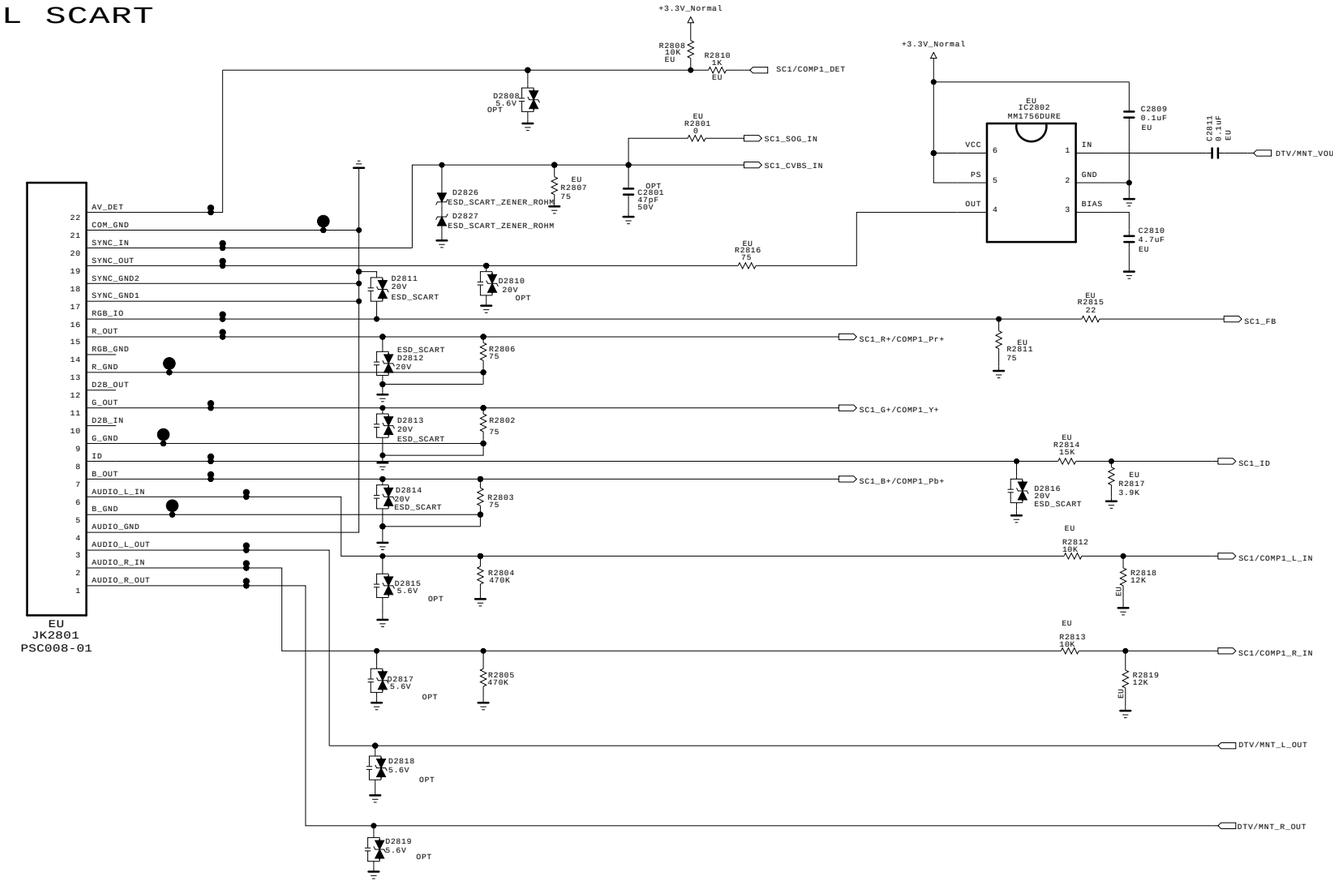

[SCART AUDIO MUTE]

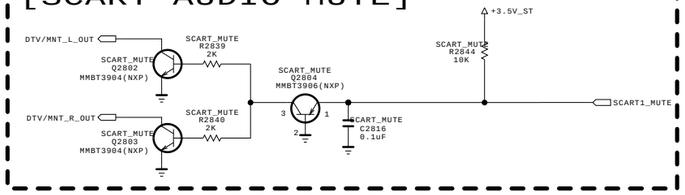

THE ⚠ SYMBOL MARK OF THIS SCHEMETIC DIAGRAM INCORPORATES SPECIAL FEATURES IMPORTANT FOR PROTECTION FROM X-RADIATION. FILRE AND ELECTRICAL SHOCK HAZARDS, WHEN SERVICING IF IS ESSENTIAL THAT ONLY MANUFATURES SPECFIED PARTS BE USED FOR THE CRITICAL COMPONENTS IN THE ⚠ SYMBOL MARK OF THE SCHEMETIC.

SECRET
LGElectronics

LG ELECTRONICS

MODEL	NC4_S7LRM	DATE	2012/06/19
BLOCK	REAR_JACK_EU	SHEET	28

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

LG
Life's Good

LCD TV	Error symptom	A. Video error	Established date	2013. 01 .09	
		No video/ Normal audio	Revised date		1/14

First of all, Check whether all of cables between board is inserted properly or not.
(Main B/D↔ Power B/D, LVDS Cable,Speaker Cable,IR B/D Cable,,,)

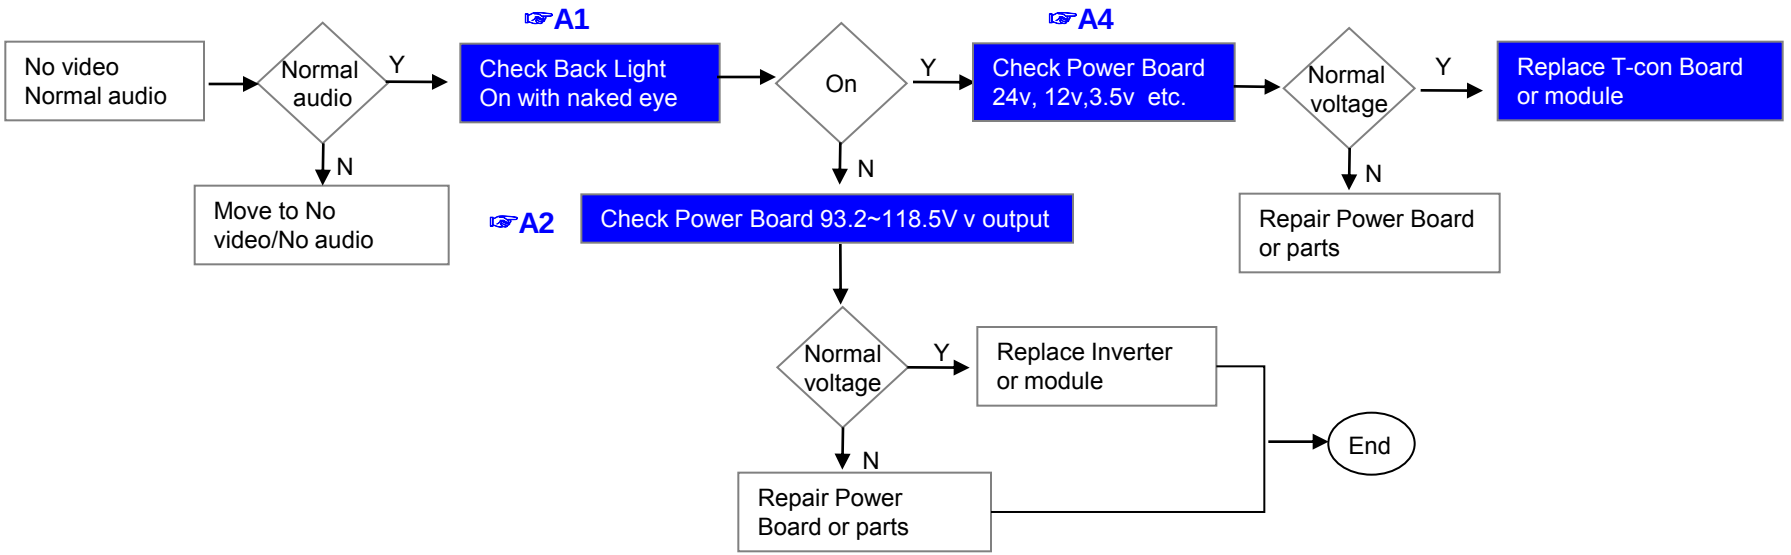

※Precaution ☞A6 & A3

Always check & record S/W Version and White Balance value before replacing the Main Board
Replace Main Board
Re-enter White Balance value

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	A. Video error	Established date	2013. 01 .09	
		No video/ No audio	Revised date		2/14

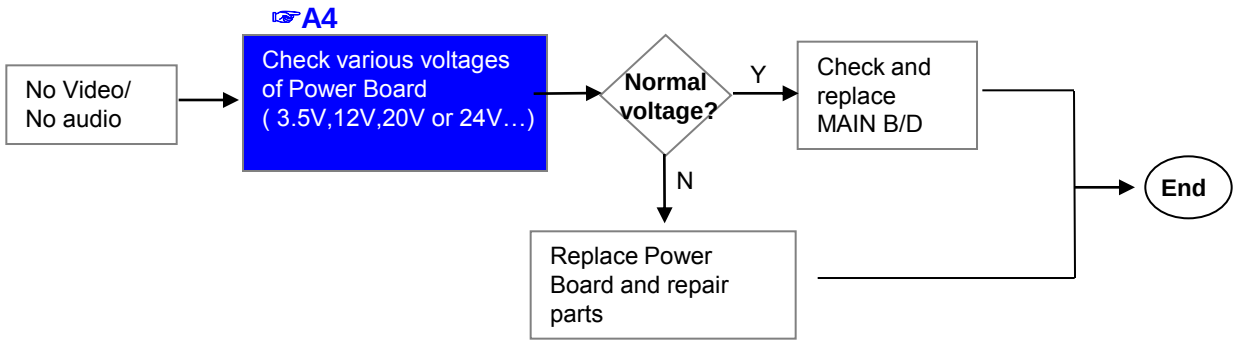

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	A. Video error	Established date	2013. 01 .09	
		Picture broken/ Freezing	Revised date		3/14

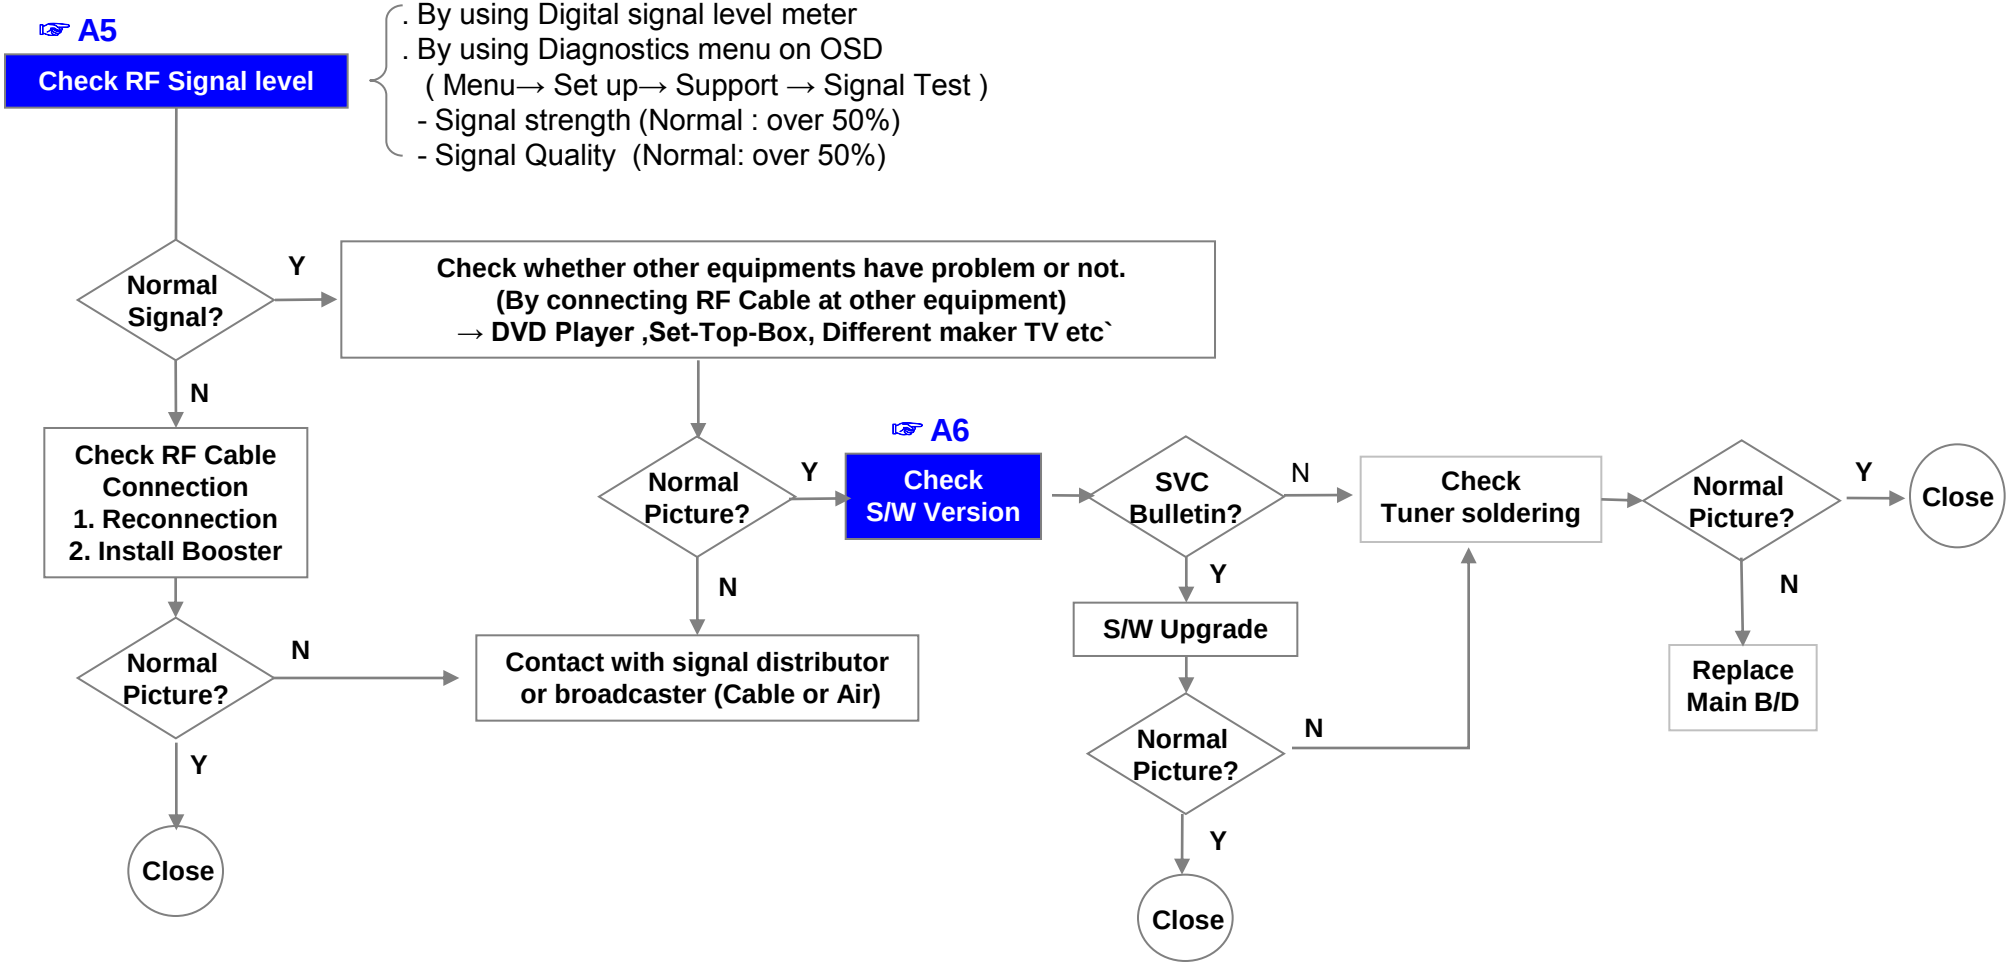

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	A. Video error	Established date	2013. 01 .09	
		Tuning fail, Picture broken/ Freezing	Revised date		4/14

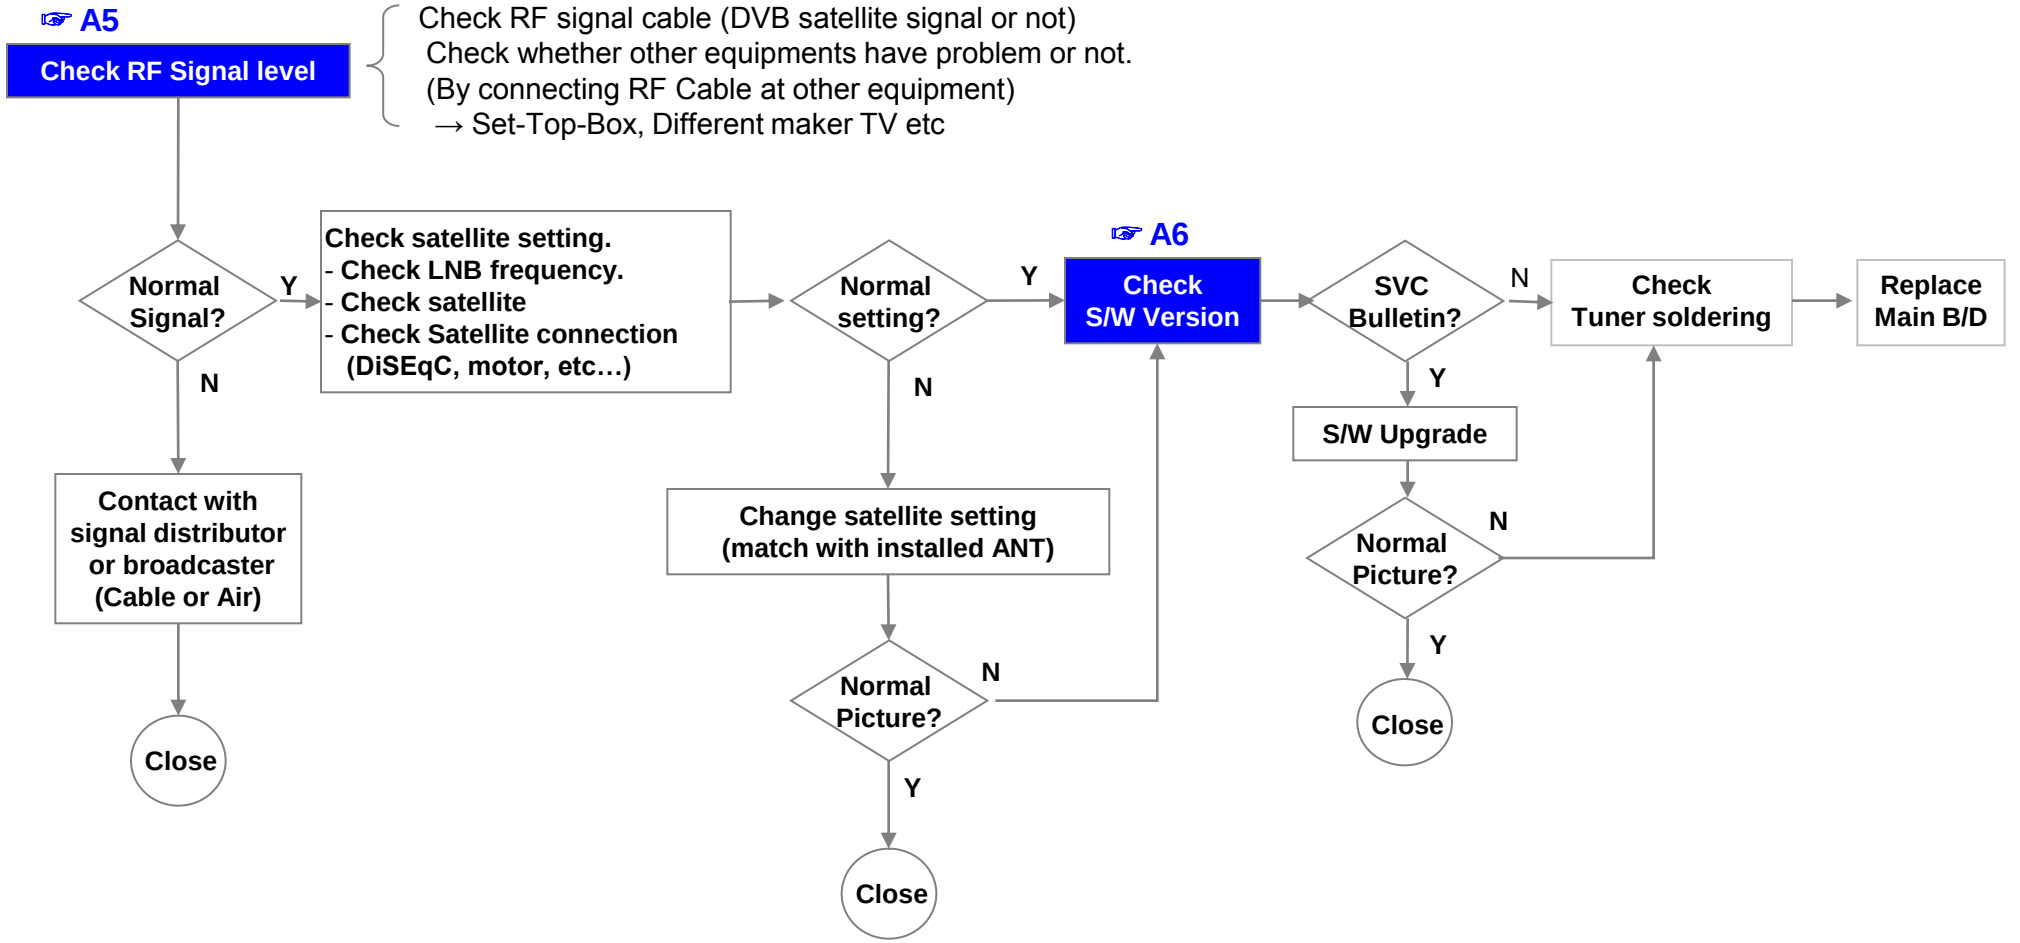

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	A. Video error	Established date	2013. 01 .09	
		Color error	Revised date		5/14

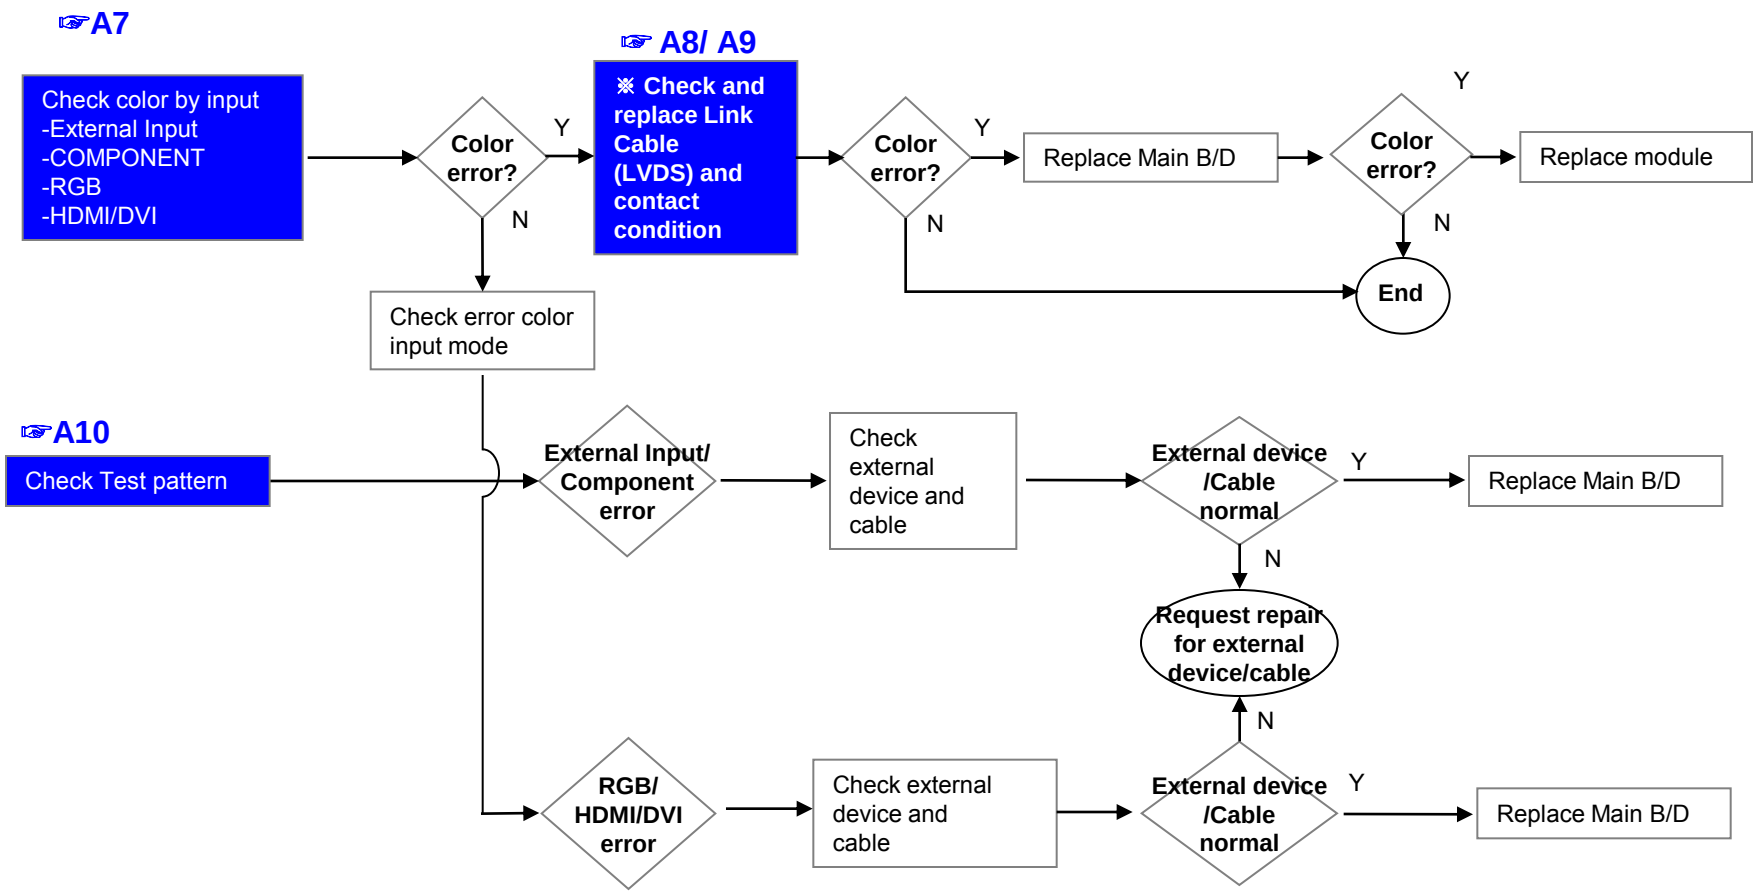

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	A. Video error	Established date	2013. 01 .09	
		Vertical / Horizontal bar, residual image, light spot, external device color error	Revised date		6/14

Vertical/Horizontal bar, residual image, light spot

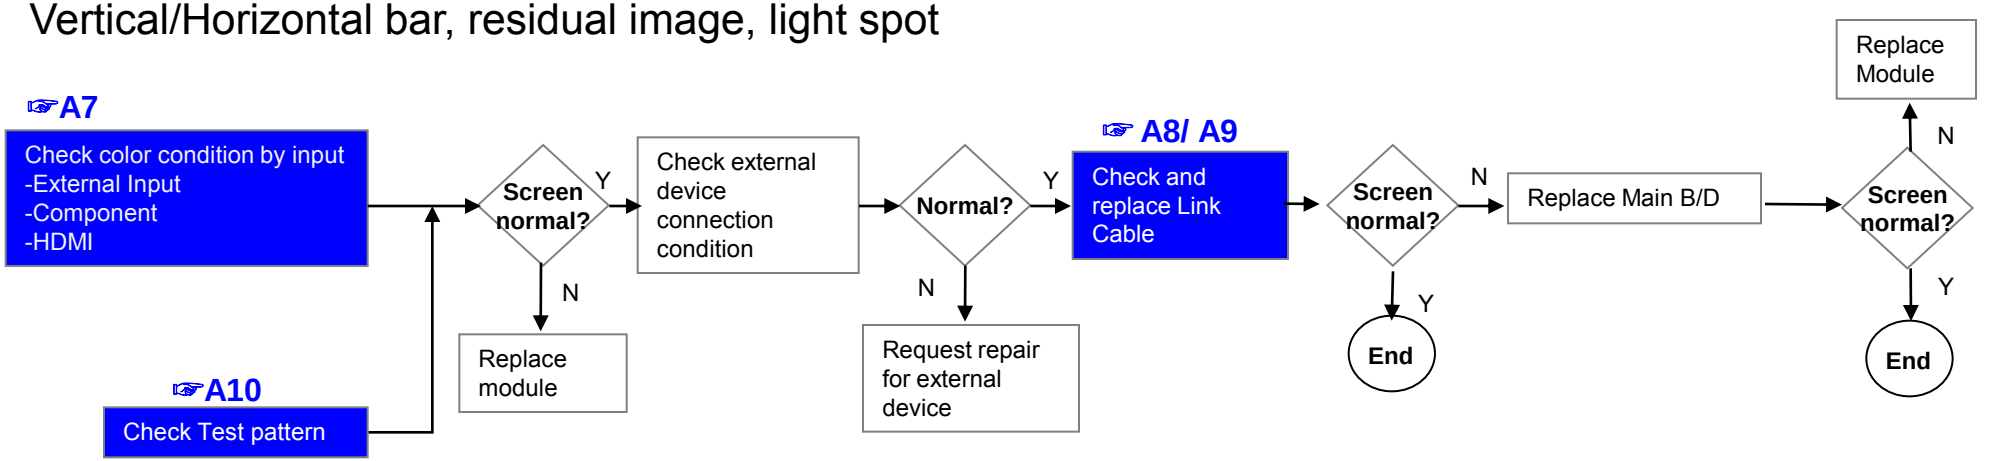

External device screen error-Color error

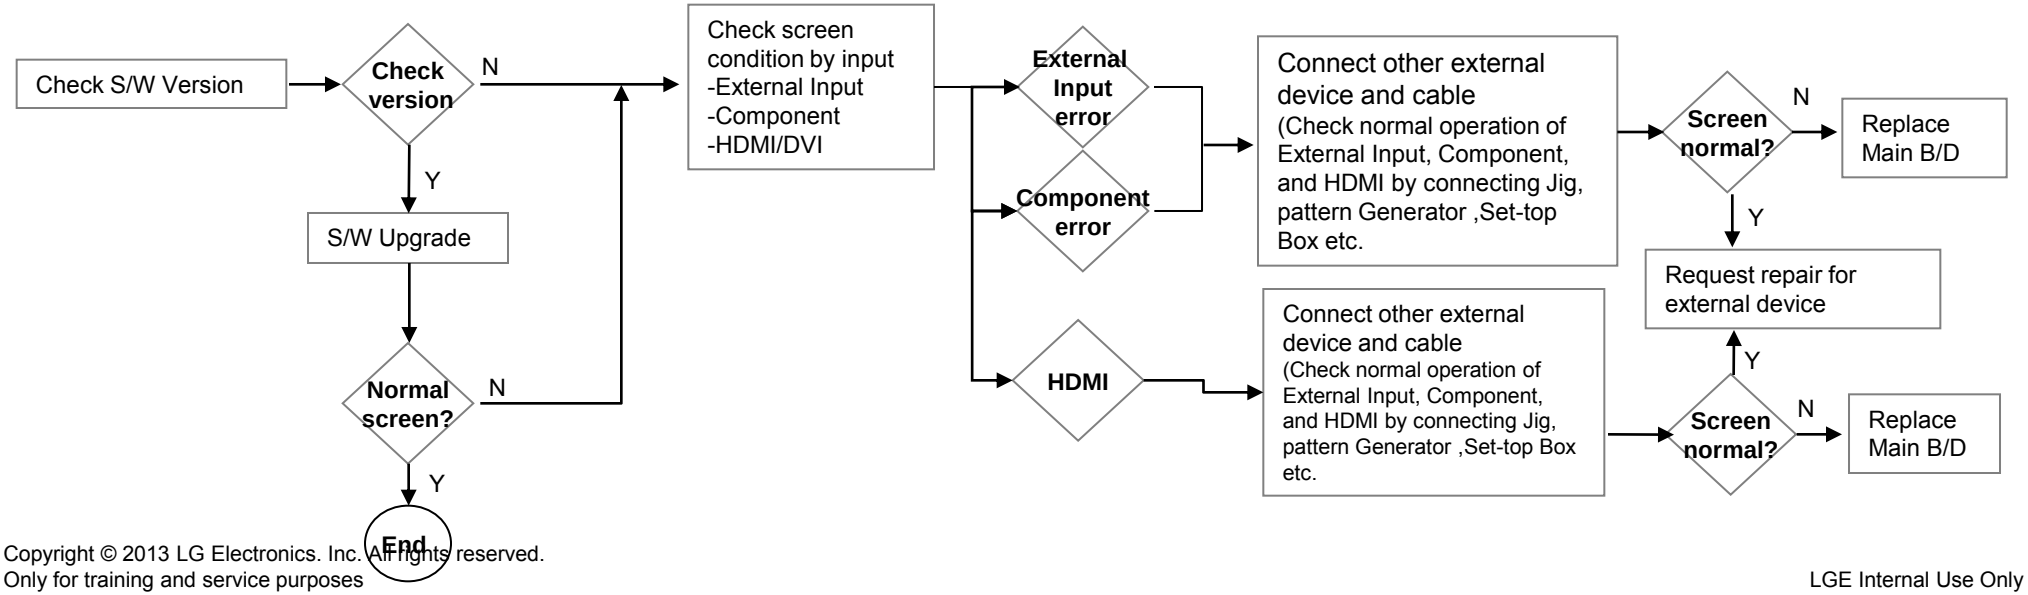

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	B. Power error	Established date	2013. 01 .09	
		No power	Revised date		7/14

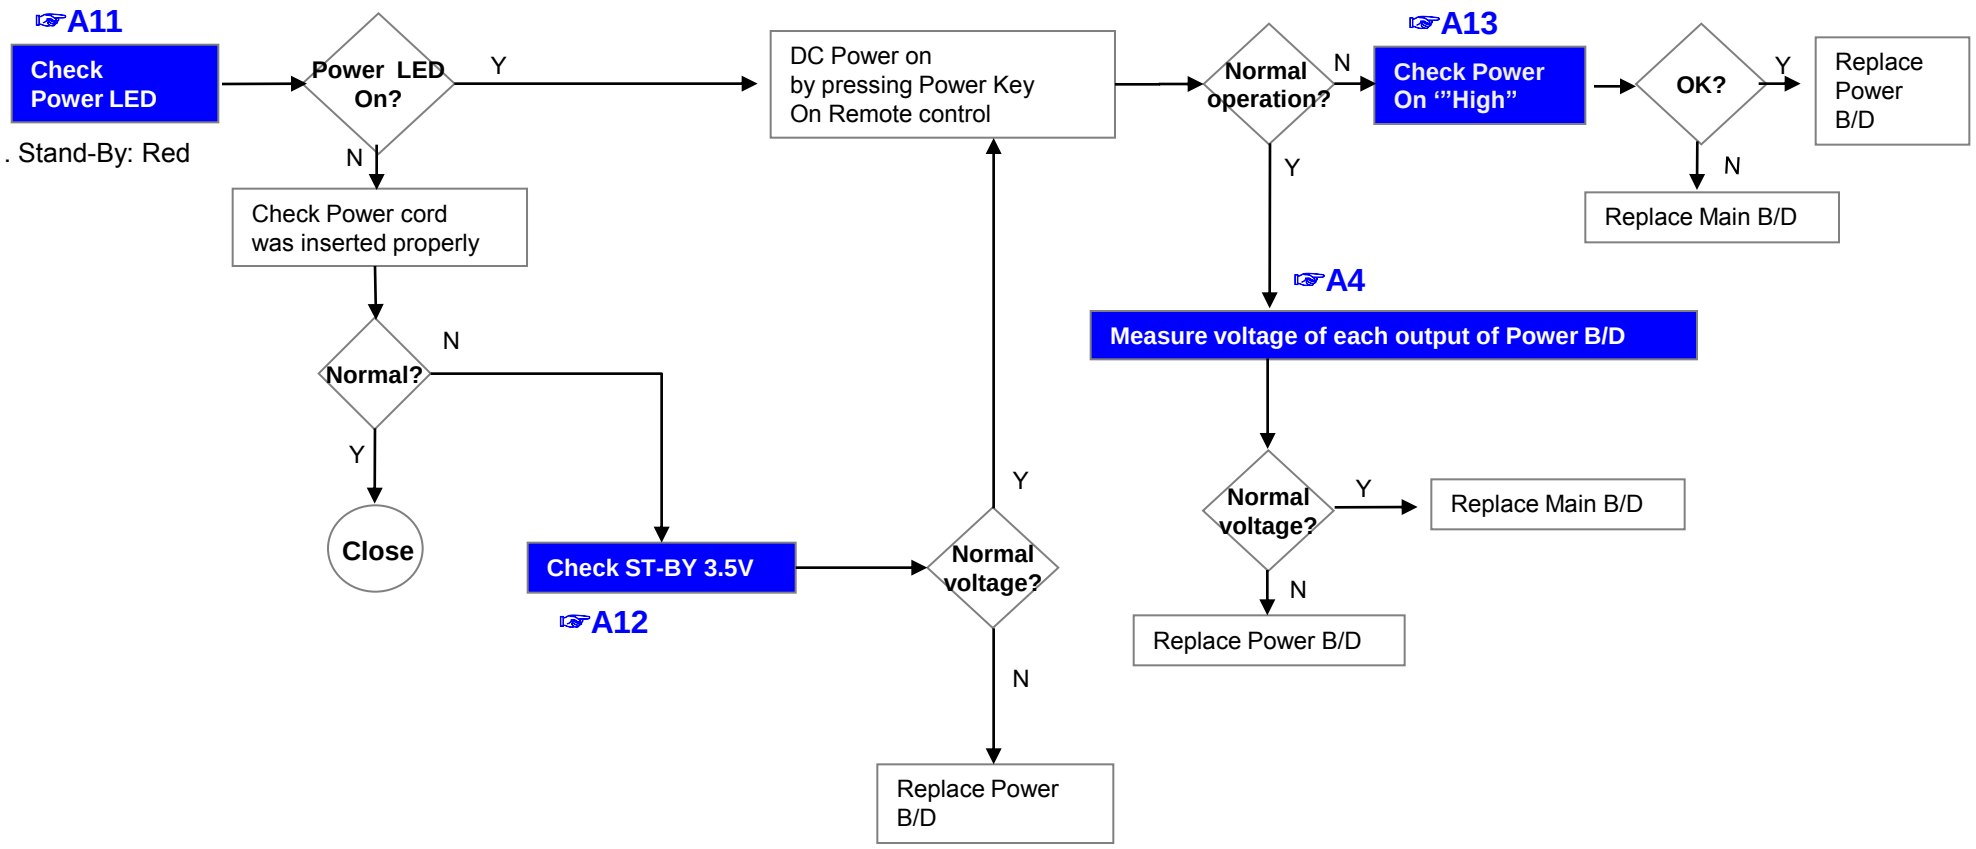

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	B. Power error	Established date	2013. 01 .09	
		Off when on, off while viewing, power auto on/off	Revised date		8/14

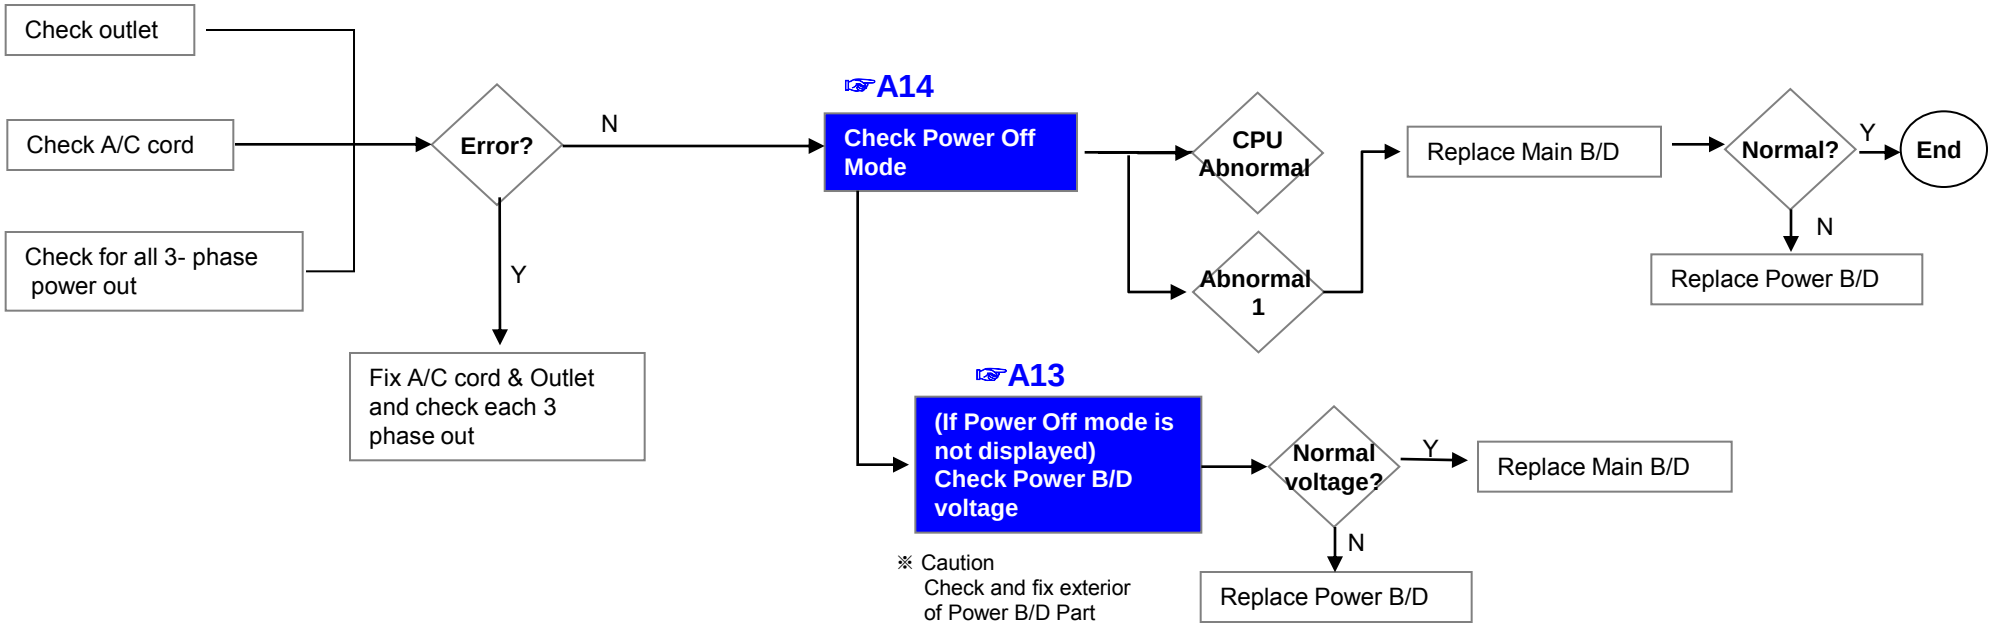

*** Please refer to the all cases which can be displayed on power off mode.**

Status	Power off List	Explanation
Normal	"POWEROFF_REMOTEKEY"	Power off by REMOTE CONTROL
	"POWEROFF_OFFTIMER"	Power off by OFF TIMER
	"POWEROFF_SLEEPTIMER"	Power off by SLEEP TIMER
	"POWEROFF_INSTOP"	Power off by INSTOP KEY
	"POWEROFF_AUTOOFF"	Power off by AUTO OFF
	"POWEROFF_ONTIMER"	Power off by ON TIMER
	"POWEROFF_RS232C"	Power off by RS232C
	"POWEROFF_SWDOWN"	Power off by S/W Download
	"POWEROFF_UNKNOWN"	Power off by unknown status except listed case
Abnormal	"POWEROFF_ABNORMAL1"	Power off by abnormal status except CPU trouble
	"POWEROFF_CPUABNORMAL"	Power off by CPU Abnormal

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	C. Audio error	Established date	2013. 01 .09	
		No audio/ Normal video	Revised date		9/14

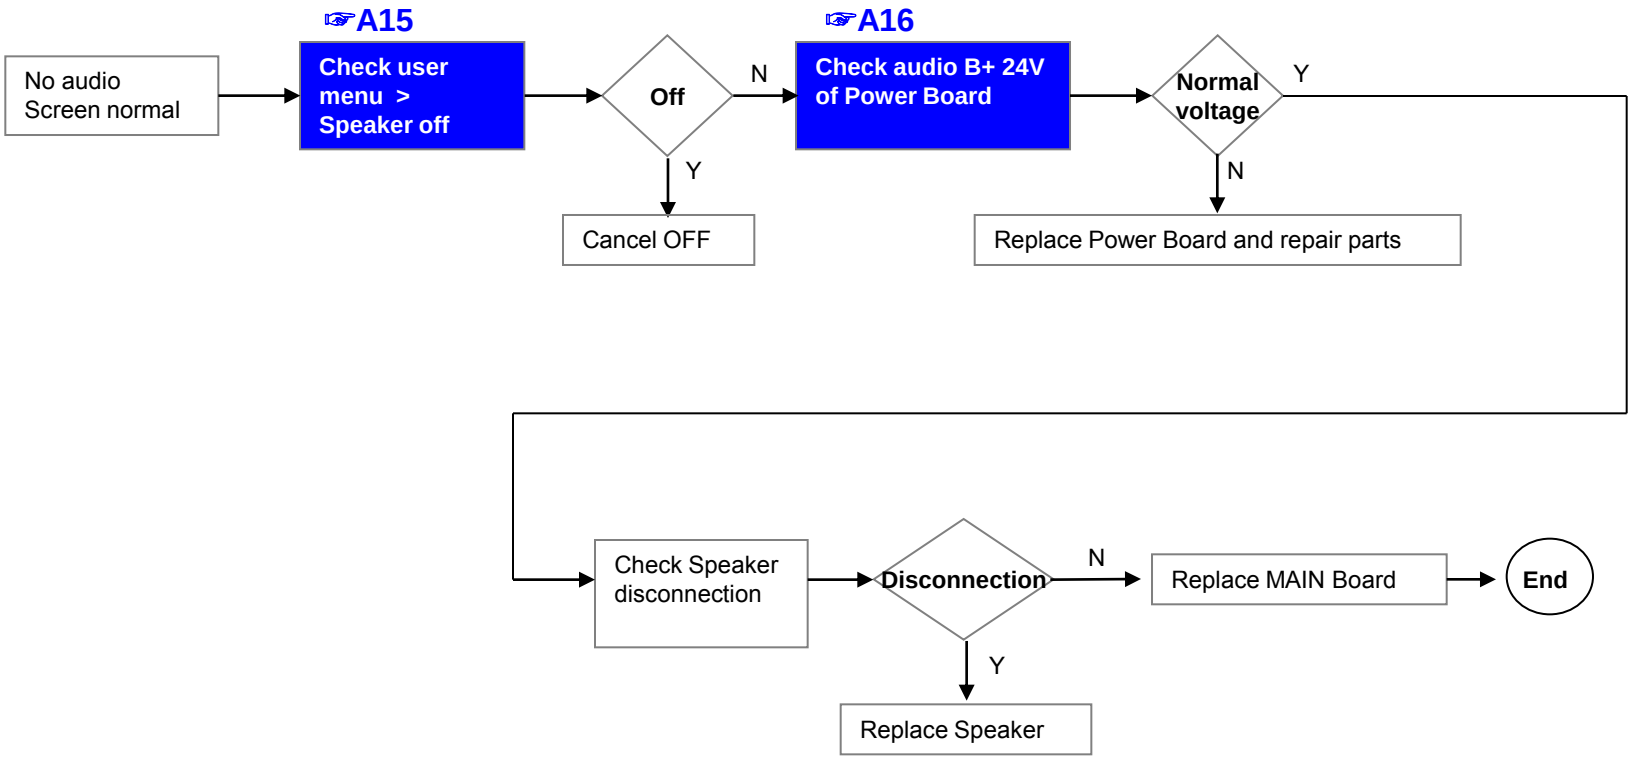

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	C. Audio error	Established date	2013. 01 .09	
		Wrecked audio/ discontinuation/noise	Revised date		10/14

→ abnormal audio/discontinuation/noise is same after "Check input signal" compared to No audio

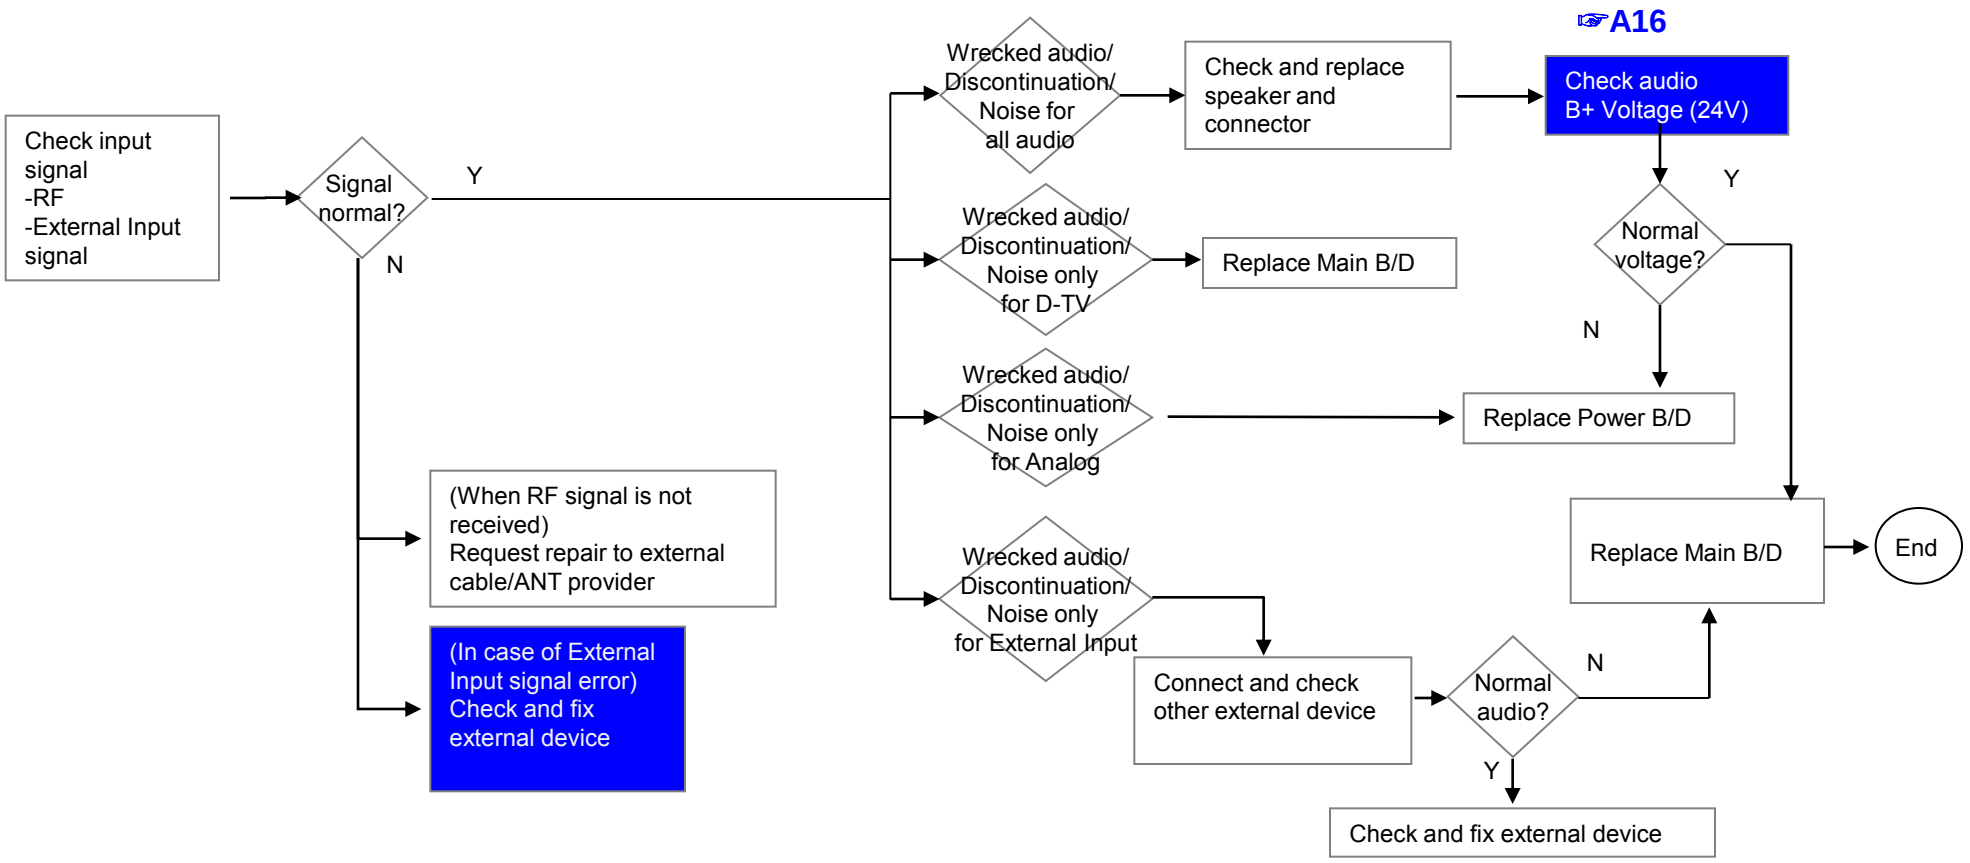

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	D. Function error	Established date	2013. 01 .09	
		Remote control & Local switch checking	Revised date		11/14

1. Remote control(R/C) operating error

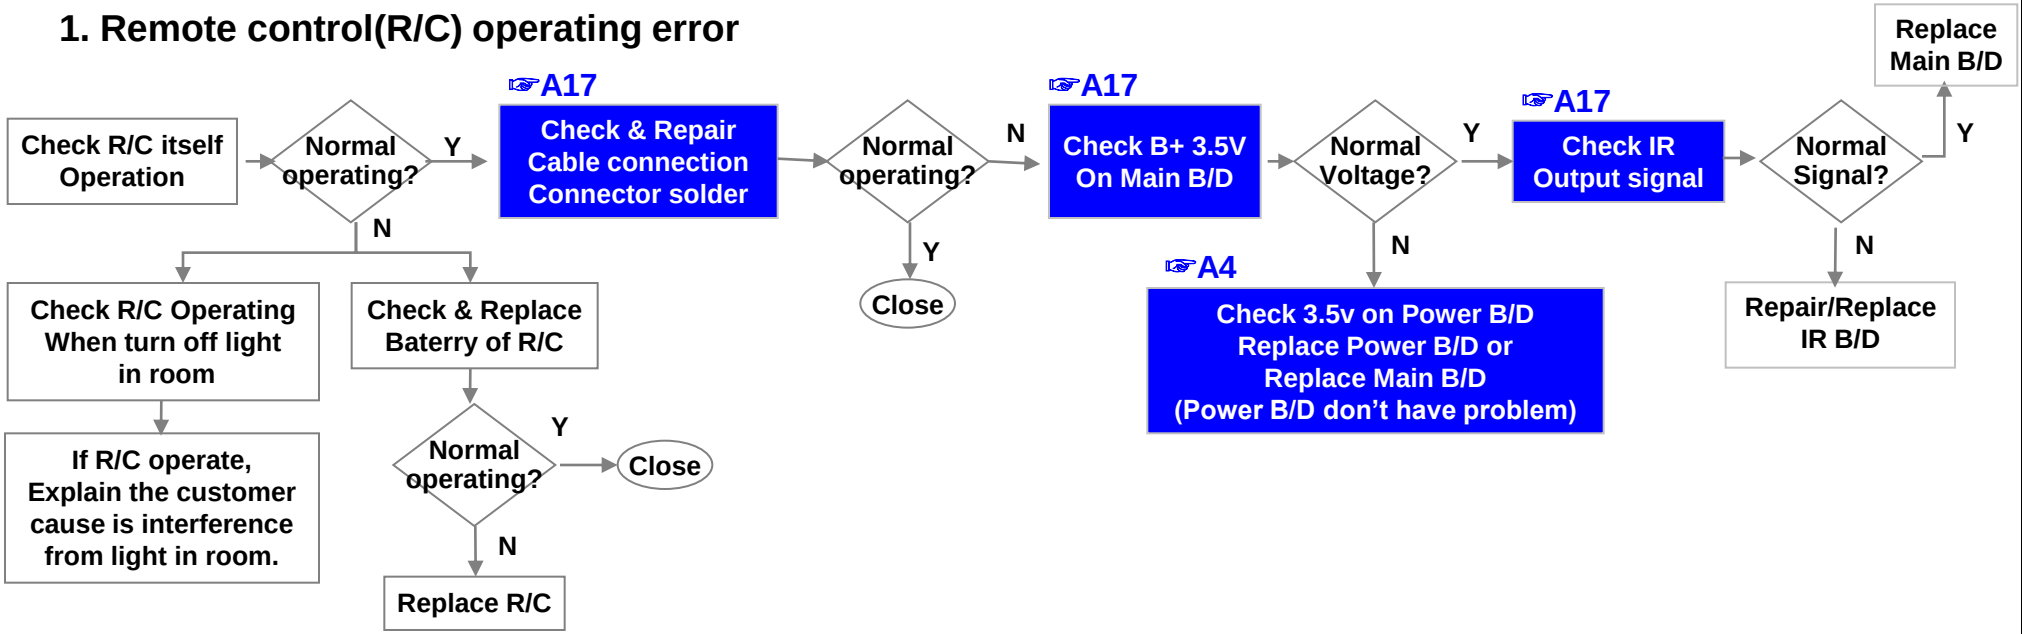

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	D. Function error	Established date	2013. 01 .09	
		External device recognition error	Revised date		12/14

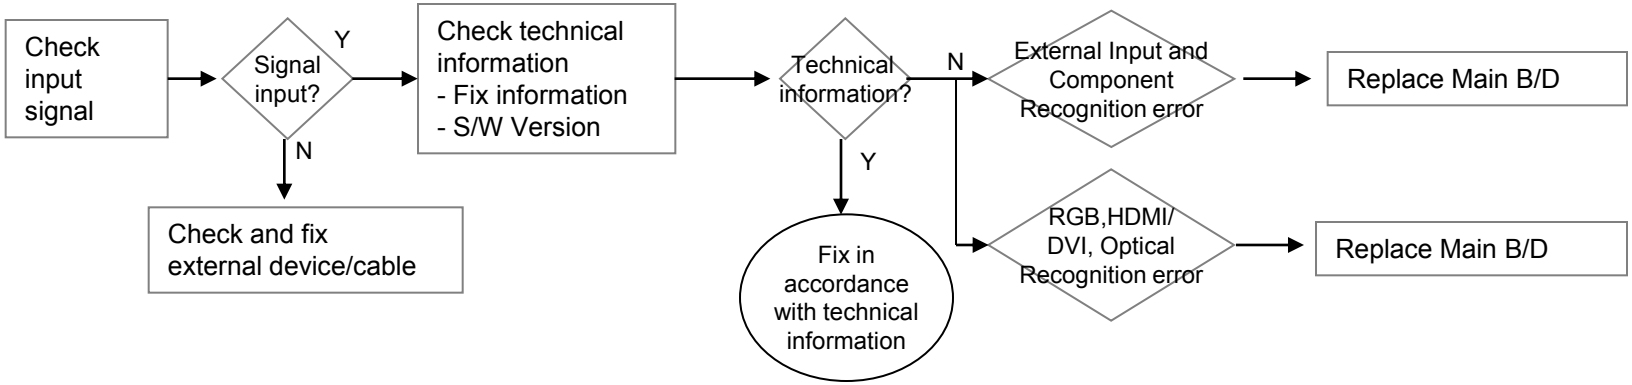

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	E. Noise	Established date	2013. 01 .09	
		Circuit noise, mechanical noise	Revised date		13/14

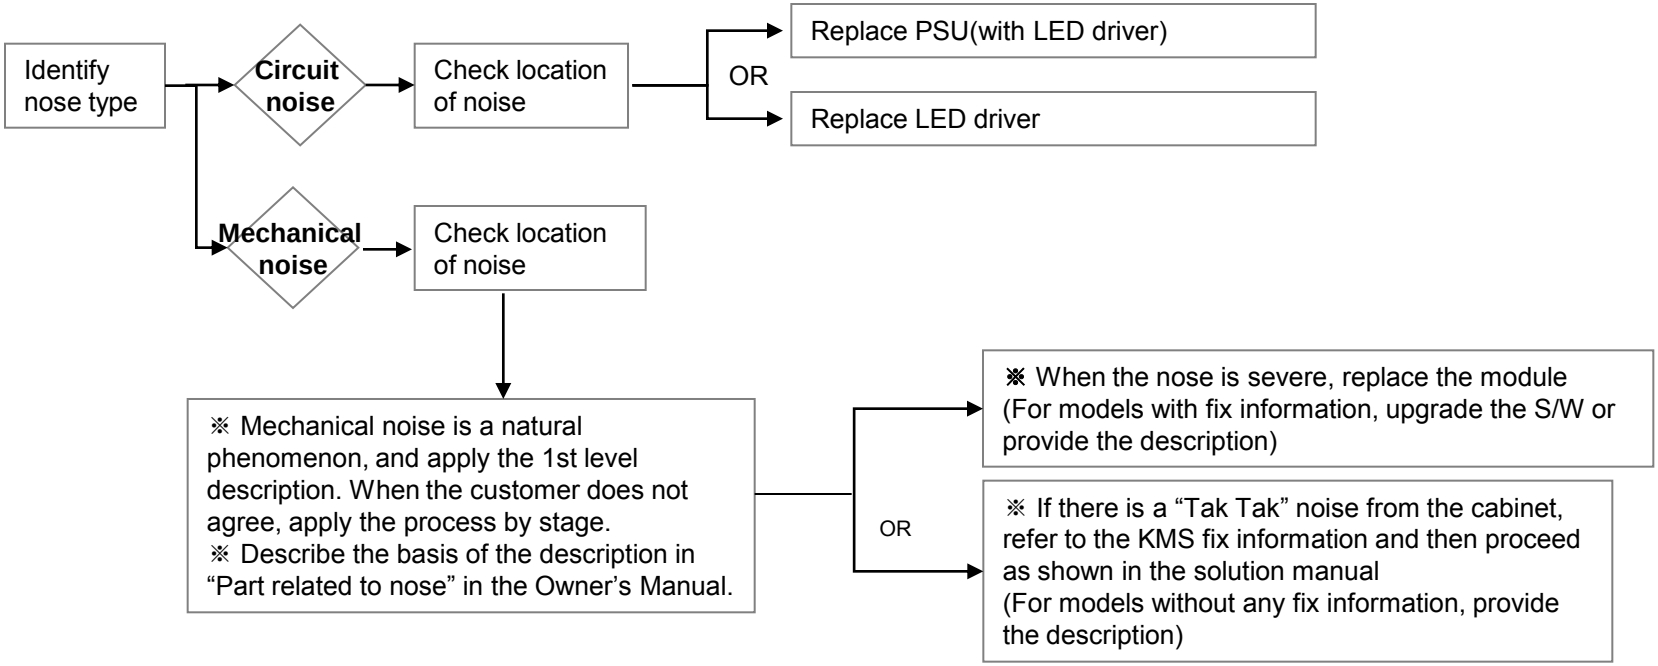
Identify nose type
Circuit noise
Check location of noise
OR
Replace PSU(with LED driver)
Replace LED driver
Mechanical noise
Check location of noise
※ Mechanical noise is a natural phenomenon, and apply the 1st level description. When the customer does not agree, apply the process by stage.
※ Describe the basis of the description in “Part related to nose” in the Owner’s Manual.
OR
※ When the nose is severe, replace the module (For models with fix information, upgrade the S/W or provide the description)
※ If there is a “Tak Tak” noise from the cabinet, refer to the KMS fix information and then proceed as shown in the solution manual (For models without any fix information, provide the description)

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

LCD TV	Error symptom	F. Exterior defect	Established date	2013. 01 .09	
		Exterior defect	Revised date		14/14

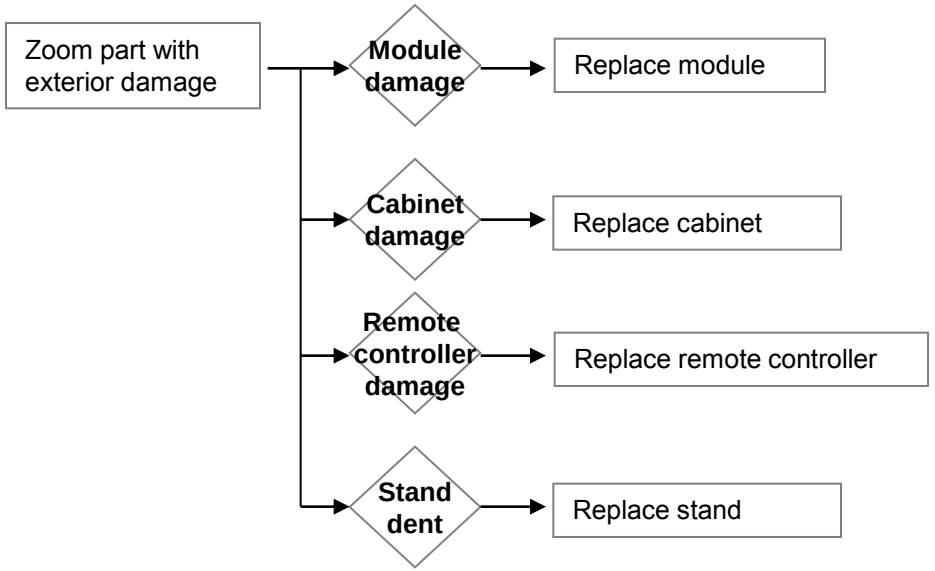

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Contents of LCD TV Standard Repair Process Detail Technical Manual

No.	Error symptom	Content	Page	Remarks
1	A. Video error_ No video/Normal audio	Check LCD back light with naked eye	A1	
2		LED driver B+ measuring method	A2	
3		Check White Balance value	A3	
4		Power Board voltage measuring method	A4	
6	A. Video error_ No video/Video lag/stop	TUNER input signal strength checking method	A5	
7		LCD-TV Version checking method	A6	
9	A. Video error_Color error	LCD TV connection diagram	A7	
10		Check Link Cable (LVDS) reconnection condition	A8 A9	
11		Adjustment Test pattern - ADJ Key	A10	
12				
13	A. Video error_Vertical/Horizontal bar, residual image, light spot	LCD TV connection diagram	A8	
14		Check Link Cable (LVDS) reconnection condition	A8 A9	
15		Adjustment Test pattern - ADJ Key	A10	
16	<Appendix> Defected Type caused by T-Con/ Inverter/ Module	Exchange T-Con Board (1)	A-1/5	
17		Exchange T-Con Board (2)	A-2/5	
18		Exchange LED driver Board (PSU)	A-3/5	
19		Exchange Module itself (1)	A-4/5	
20		Exchange Module itself (2)	A-5/5	

Continue to the next page

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

Contents of LCD TV Standard Repair Process Detail Technical Manual

Continued from previous page

No.	Error symptom	Content	Page	Remarks
21	B. Power error_No power	Check front display LED	A11	
22		Check power input Voltage & ST-BY 3.5V	A12	
23		Checking method when power is ON	A13	
24		POWER BOARD voltage measuring method	A4	
25				
26	B. Power error_Off when on, off while viewing	POWER OFF MODE checking method	A14	
28	C. Audio error_No audio/Normal video	Checking method in menu when there is no audio	A15	
29		Voltage and speaker checking method when there is no audio	A16	
30	C. Audio error_Wrecked audio/discontinuation	Voltage and speaker checking method in case of audio error	A16	
31	D. Function error_ No response in remote controller, key error	Remote controller operation checking method	A17	

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	A. Video error_No video/Normal audio	Established date	2013. 01 .09	
	Content	Check Back Light On with naked eye	Revised date		A1

<ALL MODELS>

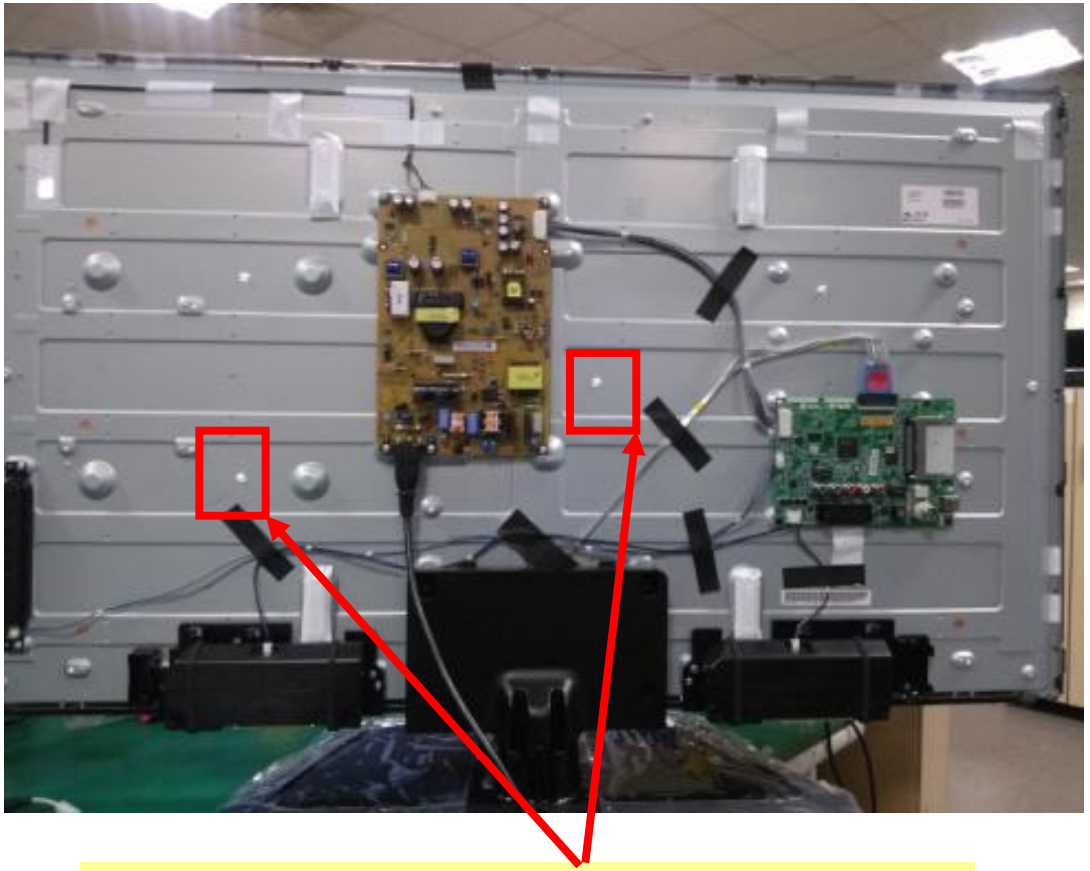

Power On -> disjoint back case -> check lighting at 2 points.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	A. Video error_No video/Normal audio	Established date	2013. 01 .09	
	Content	Inverter B+ 24V measuring method	Revised date		A2

<ALL MODELS>

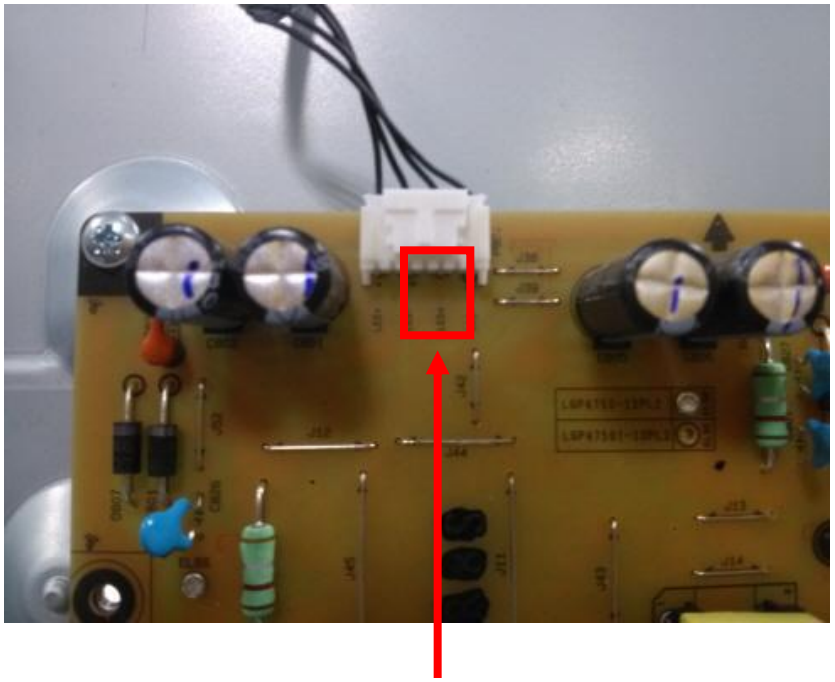

Measure DC **93.2~118.5V** applying to Module from Power Board.

Output 93.2~118.5V from Power Board -> supply to Module.
Check Pin contacting statement and connection statement.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	A. Video error_No video/Normal audio	Established date	2013. 01 .09	
	Content	Check White Balance value	Revised date		A3

<ALL MODELS>

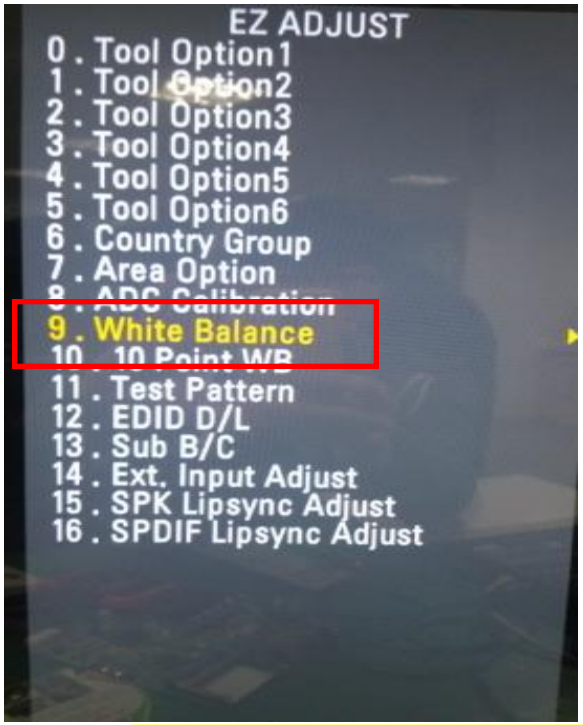
EZ ADJUST
0 . Tool Option1
1 . Tool Option2
2 . Tool Option3
3 . Tool Option4
4 . Tool Option5
5 . Tool Option6
6 . Country Group
7 . Area Option
9 . White Balance
11 . Test Pattern
12 . EDID D/L
13 . Sub B/C
14 . Ext. Input Adjust
15 . SPK Lipsync Adjust
16 . SPDIF Lipsync Adjust

Entry method

1. Press the ADJ button on the remote controller for adjustment.

2. Enter into White Balance of item 7.

3. After recording the R, G, B (GAIN, Cut) value of Color Temp (Cool/Medium/Warm), re-enter the value after replacing the MAIN BOARD.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

LCD TV	Error symptom	A. Video error_No video/ Audio	Established date	2013. 01 .09	
	Content	Power Board voltage measuring method	Revised date		A4

Edge LED

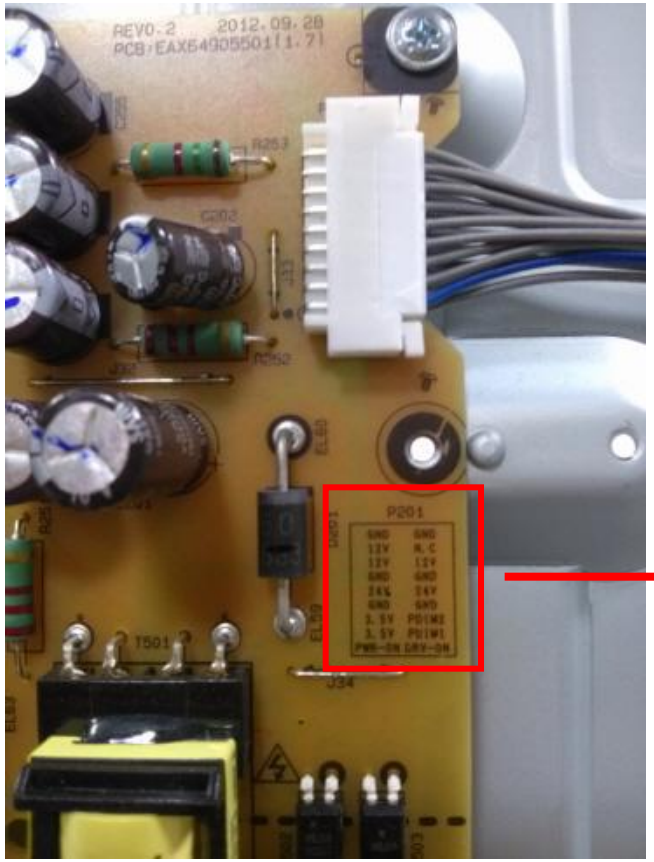

Check the DC 24V, 12V, 3.5V.

18 Pin (Power Board ↔ Main Board) – Common			
1	Power on	2	DRV ON
3	3.5V	4	PDIM#1
5	3.5V	6	PDIM#2
7	GND	8	GND
9	24V	10	24V
11	GND	12	GND
13	12V	14	12V
15	12V	16	N.C
17	GND	18	GND

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	A. Video error_Video error, video lag/stop	Established date	2013. 01 .09	
	Content	TUNER input signal strength checking method	Revised date		A5

<ALL MODELS>

MENU => Press red key Remote controller=>signal test => Select channel

When the signal is strong, use the attenuator (-10dB, -15dB, -20dB etc.)

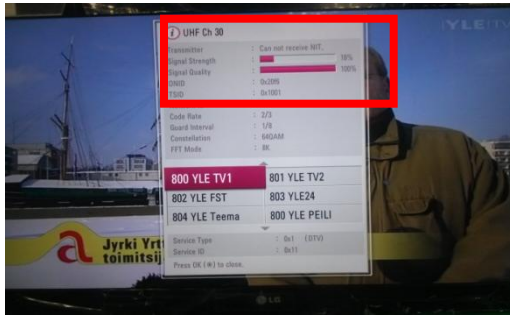

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	A. Video error_Video error, video lag/stop	Established date	2013. 01 .09	
	Content	LCD-TV Version checking method	Revised date		A6

<ALL MODELS>

1. Checking method for remote controller for adjustment

Version

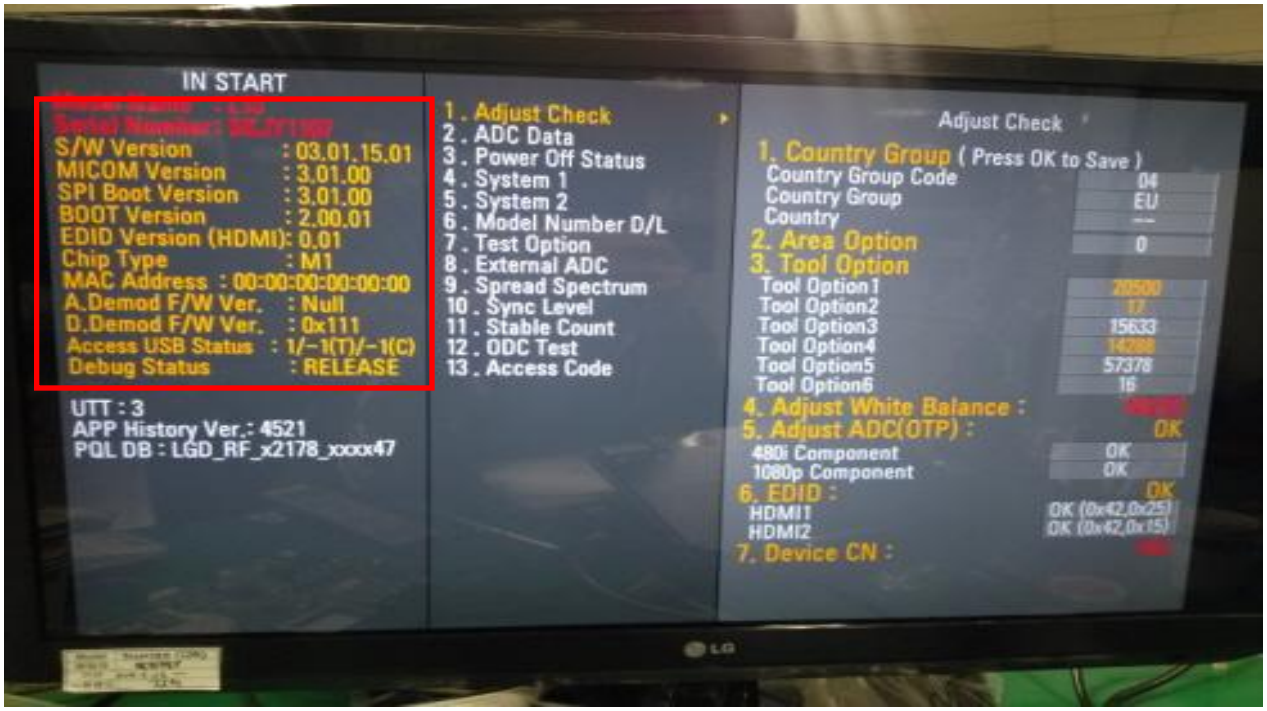

Press the IN-START with the remote controller for adjustment

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	A. Video error _Vertical/Horizontal bar, residual image, light spot	Established date	2013. 01 .09	
	Content	LCD TV connection diagram (1)	Revised date		A7

<ALL MODELS>

As the part connecting to the external input, check the screen condition by signal

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	A. Video error_Color error	Established date	2013. 01 .09	
	Content	Check and replace Link Cable(LVDS) and contact condition	Revised date		A8/A9

<ALL MODELS>

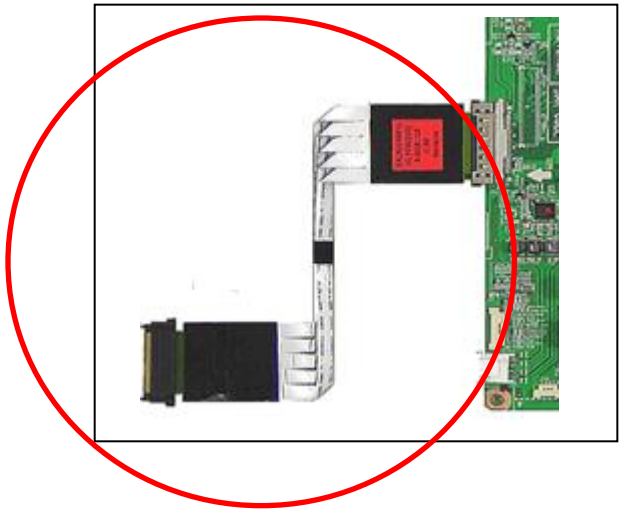

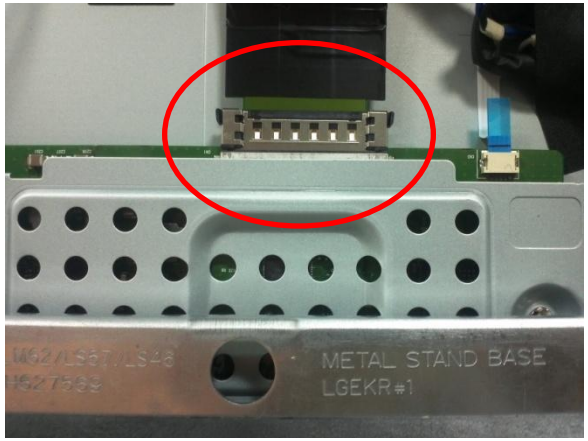

1. Check and replace LVDS Cable
2. Check LVDS connection condition

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	A. Video error_Color error	Established date	2013. 01 .09	
	Content	Adjustment Test pattern - ADJ Key	Revised date		A10

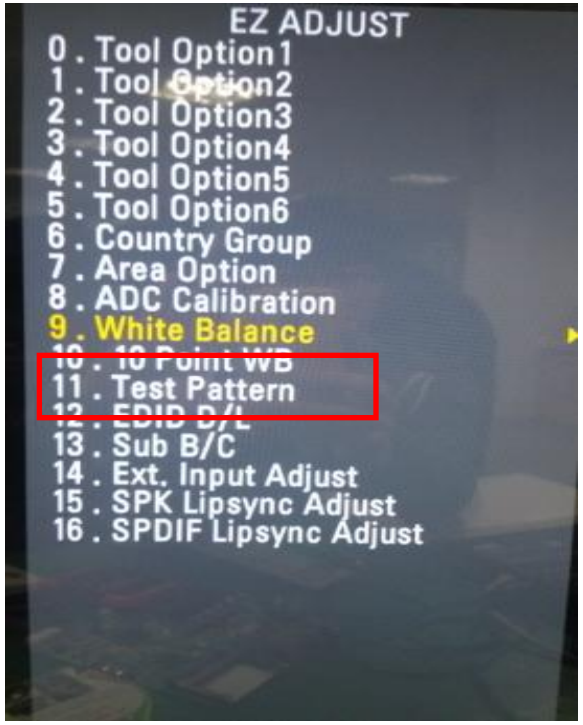
EZ ADJUST
0 . Tool Option1
1 . Tool Option2
2 . Tool Option3
3 . Tool Option4
4 . Tool Option5
5 . Tool Option6
6 . Country Group
7 . Area Option
8 . ADC Calibration
9 . White Balance
11 . Test Pattern
13 . Sub B/C
14 . Ext. Input Adjust
15 . SPK Lipsync Adjust
16 . SPDIF Lipsync Adjust

You can view 6 types of patterns using the ADJ Key

Checking item : 1. Defective pixel 2. Residual image 3. MODULE error (ADD-BAR,SCAN BAR..)
4.Video error (Classification of MODULE or Main-B/D!)

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

Appendix : Exchange T-Con Board (1)

Solder defect, CNT Broken

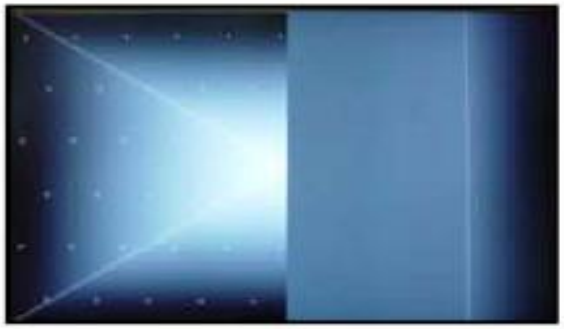

Solder defect, CNT Broken

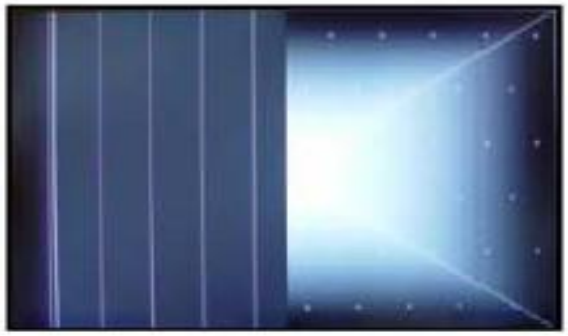

Solder defect, CNT Broken

Solder defect, CNT Broken

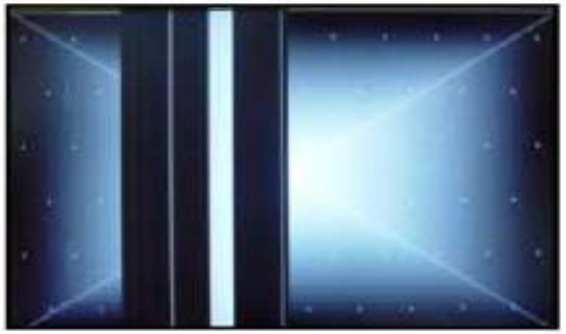

Solder defect, CNT Broken

Abnormal Power Section

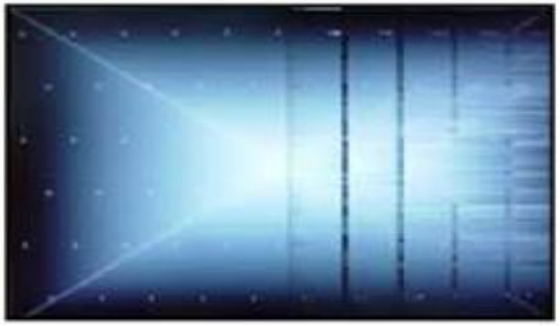

Solder defect, Short/Crack

Abnormal Power Section

Solder defect, Short/Crack

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Appendix : Exchange T-Con Board (2)

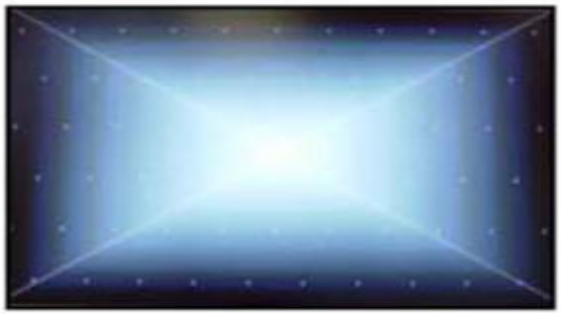

Abnormal Power Section

Abnormal Power Section

Solder defect, Short/Crack

Solder defect, Short/Crack

Fuse Open, Abnormal power section

Abnormal Display

GRADATION

Noise

GRADATION

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Appendix : Exchange PSU(LED driver)

No Light

Dim Light

Dim Light

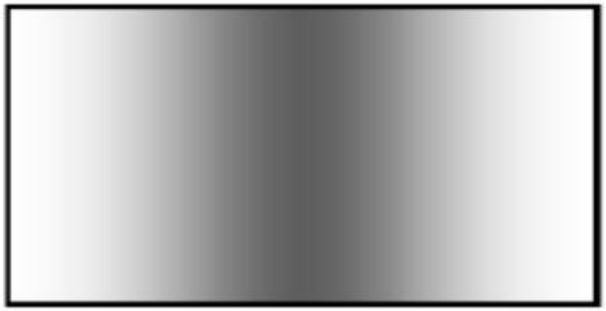

Dim Light

No picture/Sound Ok

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Appendix : Exchange the Module (1)

Panel Mura, Light leakage

Panel Mura, Light leakage

Press damage

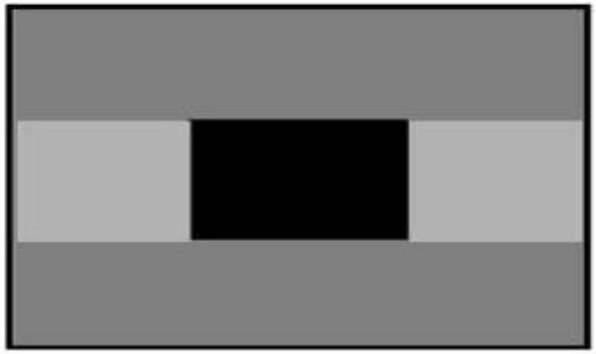

Crosstalk

Press damage

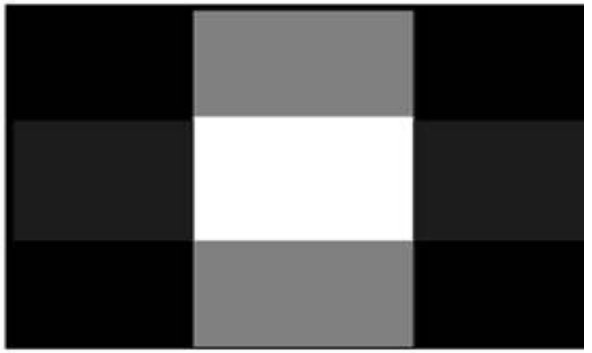

Crosstalk

Press damage

Un-repairable Cases

In this case please exchange the module.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Appendix : Exchange the Module (2)

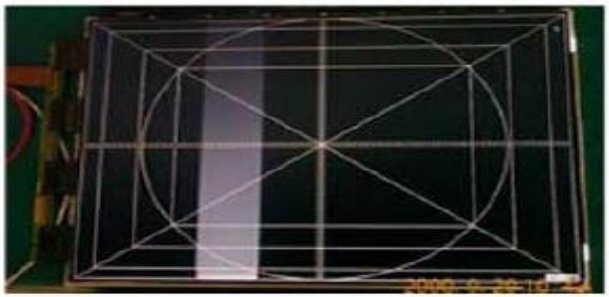

Vertical Block
Source TAB IC Defect

Vertical Line
Source TAB IC Defect

Vertical Block
Source TAB IC Defect

Horizontal Block
Gate TAB IC Defect

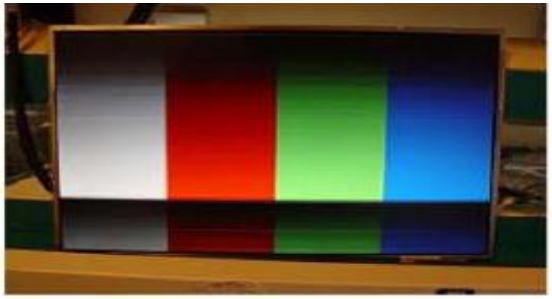

Horizontal Block
Gate TAB IC Defect

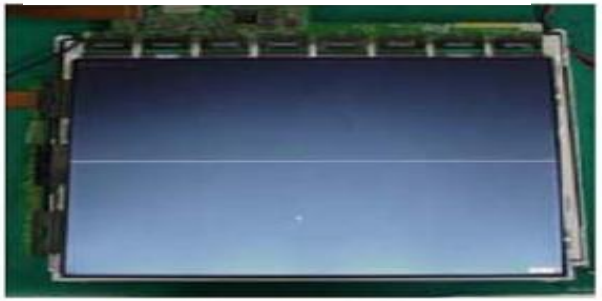

Horizontal line
Gate TAB IC Defect

Horizontal Block
Gate TAB IC Defect

Un-repairable Cases

In this case please exchange the module.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	B. Power error _No power	Established date	2013. 01 .09	
	Content	Check front display LED	Revised date		A11

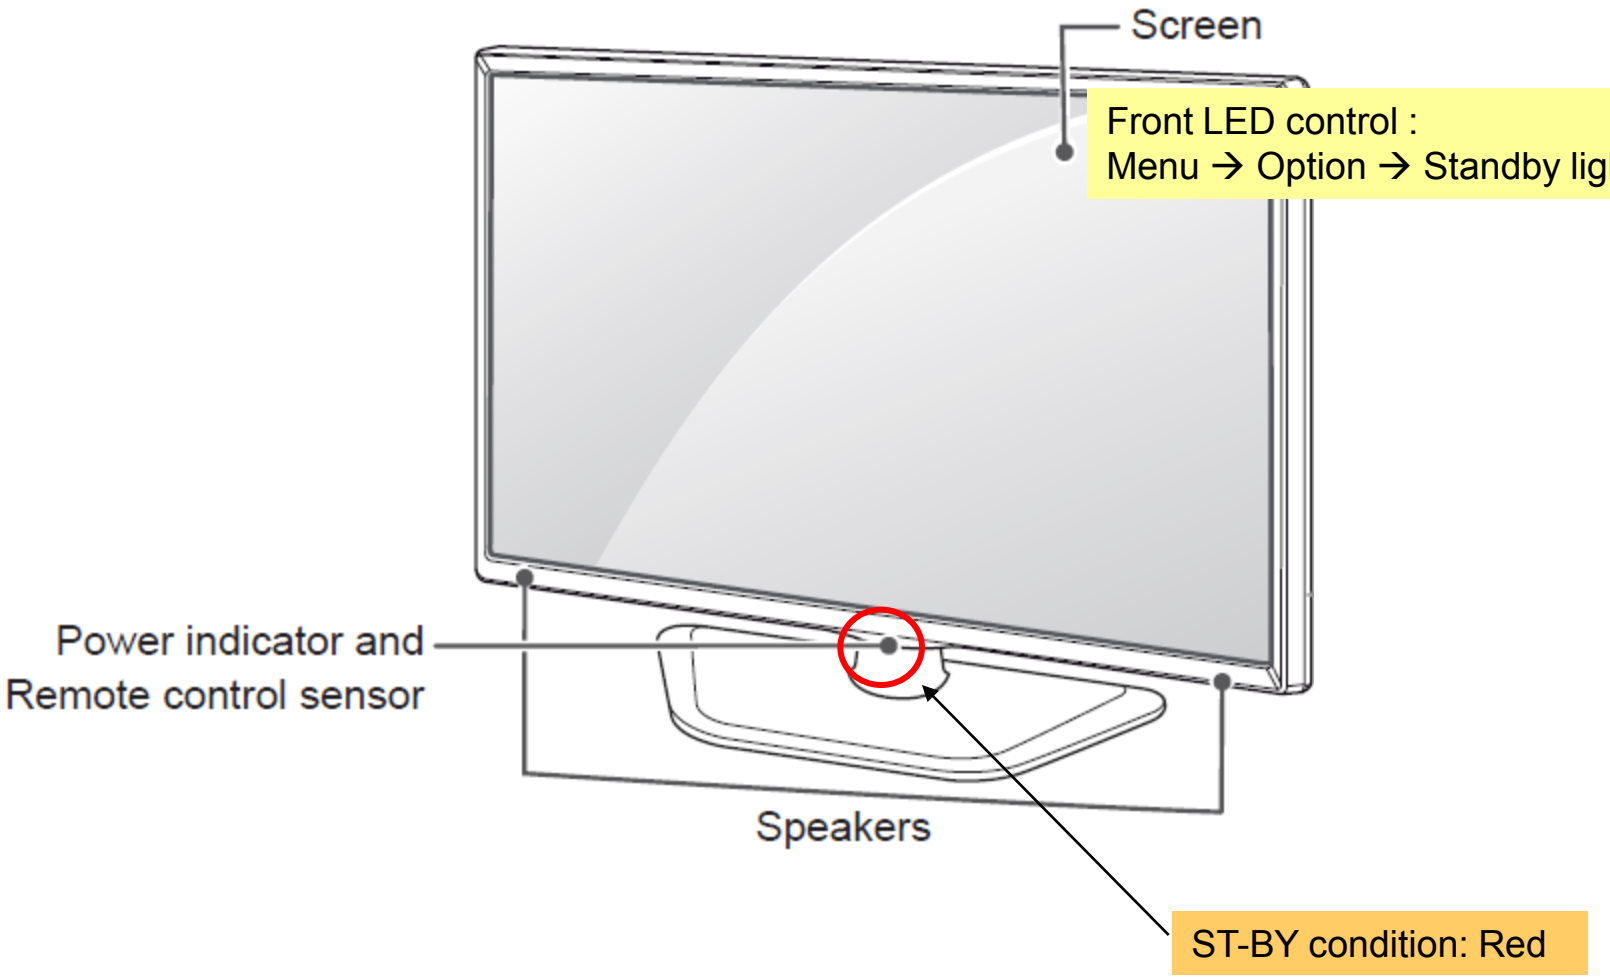

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	B. Power error _No power	Established date	2013. 01 .09	
	Content	Check power input voltage and ST-BY 3.5V	Revised date		A12

Edge LED

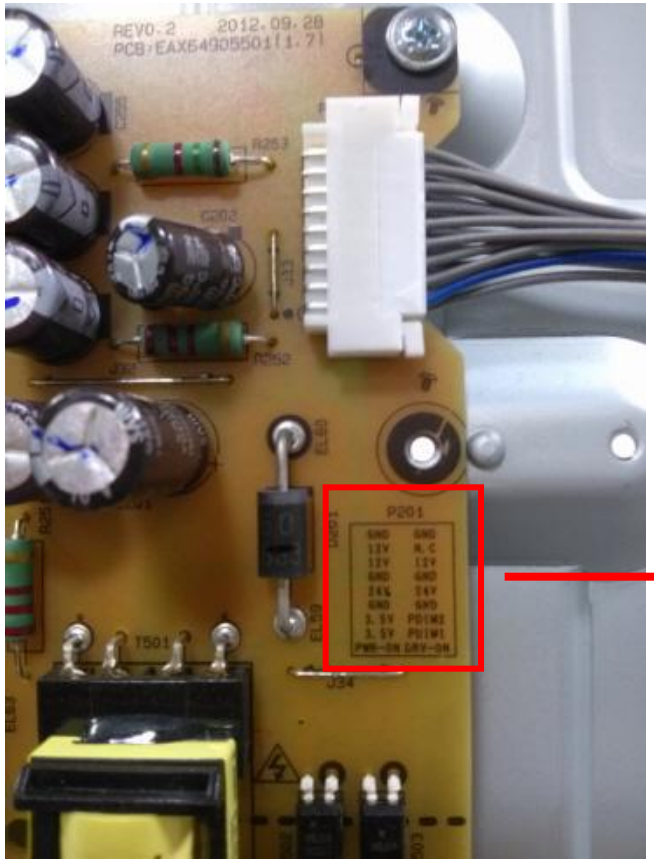

Check the DC 24V, 12V, 3.5V.

18 Pin (Power Board ↔ Main Board) – Common			
1	Power on	2	DRV ON
3	3.5V	4	PDIM#1
5	3.5V	6	PDIM#2
7	GND	8	GND
9	24V	10	24V
11	GND	12	GND
13	12V	14	12V
15	12V	16	N.C
17	GND	18	GND

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LCD TV	Error symptom	B. Power error _No power	Established date	2013. 01 .09	
	Content	Checking method when power is ON	Revised date		A13

Edge LED

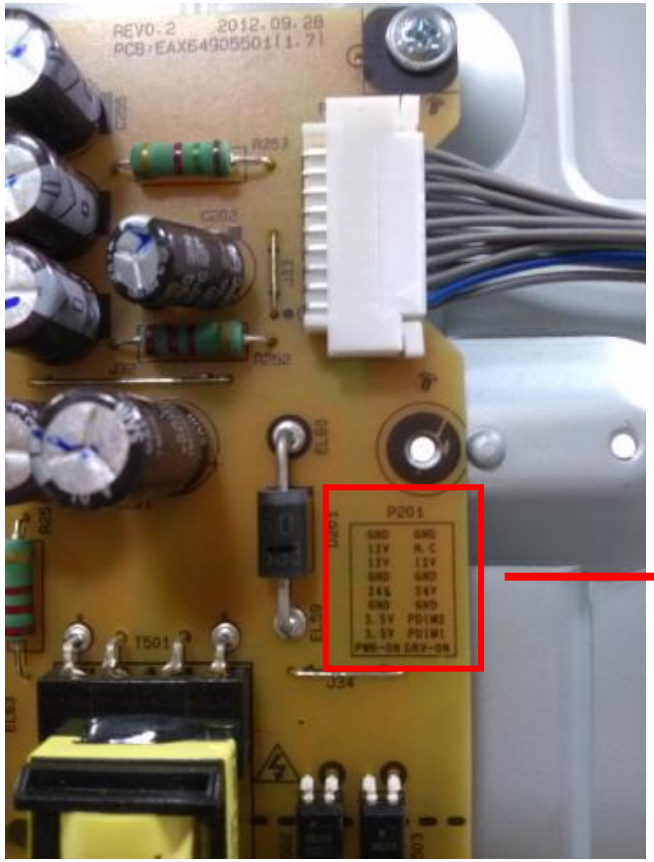

Check the DC 24V, 12V, 3.5V.

18 Pin (Power Board ↔ Main Board) – Common			
1	Power on	2	DRV ON
3	3.5V	4	PDIM#1
5	3.5V	6	PDIM#2
7	GND	8	GND
9	24V	10	24V
11	GND	12	GND
13	12V	14	12V
15	12V	16	N.C
17	GND	18	GND

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	B. Power error _Off when on, off whiling viewing	Established date	2013. 01 .09	
	Content	POWER OFF MODE checking method	Revised date		A14

<ALL MODELS>

Entry method

1. Press the IN-START button of the remote controller for adjustment

2. Check the entry into adjustment item 3

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	C. Audio error_No audio/Normal video	Established date	2013. 01 .09	
	Content	Checking method in menu when there is no audio	Revised date		A15

<ALL MODELS>

AUDIO
Move
OK
• Sound Mode : Standard
• Virtual Surround : Off
• Clear Voice II : Off 3
• Auto Volume : Off
• Sound Out : TV Speaker
• DTV Audio Setting : Auto
• AV Sync. Adjust : Off
• Balance 0
• Sound Optimizer : Normal

Checking method

1. Press the MENU button on the remote controller
2. Select the AUDIO function of the Menu
3. Select Sound Out – TV Speaker

*If you set Sound-Out menu as External Speaker/LG Sound Sync, TV Speaker will not work.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	C. Audio error_No audio/Normal video	Established date	2013. 01 .09	
	Content	Voltage and speaker checking method when there is no audio	Revised date		A16

<ALL MODELS>

Check the DC 24V, 12V, 3.5V.

18 Pin (Power Board ↔ Main Board) – 공통			
1	Power on	2	DRV ON
3	3.5V	4	PDIM#1
5	3.5V	6	PDIM#2
7	GND	8	GND
9	24V	10	24V
11	GND	12	GND
13	12V	14	12V
15	12V	16	N.C
17	GND	18	GND

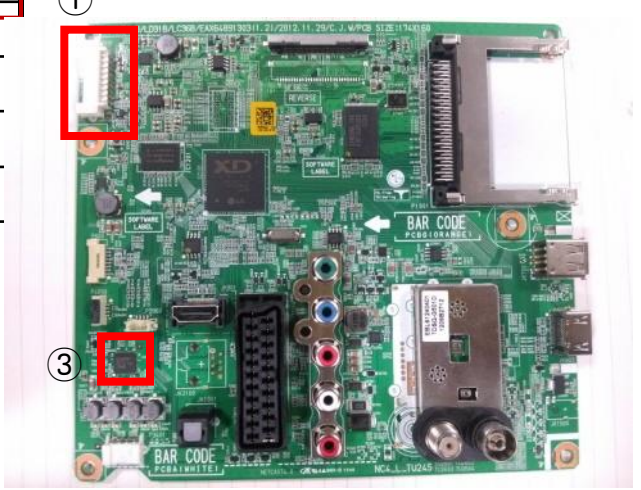

Checking order when there is no audio

① Check the contact condition of or 24V connector of Main Board

② Measure the 24V input voltage supplied from Power Board
(If there is no input voltage, remove and check the connector)

③ Connect the tester RX1 to the speaker terminal and if you hear the Chik Chik sound when you touch the GND and output terminal, the speaker is normal.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only

Standard Repair Process Detail Technical Manual

LCD TV	Error symptom	D. Function error_ No response in remote controller, key error	Established date	2013. 01 .09	
	Content	Remote controller operation checking method	Revised date		A17

<ALL MODELS>

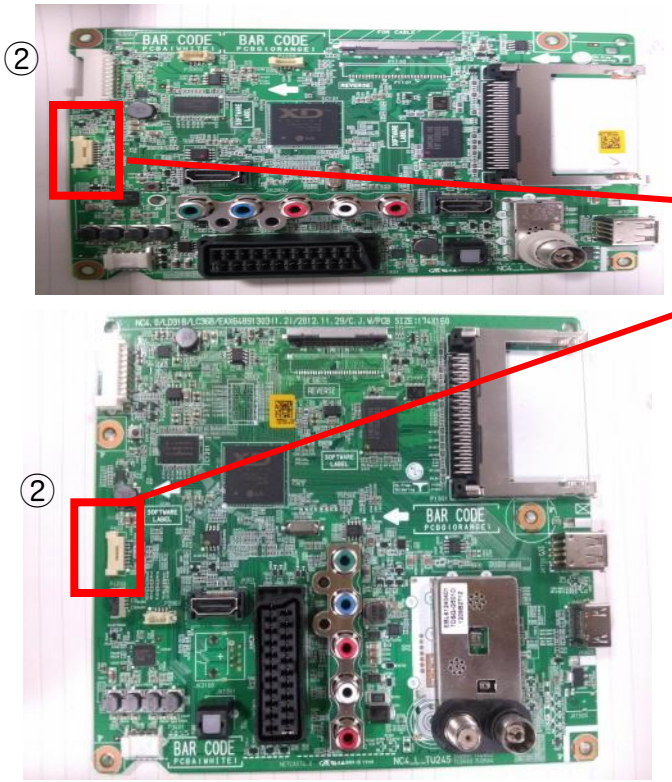

P600	
1	GND
2	KEY1
3	KEY2
4	3.5V_ST
5	GND
6	LED_R/BUZZ
7	IR
8	GND
9	GND

③

④

Checking order

1, 2. Check IR cable condition between IR & Main board.
3. Check the st-by 3.5V on the terminal 4.
4. When checking the Pre-Amp when the power is in ON condition, it is normal when the Analog Tester needle moves slowly, and defective when it does not move at all.

Copyright © 2013 LG Electronics. Inc. All rights reserved.
Only for training and service purposes

LGE Internal Use Only